



Micromega Corporation

uM-FPU64


64-bit Floating Point Coprocessor

Instruction Set

Introduction

The uM-FPU64 floating point coprocessor provides extensive support for 32-bit IEEE 754 compatible floating point and integer operations, 64-bit IEEE 754 compatible floating point and integer operations, and local peripheral device support.

A typical calculation involves sending instructions and data from the microcontroller to the uM-FPU, performing the calculation, and transferring the result back to the microcontroller.

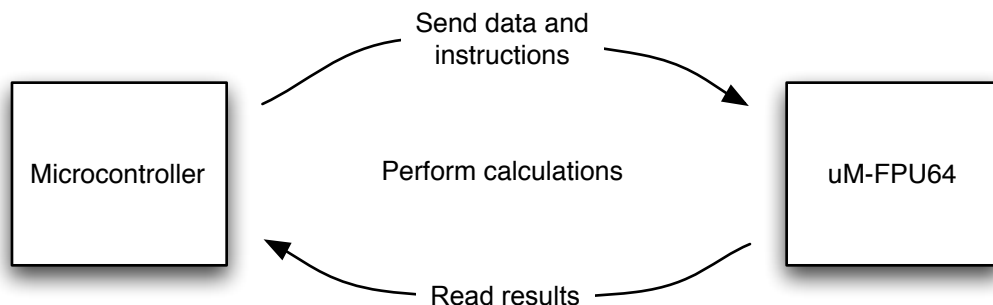


Instructions and data are sent to the uM-FPU using either a SPI or I²C interface. The uM-FPU64 chip has a 256 byte instruction buffer which allows for multiple instructions to be sent. This improves the transfer times and allows the microcontroller to perform other tasks while the uM-FPU is performing a series of calculations. Prior to issuing any instruction that reads data from the uM-FPU, the Busy/Ready status must be checked to ensure that all instructions have been executed. If more than 256 bytes are required to specify a sequence of operations, the Busy/Ready status must be checked at least every 256 bytes to ensure that the instruction buffer does not overflow. See the datasheet for more detail regarding the SPI or I²C interfaces.

Instructions consist of a single opcode byte, optionally followed by additional data bytes. A detailed description of each instruction is provided later in this document, and a summary table is provided in Appendix A.

For instruction timing, see Appendix B of the uM-FPU64 Datasheet.

uM-FPU Registers

The uM-FPU64 has 256 general purpose registers, and 16 temporary registers. They can be used for storing floating point or integer values. The general purpose registers are numbered 0 to 255, and can be directly accessed by the instruction set. Registers 0 to 127 are 32-bit registers, and registers 128 to 255 are 64-bit registers. The 16 temporary registers are used by the **LEFT** and **RIGHT** instructions to store temporary results. They can be accessed through register A, but can't be accessed directly by the instruction set.

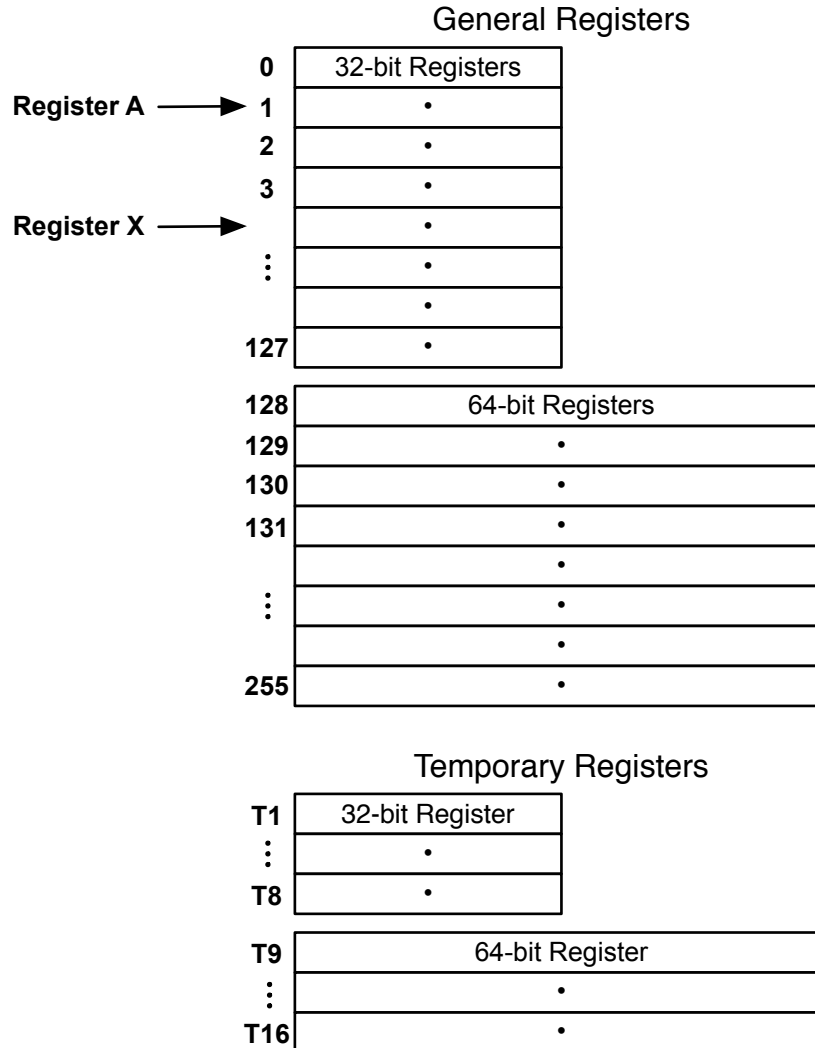

Register A

All mathematical operations on the uM-FPU64 use a working register called register A. The value in register A is used as an operand for the mathematical operation, and the results of the operation are stored back to register A. Any general purpose registers can be selected as register A, using the **SELECTA** instruction. For example,

SELECTA, 5 *register 5 is selected as register A*

Register A also determines whether an operation is a 32-bit operation or a 64-bit operation. If register A is selected as register 0 to 127, the operation is 32-bit. If register A is selected as 128 to 255, the operation is 64-bit.

Arithmetic instructions that only involve one register implicitly refer to register A. For example,

FNEG *negate the value in register A*

Arithmetic instructions that use two registers will specify the second register as part of the instruction. For example,

FADD, 4	<i>add the value of register 4 to register A</i>
----------------	--

Register X

Register X is used to reference a series of sequential registers. The register X selection is automatically incremented to the next register in sequence by all instructions that use register X. Any register can be selected as register X using the **SELECTX** instruction. For example,

SELECTX, 16	<i>select register 16 as register X</i>
CLR X	<i>clear register 16 (and increment register X)</i>
CLR X	<i>clear register 17 (and increment register X)</i>
CLR X	<i>clear register 18 (and increment register X)</i>

Another example would be to use the **FWRITEX** and **READX** instructions to store and retrieve blocks of data.

Register 0 and Register 128

Register 0 and register 128 are implicitly used by many instructions. Register 0 is used for 32-bit operations, and register 128 is used for 64-bit operations. They are used by many instructions to pass values or to return values.

Register 0 and register 128 can be used as general purpose registers, but since many instructions use these registers, they are normally only used to store temporary values. For example,

LOADPI	<i>load the value of pi to register 0 or 128</i>
FSET0	<i>store the value to register A</i>

Register Abbreviations

In this document the following abbreviations are used to refer to registers:

reg[0]	register 0 (32-bit)
reg[128]	register 128 (64-bit)
reg[0 128]	register 0 (32-bit) or register 128 (64-bit)
reg[A]	register A
reg[X]	register X
reg[register]	any general purpose registers
reg[register1]	any general purpose registers
reg[register2]	any general purpose registers

Floating Point Instructions

The following descriptions provide a quick summary of the floating point instructions. Detailed descriptions are provided in the next section.

Basic Floating Point Instructions

Each of the basic floating point arithmetic instructions are provided in three different forms as shown in the table below. The **FADD** instruction is used as an example to describe the three different forms of these instructions. The **FADD, register** instruction allows any general purpose register to be added to register A. The register to be added to register A is specified by the byte following the opcode. The **FADD0** instruction adds register 0 to register A and only requires the opcode. The **FADDI** instruction adds a small integer value the register A. The signed byte (-128 to 127) following the opcode is converted to floating point and added to register A. The **FADD, register** instruction is most general, but the **FADD0** and **FADDI, signedByte** instructions are more efficient for many common operations.

Register	Register 0	Immediate value	Description
FSET, <i>register</i>	FSET0	FSETI, <i>signedByte</i>	Set
FADD, <i>register</i>	FADD0	FADDI, <i>signedByte</i>	Add
FSUB, <i>register</i>	FSUB0	FSUBI, <i>signedByte</i>	Subtract
FSUBR, <i>register</i>	FSUBR0	FSUBRI, <i>signedByte</i>	Subtract Reverse
FMUL, <i>register</i>	FMUL0	FMULI, <i>signedByte</i>	Multiply
FDIV, <i>register</i>	FDIV0	FDIVI, <i>signedByte</i>	Divide
FDIVR, <i>register</i>	FDIVR0	FDIVRI, <i>signedByte</i>	Divide Reverse
FPOW, <i>register</i>	FPOW0	FPOWI, <i>signedByte</i>	Power
FCMP, <i>register</i>	FCMP0	FCMPI, <i>signedByte</i>	Compare

Loading Floating Point Values

The following instructions are used to load data from the microprocessor and store it on the uM-FPU64 as 32-bit floating point values. Register A determines whether 32-bit or 64-bit values are stored.

<i>FWRITE, register, float32Value</i>	Write 32-bit floating point value to <i>register</i>
<i>FWRITE0, float32Value</i>	Write 32-bit floating point value to reg[0] or reg[128]
<i>FWRITEA, float32Value</i>	Write 32-bit floating point value to reg[A]
<i>FWRITEX, float32Value</i>	Write 32-bit floating point value to reg[X]
<i>DWRITE, register, float64Value</i>	Write 64-bit floating point value to <i>register</i>
<i>ATOF, string</i>	Convert ASCII string to floating point value and store in reg[0] or reg[128]
<i>LOADBYTE, signedByte</i>	Convert signed byte to floating point and store in reg[0] or reg[128]
<i>LOADUBYTE, unsignedByte</i>	Convert unsigned byte to floating point and store in reg[0] or reg[128]
<i>LOADWORD, signedWord</i>	Convert signed 16-bit value to floating point and store in reg[0] or reg[128]
<i>LOADUWORD, unsignedWord</i>	Convert unsigned 16-bit value to floating point and store in reg[0] or reg[128]
<i>LOADE</i>	Load the value of e (2.7182818) to reg[0] or reg[128]
<i>LOADPI</i>	Load the value of pi (3.1415927) to reg[0] or reg[128]
<i>FCOPYI, unsignedByte, register</i>	Convert signed 8-bit value to floating point and store in register

Reading Floating Point Values

The following instructions are used to read floating point values from the uM-FPU.

<i>FREAD, register [float32Value]</i>	Return 32-bit floating point value from <i>register</i>
---------------------------------------	---

FREAD0 [<i>float32Value</i>]	Return 32-bit floating point value from reg[0] or reg[128]
FREADA [<i>float32Value</i>]	Return 32-bit floating point value from reg[A]
FREADX [<i>float32Value</i>]	Return 32-bit floating point value from reg[X]
DREAD, <i>register</i> [<i>float64Value</i>]	Return 64-bit floating point value from <i>register</i>
FTOA, <i>format</i>	Convert floating point to ASCII string (READSTR used to read string)

Additional Floating Point Instructions

FNEG	SIN	FSTATUS, <i>register</i>	FLOOR
FABS	COS	FSTATUSA	CEIL
FINV	TAN	FCMP2, <i>register1</i> , <i>register2</i>	ROUND
SQRT	ASIN	FMAC, <i>register1</i> , <i>register2</i>	FRAC
ROOT, <i>register</i>	ACOS	FMSC, <i>register1</i> , <i>register2</i>	
LOG	ATAN	FCNV, <i>conversion</i>	
LOG10	ATAN2, <i>register</i>	FMIN, <i>register</i>	
EXP	DEGREES	FMAX, <i>register</i>	
EXP10	RADIANS	FMOD	

Matrix Instructions

SELECTMA, <i>register</i> , <i>rows</i> , <i>columns</i>	Select matrix A starting at <i>register</i> of size <i>rows</i> x <i>columns</i>
SELECTMB, <i>register</i> , <i>rows</i> , <i>columns</i>	Select matrix B starting at <i>register</i> of size <i>rows</i> x <i>columns</i>
SELECTMC, <i>register</i> , <i>rows</i> , <i>columns</i>	Select matrix C starting at <i>register</i> of size <i>rows</i> x <i>columns</i>
LOADMA, <i>row</i> , <i>column</i>	Load reg[0] with value from matrix A <i>row</i> , <i>column</i>
LOADMB, <i>row</i> , <i>column</i>	Load reg[0] with value from matrix B <i>row</i> , <i>column</i>
LOADMC, <i>row</i> , <i>column</i>	Load reg[0] with value from matrix C <i>row</i> , <i>column</i>
SAVEMA, <i>row</i> , <i>column</i>	Store reg[A] value to matrix A <i>row</i> , <i>column</i>
SAVEMB, <i>row</i> , <i>column</i>	Store reg[A] value to matrix A <i>row</i> , <i>column</i>
SAVEMC, <i>row</i> , <i>column</i>	Store reg[A] value to matrix A <i>row</i> , <i>column</i>
MOP, <i>action</i>	Perform matrix operation

Fast Fourier Transform Instruction

FFT, <i>action</i>	Perform Fast Fourier Transform operation
--------------------	--

Conversion Instructions

FLOAT	Convert reg[A] from long integer to floating point
FIX	Convert reg[A] from floating point to long integer
FIXR	Convert reg[A] from floating point to long integer (with rounding)
FSPLIT	Set reg[A] = integer value, reg[0] or reg[128] = fractional value

Long Integer Instructions

The following descriptions provide a quick summary of the long integer instructions. Detailed descriptions are provided in the next section.

Basic Long Integer Instructions

Each of the basic long integer arithmetic instructions are provided in three different forms as shown in the table below. The **LADD** instruction will be used as an example to describe the three different forms of the instructions. The **LADD, register** instruction allows any general purpose register to be added to register A. The register to be added to register A is specified by the byte following the opcode. The **LADD0** instruction adds register 0 to register A and only requires the opcode. The **LADDI** instruction adds a small integer value the register A. The signed byte (-128 to 127) following the opcode is converted to a long integer and added to register A. The **LADD, register** instruction is most general, but the **LADD0** and **LADDI, signedByte** instructions are more efficient for many common operations.

Register	Register 0	Immediate value	Description
LSET, <i>register</i>	LSET0	LSETI, signedByte	Set
LADD, <i>register</i>	LADD0	LADDI, signedByte	Add
LSUB, <i>register</i>	LSUB0	LSUBI, signedByte	Subtract
LMUL, <i>register</i>	LMUL0	LMULI, signedByte	Multiply
LDIV, <i>register</i>	LDIV0	LDIVI, signedByte	Divide
LCMP, <i>register</i>	LCMP0	LCMPI, signedByte	Compare
LUDIV, <i>register</i>	LUDIV0	LUDIVI, unsignedByte	Unsigned Divide
LUCMP, <i>register</i>	LUCMP0	LUCMPI, unsignedByte	Unsigned Compare
LTST, <i>register</i>	LTST0	LTSTI, unsignedByte	Test Bits

Loading Long Integer Values

The following instructions are used to load data from the microprocessor and store it on the uM-FPU as 32-bit long integer values.

LWRITE, <i>register, int32Value</i>	Write 32-bit long integer value to <i>register</i>
LWRITE0, <i>int32Value</i>	Write 32-bit long integer value to reg[0] or reg[128]
LWRITEA, <i>int32Value</i>	Write 32-bit long integer value to reg[A]
LWRITEX, <i>int32Value</i>	Write 32-bit long integer value to reg[X]
DWRITE, <i>register, intValue</i>	Write 64-bit floating point value to <i>register</i>
ATOL, <i>string</i>	Convert ASCII string to long integer value and store in reg[0] or reg[128]
LONGBYTE, <i>signedByte</i>	Convert signed byte to long integer and store in reg[0] or reg[128]
LONGUBYTE, <i>unsignedByte</i>	Convert unsigned byte to long integer and store in reg[0] or reg[128]
LONGWORD, <i>signedWord</i>	Convert signed 16-bit value to long integer and store in reg[0] or reg[128]
LONGUWORD, <i>unsignedByte</i>	Convert unsigned 16-bit value to long integer and store in reg[0] or reg[128]
LCOPYI, <i>unsignedByte, register</i>	Convert signed 8-bit value to long integer and store in register

Reading Long Integer Values

The following instructions are used to read long integer values from the uM-FPU.

<code>LREAD, register [int32Value]</code>	Returns 32-bit long integer value from <i>register</i>
<code>LREAD0 [int32Value]</code>	Returns 32-bit long integer value from reg[0] or reg[128]
<code>LREADA [int32Value]</code>	Returns 32-bit long integer value from reg[A]
<code>LREADX [int32Value]</code>	Returns 32-bit long integer value from reg[X]
<code>DREAD, register [int64Value]</code>	Return 64-bit floating point value from <i>register</i>
<code>LREADBYTE [byteValue]</code>	Returns 8-bit byte from reg[A]
<code>LREADWORD [wordValue]</code>	Returns 16-bit value from reg[A]
<code>LTOA, format</code>	Convert long integer to ASCII string (use READSTR to read string)

Additional Long Integer Instructions

<code>LSTATUS, register</code>	<code>LCMP2, register1, register2</code>	<code>LAND, register</code>
<code>LSTATUSA</code>	<code>LUCMP2, register1, register2</code>	<code>LANDI, unsignedByte</code>
<code>LNEG</code>	<code>LMIN, register</code>	<code>LOR, register</code>
<code>LABS</code>	<code>LMAX, register</code>	<code>LORI, unsignedByte</code>
<code>LNOT</code>	<code>LSHIFT, register</code>	<code>LXOR, register</code>
<code>LINC, register</code>	<code>LSHIFTI, signedByte</code>	
<code>LDEC, register</code>	<code>LBIT, unsignedByte, register</code>	

General Purpose Instructions

SELECTA, <i>register</i>	ALOADX	XSAVE, <i>register</i>	SETREAD
SELECTX, <i>register</i>	COPY, <i>register1, register2</i>	XSAVEA	SYNC
CLR, <i>register</i>	COPY0, <i>register</i>	INDA	VERSION
CLRA	COPYA, <i>register</i>	INDX	IEEEMODE
CLR _X	COPYX, <i>register</i>	LEFT	PICMODE
CLR0	SWAP, <i>register1, register2</i>	RIGHT	SETARGS
LOAD, <i>register</i>	SWAPA, <i>register</i>	READVAR, <i>item</i>	CHECKSUM
LOADA	SETSTATUS, <i>unsignedbyte</i>	RESET	
LOADX	READSTATUS	NOP	

Special Purpose Instructions

Indirect Pointer Instructions

SETIND, <i>type, {register address}</i>	Set indirect pointer
ADDIND, <i>register, unsignedByte</i>	Add to indirect pointer
COPYIND, <i>fromPtr, toPtr, countReg</i>	Copy using indirect pointers
LOADIND, <i>register</i>	Load reg[0 128] using indirect pointer
SAVEIND, <i>register</i>	Save reg[A] using indirect pointer
RDIND, <i>type, count [dataValue1...dataValueN]</i>	Read multiple data values from indirect pointer
WRIND, <i>type, count, dataValue1...dataValueN</i>	Write multiple data values to indirect pointer

Stored Function Instructions

FCALL, <i>function</i>	Call user-defined function stored in Flash
RET	Return from user-defined function
RET, <i>conditionCode</i>	Conditional return from user-defined function
BRA, <i>relativeOffset</i>	Unconditional branch inside user-defined function
BRA, <i>conditionCode, relativeOffset</i>	Conditional branch inside user-defined function
JMP, <i>absoluteOffset</i>	Unconditional jump inside user-defined function
JMP, <i>conditionCode, absoluteOffset</i>	Conditional jump inside user-defined function
GOTO, <i>register</i>	Computed goto
TABLE, <i>tableSize, tableItem1...tableItemN</i>	Table lookup
FTABLE, <i>conditionCode, tableSize, tableItem1...tableItemN</i>	Floating point reverse table lookup
LTABLE, <i>conditionCode, tableSize, tableItem1...tableItemN</i>	Long integer reverse table lookup
POLY, <i>count, floatValue1...floatValueN</i>	N th order polynomial

Background Event Processing

EVENT, <i>action{, function}</i>	Background event processing
----------------------------------	-----------------------------

Analog to Digital Conversion Instructions

ADCMODE, <i>mode</i>	Select A/D trigger mode
ADCTRIG	Manual A/D trigger
ADCSCALE, <i>channel</i>	Set A/D floating point scale factor
ADCLONG, <i>channel</i>	Get raw long integer A/D reading
ADCLOAD, <i>channel</i>	Get scaled floating point A/D reading

ADCWAIT Wait for A/D conversion to complete

Digital I/O Instructions

DIGIO, *action{,mode}* Digital I/O
DEVIO, *device,action{,...}* Device I/O

Timer Instructions

TIMESET Set timers
TIMELONG Get time in seconds
TICKLONG Get time in milliseconds
RTC, *action* Real-time Clock
DELAY, *period* Delay (in milliseconds)

External Input Instructions

EXTSET Set external input counter
EXTLONG Get external input counter
EXTWAIT Wait for next external input pulse

String Manipulation Instructions

STRSET, *string* Copy string to string buffer
STRSEL, *start,length* Set string selection point
STRINS, *string* Insert string at selection point
STRBYTE Insert byte at selection point
STRINC Increment string selection point
STRDEC Decrement string selection point
STRCMP, *string* Compare string with string selection
STRFIND, *string* Find string
STRFCHR, *string* Set field delimiters
STRFIELD, *field* Find field
STRTOF Convert string selection to floating point
STRTOL Convert string selection to long integer
FTOA, *format* Convert floating point value to string
LTOA, *format* Convert long integer value to string
READSTR Read entire string buffer
READSEL Read string selection

Serial Input/Output


SEROUT, *action{,...}* Serial Output
SERIN, *action* Serial Input

Debugging Instructions

BREAK Debug breakpoint
TRACEOFF Turn debug trace off
TRACEON Turn debug trace on
TRACESTR, *string* Display string in debug trace
TRACEREG, *register* Display contents of register in debug trace

Test Conditions

Several of the stored function instructions use a test condition byte. The test condition is an 8-bit byte that defines the expected state of the internal status byte. The upper nibble is used as a mask to determine which status bits to check. A status bit will only be checked if the corresponding mask bit is set to 1. The lower nibble specifies the expected value for each of the corresponding status bits in the internal status byte. A test condition is considered to be true if all of the masked test bits have the same value as the corresponding bits in the internal status byte. There are two special cases: 0x60 evaluates as greater than or equal, and 0x62 evaluates as less than or equal.

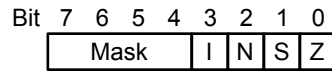

Bits 7:4 Mask bits

- Bit 7 Mask bit for Infinity
- Bit 6 Mask bit for NaN
- Bit 5 Mask bit for Sign
- Bit 4 Mask bit for Zero

Bits 3:0 Test bits

- Bit 3 Expected state of Infinity status bit
- Bit 2 Expected state of NaN status bit
- Bit 1 Expected state of Sign status bit
- Bit 0 Expected state of Zero status bit

The uM-FPU V3 IDE assembler has built-in symbols for the most common test conditions. They are as follows:

<i>Assembler Symbol</i>	<i>Test Condition</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal
PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite
PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)
TRUE	0x00	True
FALSE	0xFF	False

uM-FPU64 Instruction Reference

ACOS Arc Cosine

Syntax: **ACOS**

Description: Calculates the arc cosine of an angle in the range 0.0 through pi. The initial value is contained in register A, and the result is stored in register A.

$\text{reg}[A] = \text{acos}(\text{reg}[A])$

Opcode: **4B**

Special Cases: • if reg[A] is NaN or its absolute value is greater than 1, then the result is NaN

See Also: ASIN, ATAN, ATAN2, COS, SIN, TAN, DEGREES, RADIANS

ADCLOAD Load scaled analog value (modified in uM-FPU64)

Syntax: **ADCLOAD, channel**

Description: Loads register 0 with the scaled floating point value of the analog reading from the specified channel.

if reg[A] is 32-bit,


$\text{reg}[0] = (\text{float}(\text{ADCvalue}[\text{channel}] * \text{ADCscale}[\text{channel}])) + \text{ADCoffset}[\text{channel}]$

if reg[A] is 64-bit,

$\text{reg}[128] = (\text{float}(\text{ADCvalue}[\text{channel}] * \text{ADCscale}[\text{channel}])) + \text{ADCoffset}[\text{channel}]$

Opcode: **D5**

Byte 2: **channel**



Bits 3:0

Channel

Value

Description

0 to 5

28-pin chip (AN0 to AN5)

0 to 8

44-pin chip (AN0 to AN8)

Waits until the analog-to-digital conversion is complete, then loads register 0 with the reading from the specified analog channel. The 12-bit value is converted to floating point, multiplied by the scale value for the selected channel, and added to the offset for the selected channel. The value is stored in register 0.

Note: The instruction buffer should be empty when this instruction is executed. If there are other instructions in the instruction buffer, or another instruction is sent before the ADCLOAD instruction has been completed, the wait will terminate and the previous value for the selected channel will be used.

See Also: ADCLONG, ADCMODE, ADCSCALE, ADCTRIG, ADCWAIT

ADCLONG Load raw analog value (modified in uM-FPU64)

Syntax: **ADCLONG, channel**


Description: Loads register 0 with the long integer value of the raw analog reading from the specified channel, or a pointer to the memory buffer containing the analog readings (if the PTR bit is set).

if reg[A] is 32-bit, reg[0] = ADCvalue[channel], status = longStatus(reg[0])

if reg[A] is 64-bit, reg[128] = ADCvalue[channel], status = longStatus(reg[128])

Opcode: **D4**

Byte 2: **channel**



Bit 5	Size		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	-	0x00	Stores the analog reading in register 0.
	SIZE	0x20	Stores the size of the memory buffer in register 0. Used in block mode.
Bit 4	Pointer		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	-	0x00	Stores the analog reading in register 0.
	PTR	0x10	Stores a pointer to the memory buffer register 0. Used in block mode.
Bits 3:0	Channel		
	<i>Value</i>	<i>Description</i>	
	0 to 5	28-pin chip (AN0 to AN5)	
	0 to 8	44-pin chip (AN0 to AN8)	

Waits until the analog-to-digital conversion is complete, then loads register 0 with the selected value. If bit 4 is zero, the 12-bit value reading from the specified analog channel is converted to a long integer and stored in register 0. If bit 4 is one, a pointer to the memory buffer containing the analog reading is stored in register 0. The memory buffer stores the 12-bit analog reading in sequential 16-bit words. The pointer option is normally used only when the ADC is configured for block mode sampling.

Note: The instruction buffer should be empty when this instruction is executed. If there are other instructions in the instruction buffer, or another instruction is sent before the ADCLONG instruction has been completed, the wait will terminate and the previous value for the selected channel will be returned.

See Also: ADCLOAD, ADCMODE, ADCSCALE, ADCTRIG, ADCWAIT

ADCMODE Set ADC trigger mode**(modified in uM-FPU64)***Syntax:* **ADCMODE, mode***Description:* Set the trigger mode of the A/D converter. The *mode* is interpreted as follows:*Opcode:* **D1***Byte 2:* **mode**

Bit	7	6	5	4	3	2	1	0
	Action				Options			

Bits 7:4	Action		
	IDE Symbol	IDE Value	Description
	DISABLE	0x00	Disable analog conversions.
	MANUAL	0x10	Manual trigger, single sample with repeat.
	EXTIN	0x20	External trigger single sample with repeat.
	TIMER	0x30	Timer trigger, single sample with repeat.
	EXTIN_BLK	0x40	External trigger, block mode with continuous sampling.
	TIMER_BLK	0x50	Timer trigger, block mode with continuous sampling.
	CHANNELS	0x60	Specifies the maximum number of channels.
	VREF	0x70	Selects voltage reference.

Bits 3:0 **Options**
See descriptions below.

DISABLE action

Bit	7	6	5	4	3	2	1	0
	Mode				-			

MANUAL, EXTERNAL, TIMER actions

Bit	7	6	5	4	3	2	1	0
	Mode				Repeat			

Bits 3:0 **Repeat Count**

Value	Description
0 to 15	For modes 1 to 3, the number of samples taken for each trigger is equal to the repeat count plus one. e.g. a value of 0 will result in one sample per trigger. a value of 15 will result in 16 samples per trigger.

EXTERNAL_BLK, TIMER_BLK actions

Bit	7	6	5	4	3	2	1	0
	Mode				-			

CHANNELS action

Bit	7	6	5	4	3	2	1	0
	Mode				Channels			

Bits 3:0 **Channels**

<i>Value</i>	<i>Description</i>
0 to 5	28-pin chip (AN0 to AN5)
0 to 8	44-pin chip (AN0 to AN8)

Specifies the total number of analog channels to convert. The value specified is the maximum channel number. e.g. A value of 2 will convert AN0, AN1, AN2.

VREF action

Bit 7	6	5	4	3	2	1	0
Mode						V-	V+

Bit 1	VREF-		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	AVSS	0x00	AVSS is used as VREF-
	AN1	0x02	AN1 is used as VREF-

Bit 0	VREF+		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	AVDD	0x00	AVDD is used as VREF+
	AN0	0x01	AN0 is used as VREF+

<i>Examples:</i>	ADCMODE, 0x10	Set manual trigger, single sample with one repeat per trigger.
	ADCMODE, 0x24	Set external trigger, single sample with five samples per trigger.
	LOADWORD, 1000	Set timer trigger every 1000 usec.
	ADCMODE, 0x30	Single sample with one repeat per trigger.
	ADCMODE, 0	Disable analog conversions.

See Also: ADCLOAD, ADCLONG, ADCSCALE, ADCTRIG, ADCWAIT

ADCSCALE Set scale multiplier for ADC*(modified in uM-FPU64)*

Syntax: **ADCSCALE, channel**

Description: Set the scale value or offset value for the specified *channel* to the floating point value in register 0.

if reg[A] is 32-bit,

ADCscale[channel] = reg[0] or ADCOffset[channel] = reg[0]

if reg[A] is 64-bit,

ADCscale[channel] = reg[128] or ADCOffset[channel] = reg[128]

Opcode: **D3**

Byte 2: **channel**

Bit 7	6	5	4	3	2	1	0
-		O		Channel			

Bit 4	Scale/Offset		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>

–	0x00	Sets scale value.
OFFSET	0x10	Sets offset value.

Bits 3:0	Channel	
	<i>Value</i>	<i>Description</i>
	0 to 5	28-pin chip (AN0 to AN5)
	0 to 8	44-pin chip (AN0 to AN8)

Sets the scale value or offset value for *channel* to the floating point value in register 0. At device reset, the scale value for all channels is set to 1.0, and the offset value for all channels is set to zero.

See Also: ADCLOAD, ADCLONG, ADCMODE, ADCTRIG, ADCWAIT

ADCTRIG Trigger an A/D conversion

Syntax: **ADCTRIG**

Description: Trigger an analog conversion. If a conversion is already in progress the trigger is ignored. This is normally used only when the ADCMODE is set for manual trigger.

Opcode: **D2**

See Also: ADCLOAD, ADCLONG, ADCMODE, ADCSCALE, ADCWAIT

ADCWAIT Wait for next A/D sample

Syntax: **ADCWAIT**

Description: Wait until the next analog conversion is complete and the analog values are ready.

Opcode: **D6**

When ADCMODE is set for manual trigger, this instruction can be used to wait until the conversion started by the last ADCTRIG is done. ADCLONG and ADCLOAD automatically wait until the next sample is ready. If the ADCMODE is set for timer trigger or external input trigger, this instruction will wait until the next full conversion is completed.

Note: The instruction buffer should be empty when this instruction is executed. If there are other instructions in the instruction buffer, or another instruction is sent before the ADCWAIT instruction has been completed, the wait will terminate.

See Also: ADCLOAD, ADCLONG, ADCMODE, ADCSCALE, ADCTRIG

ADDIND Add to Indirect Pointer (new in uM-FPU64)

Syntax: **ADDIND, register, unsignedByte**

Description: The long integer value in *register* is multiplied by the *unsignedByte* and the result is added to bits

23:0 of register A (pointer address). Bits 31:24 of register A are unchanged (pointer type).

$\text{reg}[A] \text{ (bits 23:0)} = (\text{reg}[A] \text{ (bits 23:0)} + (\text{reg}[\text{register}] * \text{unsignedByte}))$

Opcode: **78**

Byte 2: **register**

Register number (0 to 255).

Byte 3: **unsigned**

Unsigned byte (0 to 255).

Special Cases:

- if result is < 0, reg[A] (bits 23:0) is set to 0
- if result is >= 0xFFFFFFFF, reg[A] (bits 23:0) is set to 0xFFFFFFFF

See Also: SETIND, WRIND, RDIND, COPYIND, LOADIND, SAVEIND

ALOADX Load register A from register X

Syntax: **ALOADX**

Description: Set register A to the value of register X, and increment X to select the next register in sequence.

$\text{reg}[A] = \text{reg}[X], X = X + 1$

Opcode: **0D**

Special Cases:

- if reg[A] is 32-bit and reg[X] is 64-bit, only the lower 32-bits of reg[X] are copied
- if reg[A] is 64-bit and reg[X] is 32-bit, the upper 32-bits of reg[A] are set to zero

See Also: LOAD, LOADA, LOADX, XSAVE, XSAVEA

ASIN Arc Sine

Syntax: **ASIN**

Description: Calculates the arc sine of an angle in the range of $-\pi/2$ through $\pi/2$. The initial value is contained in register A, and the result is stored in register A.

$\text{reg}[A] = \text{asin}(\text{reg}[A])$

Opcode: **4A**

Special Cases:

- if reg[A] is NaN or its absolute value is greater than 1, then the result is NaN
- if reg[A] is 0.0, then the result is a 0.0
- if reg[A] is -0.0, then the result is -0.0

See Also: ACOS, ATAN, ATAN2, COS, SIN, TAN, DEGREES, RADIANS

ATAN Arc Tangent

Syntax: **ATAN**

Description: Calculates the arc tangent of an angle in the range of $-\pi/2$ through $\pi/2$. The initial value is contained in register A, and the result is stored in register A.

$$\text{reg}[A] = \text{atan}(\text{reg}[A])$$

Opcode: **4C**

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if reg[A] is 0.0, then the result is a 0.0
- if reg[A] is -0.0, then the result is -0.0

See Also: ACOS, ASIN, ATAN2, COS, SIN, TAN, DEGREES, RADIANS

ATAN2 Arc Tangent (with two registers)

Syntax: **ATAN2, register**

Description: Calculates the arc tangent of an angle in the range of $-\pi/2$ through $\pi/2$. The initial value is determined by dividing the value in register A by the value of the specified register, and the result is stored in register A. This instruction is used to convert rectangular coordinates (register A, reg[register]) to polar coordinates (r, theta). The value of theta is stored in register A.

$$\text{reg}[A] = \text{atan}(\text{reg}[A] / \text{reg}[\text{register}])$$

Opcode: **4D**

Byte 2: **register**
Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and register is 64-bit, the value from register is converted to a 32-bit value before being used, but the value stored in register remains unchanged
- if reg[A] is 64-bit and register is 32-bit, the value in register is converted to a 64-bit value before being used, but value stored in register remains unchanged
- if reg[A] or reg[register] is NaN, then the result is NaN
- if reg[A] is 0.0 and reg[register] > 0, then the result is 0.0
- if reg[A] > 0 and finite, and reg[register] is +inf, then the result is 0.0
- if reg[A] is -0.0 and reg[register] > 0, then the result is -0.0
- if reg[A] < 0 and finite, and reg[register] is +inf, then the result is -0.0
- if reg[A] is 0.0 and reg[register] < 0, then the result is pi
- if reg[A] > 0 and finite, and reg[register] is -inf, then the result is pi
- if reg[A] is -0.0, and reg[register] < 0, then the result is -pi
- if reg[A] < 0 and finite, and reg[register] is -inf, then the result is -pi
- if reg[A] > 0, and reg[register] is 0.0 or -0.0, then the result is pi/2
- if reg[A] is +inf, and reg[register] is finite, then the result is pi/2
- if reg[A] < 0, and reg[register] is 0.0 or -0.0, then the result is -pi/2
- if reg[A] is -inf, and reg[register] is finite, then the result is -pi/2
- if reg[A] is +inf, and reg[register] is +inf, then the result is pi/4

- if reg[A] is +inf, and reg[*register*] is -inf, then the result is $3\pi/4$
- if reg[A] is -inf, and reg[*register*] is +inf, then the result is $-\pi/4$
- if reg[A] is -inf, and reg[*register*] is -inf, then the result is $-3\pi/4$

See Also: ACOS, ASIN, ATAN, COS, SIN, TAN, DEGREES, RADIANS

ATOF Convert ASCII string to floating point

Syntax: **ATOF, *string***

Description: Converts a zero terminated ASCII *string* to a floating point value. and stores the result in register 0 or register 128.

Opcode: **1E**

Byte 2: ***string***

Zero-terminated ASCII string.

If register A is 32-bit, register 0 is loaded with the 32-bit floating point value. If register A is 64-bit, register 128 is loaded with the 64-bit floating point value. The *string* to convert is sent immediately following the opcode. The string can be in standard numeric format (e.g. 1.56, -0.5), or exponential format (e.g. 10E6). Conversion will stop at the first invalid character, but data bytes will continue to be read until a zero terminator is encountered. The *string* can contain the following characters:

- leading whitespace (space or tab)
- sign (+ or -)
- decimal digits (0 to 9)
- decimal point (.)
- decimal digits (0 to 9)
- exponential (E or e)
- sign (+ or -)
- decimal digits (0 to 9)

Examples: ATOF, "2.54" stores the value 2.54 in register 0 or 128
 ATOF, "1E3" stores the value 1000.0 in register 0 or 128

See Also: ATOL, FTOA, LTOA, STRTOF, STRTOL

ATOL Convert ASCII string to long integer

Syntax: **ATOL, *string***

Description: Converts a zero terminated ASCII *string* to a long integer value.

Opcode: **9A**

Byte 2: ***string***

Zero-terminated ASCII string.

If register A is 32-bit, register 0 is loaded with the 32-bit long integer value. If register A is 64-bit, register 128 is loaded with the 64-bit long integer value. The *string* to convert is sent immediately following the opcode. Conversion will stop at the first invalid character, but data bytes will

continue to be read until a zero terminator is encountered. The *string* can contain the following characters:

- leading whitespace (space or tab)
- sign (+ or -)
- decimal digits (0 to 9)

Examples: **ATOL, "500000"** stores the value 500000 in register 0 or 128
 ATOL, "-5" stores the value -5 in register 0 or 128

See Also: **ATOF, FTOA, LTOA, STRTOF, STRTOL**

BRA Unconditional branch

Syntax: **BRA, *relativeAddress***

Description: This instruction branches unconditionally to the instruction at the *relativeAddress*. If the *relativeAddress* is more than -128 to 127 bytes from the address of the next instruction, the JMP instruction must be used.

Opcode: **81**

Byte 2: ***relativeAddress***

A signed byte value that is added to the address of the next instruction to determine the address to branch to.

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: **BRA, cc, JMP, JMP, cc, GOTO, RET, RET, cc**

BRA, cc Conditional branch

Syntax: **BRA, *conditionCode*, *relativeAddress***

Description: If the condition is true, this instruction branches to the instruction at the *relativeAddress* address. If the condition is false, no branch occurs. If the *relativeAddress* is more than -128 to 127 bytes from the address of the next instruction, the JMP, cc instruction must be used.

Opcode: **82**

Byte 2: ***conditionCode***

The list of condition codes is as follows:

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal

PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite
PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)
TRUE	0x00	True
FALSE	0xFF	False

Byte 3: ***relativeAddress***

A signed byte value that is added to the address of the next instruction to determine the address to branch to.

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: BRA, JMP, JMP,cc, GOTO, RET, RET,cc

BREAK Debug breakpoint

Syntax: **BREAK**

Description: If debug mode is enabled, a breakpoint occurs and the debug monitor is entered. If debug mode is disabled, the instruction is ignored.

Opcode: **F7**

Used in conjunction with the built-in debugger.

See Also: TRACEOFF, TRACEON, TRACEREG, TRACESTR

CEIL Ceiling

Syntax: **CEIL**

Description: Calculates the floating point value equal to the nearest integer that is greater than or equal to the floating point value in register A. The result is stored in register A.

$\text{reg}[A] = \text{ceil}(\text{reg}[A])$

Opcode: **52**

Special Cases: • if is NaN, then the result is NaN
 • if reg[A] is +infinity or -infinity, then the result is +infinity or -infinity
 • if reg[A] is 0.0 or -0.0, then the result is 0.0 or -0.0
 • if reg[A] is less than zero but greater than -1.0, then the result is -0.0

See Also: FLOOR

CHECKSUM Calculate checksum for uM-FPU code*Syntax:* **CHECKSUM***Description:* A checksum is calculated for the uM-FPU64 code and user-defined functions stored in Flash. The checksum value is stored in register 0.*Opcode:* **F6**

This can be used as a diagnostic test for confirming the state of a uM-FPU chip.

CLR Clear register*Syntax:* **CLR, register***Description:* Set the value of the specified register to zero. $\text{reg}[\text{register}] = 0, \text{status} = \text{longStatus}(\text{reg}[\text{register}])$ *Opcode:* **03***Byte 2:* **register**

Register number (0 to 255).

Special Cases: • if SETARGS is used, and *register* = 0
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137*See Also:* CLR0, CLRA, CLRX, SETARGS**CLR0 Clear register 0***Syntax:* **CLR0***Description:* Set the value of register 0 (32-bit) or register 128 (64-bit) to zero.if reg[A] is 32-bit, $\text{reg}[0] = 0, \text{status} = \text{longStatus}(\text{reg}[0])$ if reg[A] is 64-bit, $\text{reg}[128] = 0, \text{status} = \text{longStatus}(\text{reg}[128])$ *Opcode:* **06***Special Cases:* • if SETARGS is used,
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137*See Also:* CLR, CLRA, CLRX, SETARGS

CLRA Clear register A*Syntax:* **CLRA***Description:* Set the value of register A to zero. $\text{reg}[A] = 0, \text{status} = \text{longStatus}(\text{reg}[A])$ *Opcode:* **04***See Also:* CLR, CLR0, CLRX**CLRX Clear register X***Syntax:* **CLRX***Description:* Set the value of register A to zero, and increment X to select the next register in sequence. $\text{reg}[X] = 0, \text{status} = \text{longStatus}(\text{reg}[X]), X = X + 1$ *Opcode:* **05***Special Cases:*

- if $\text{reg}[X]$ is 32-bit, X will not be incremented past register 127
- if $\text{reg}[X]$ is 64-bit, X will not be incremented past register 255

See Also: CLR, CLR0, CLRA**COPY Copy registers***Syntax:* **COPY, fromRegister, toRegister***Description:* Copy the value from *fromRegister* to *toRegister*. $\text{reg}[\text{toRegister}] = \text{reg}[\text{fromRegister}], \text{status} = \text{longStatus}(\text{reg}[\text{toRegister}])$ *Opcode:* **07***Byte 2:* **fromRegister**
Register number (0 to 255).*Byte 3:* **toRegister**
Register number (0 to 255).*Special Cases:*

- if *toRegister* is 32-bit and *fromRegister* is 64-bit, the upper 32-bits of *fromRegister* are set to zero
- if *toRegister* is 64-bit and *fromRegister* is 32-bit, only the lower 32-bits of *toRegister* are copied

See Also: COPY0, COPYA, COPYX

COPYA Copy register A

Syntax: **COPYA, register**

Description: Copy the value of register A to *register*.

$\text{reg}[\text{register}] = \text{reg}[\text{A}], \text{status} = \text{longStatus}(\text{reg}[\text{A}])$

Opcode: **08**

Byte 2: **register**

Register number (0 to 255).


Special Cases: • if $\text{reg}[\text{A}]$ is 32-bit and *register* is 64-bit, the upper 32-bits of *register* are set to zero
 • if $\text{reg}[\text{A}]$ is 64-bit and *register* is 32-bit, only the lower 32-bits of $\text{reg}[\text{A}]$ are copied

See Also: COPY, COPY0, COPYX

COPYIND Copy using Indirect Pointers *(new in uM-FPU64)*

Syntax: **COPYIND, fromRegister, toRegister, countRegister**

Description: The number of data items specified by the *countRegister* are copied from the location pointed to by *fromRegister* to the location pointed to by *toRegister*. The pointer is as follows:

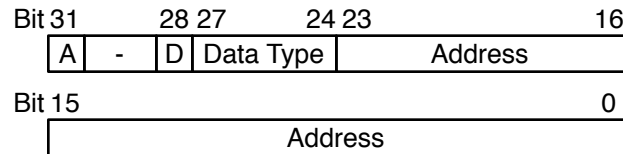

Bit 31 Auto-increment

Value	Description
0	No auto-increment.
1	Auto-increment the address when used by an instruction.

Bit 28 DMA Address

0	Memory address or Register.
1	DMA address.

Bits 28:24 Pointer Type

Value (binary)	Pointer Type
0000	Register, integer
0001	Register, floating point
1000	Memory, 8-bit integer, signed
1001	Memory, 8-bit integer, unsigned
1010	Memory, 16-bit integer, signed
1011	Memory, 16-bit integer, unsigned
1100	Memory, 32-bit integer
1101	Memory, 32-bit floating point
1110	Memory, 64-bit integer
1111	Memory, 64-bit floating point

Bits 23:0 Address

If the pointer is a register pointer, the address specifies the register number.
 If the pointer is a memory pointer, the address specifies the RAM address.

Opcode: **79**

Byte 2: ***fromRegister***

Register number (0 to 255). The register contains the from pointer.

Byte 3: ***toRegister***

Register number (0 to 255). The register contains the to pointer.

Byte 4: ***countRegister***

Register number (0 to 255). The register contains the number of items to copy.

See Also: SETIND, ADDIND, WRIND, RDIND, LOADIND, SAVEIND

COPYX Copy register X

Syntax: **COPYX, *register***

Description: Copy the value of register X to *register*, and increment X to select the next register in sequence.

$\text{reg}[\text{register}] = \text{reg}[\text{X}], \text{status} = \text{longStatus}(\text{reg}[\text{register}]), \text{X} = \text{X} + 1$

Opcode: **09**

Byte 2: ***register***

Register number (0 to 255).

Special Cases:

- if reg[X] is 32-bit and *register* is 64-bit, the upper 32-bits of *register* are set to zero
- if reg[X] is 64-bit and *register* is 32-bit, only the lower 32-bits of reg[X] are copied

See Also: COPY, COPY0, COPYA

COPY0 Copy register 0

Syntax: **COPY0, *register***

Description: If register A is 32-bit, the value of register 0 is copied to *register*.
 If register A is 64-bit, the value of register 128 is copied to *register*.

if reg[A] is 32-bit, then $\text{reg}[\text{register}] = \text{reg}[0], \text{status} = \text{longStatus}(\text{reg}[0])$
 if reg[A] is 64-bit, then $\text{reg}[\text{register}] = \text{reg}[128], \text{status} = \text{longStatus}(\text{reg}[128])$

Opcode: **10**

Byte 2: ***register***

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the upper 32-bits of *register* are set to zero
- if reg[A] is 64-bit and *register* is 32-bit, only the lower 32-bits of reg[128] are copied

See Also: COPY, COPYA, COPYX

COS Cosine**Syntax:** **COS****Description:** Calculates the cosine of the angle (in radians) in register A and stores the result in register A.
$$\text{reg}[A] = \text{cosine}(\text{reg}[A])$$
Opcode: **48****Special Cases:** • if reg[A] is NaN or an infinity, then the result is NaN**See Also:** ACOS, ASIN, ATAN, ATAN, SIN, TAN, DEGREES, RADIANS

DEGREES Convert radians to degrees**Syntax:** **DEGREES****Description:** The floating point value in register A is converted from radians to degrees and the result is stored in register A.**Opcode:** **4E****Special Cases:** • if reg[A] is NaN, then the result is NaN**See Also:** ACOS, ASIN, ATAN, ATAN2, COS, SIN, TAN, RADIANS

DELAY Delay (in milliseconds) (new in uM-FPU64)**Syntax:** **DELAY, period****Description:** The uM-FPU64 pauses for the number of milliseconds specified by *period*. If foreground/background processing has been enabled, the other process can continue execution during the delay period.**Opcode:** **DB****2nd, Byte 3:** **period**
A 16-bit unsigned value that specified the delay period in milliseconds. (0 to 65535)**See Also:** TIMSET, TIMELONG, TICKLONG, RTC

DEVIO Device Input/Output (new in uM-FPU64)**Syntax:** **DEVIO, device, action{,...}****Description:** This instruction provides support for devices interfaced to the uM-FPU64 chip using the digital pins. The DEVIO instruction is designed to interact with byte oriented I/O devices. It provides general I/O capabilities and higher level device specific support. All DEVIO instructions start with

the opcode, followed by a byte that specifies the device, and a byte which specifies the action to perform with the device. Depending on the action, there may be additional bytes required by the instruction. The supported devices are: general access RAM, FIFO buffers, 1-wire bus, I²C bus, SPI bus, asynchronous serial port, counters, servo controllers, LCD, and VDrive2 USB Flash drives.

```
DEVIO, device, DISABLE
DEVIO, device, ENABLE, pin, config
DEVIO, device, {device specific actions}
DEVIO, device, WRITE_REG8{+MSB}{+LSB}, register
DEVIO, device, WRITE_REG16{+MSB}{+LSB}, register
DEVIO, device, WRITE_REG32{+MSB}{+LSB}, register
DEVIO, device, WRITE_REG64{+MSB}{+LSB}, register
DEVIO, device, WRITE_BYTE, byte
DEVIO, device, WRITE_WORD, byte, byte
DEVIO, device, WRITE_NBYTE, count, byte...byte
DEVIO, device, WRITE_REP, count, byte
DEVIO, device, WRITE_STR, string
DEVIO, device, WRITE_SBUF
DEVIO, device, WRITE_SSEL
DEVIO, device, WRITE_MEM, count
DEVIO, device, WRITE_MEMA, address, count
DEVIO, device, WRITE_MEMR, regAddr, regCount
DEVIO, device, READ_REG8{+MSB}{+LSB}{+ZE}{+SE}, register
DEVIO, device, READ_REG16{+MSB}{+LSB}{+ZE}{+SE}, register
DEVIO, device, READ_REG32{+MSB}{+LSB}{+ZE}{+SE}, register
DEVIO, device, READ_REG64{+MSB}{+LSB}{+ZE}{+SE}, register
DEVIO, device, READ_SKIP, count
DEVIO, device, READ_SBUF
DEVIO, device, READ_SSEL
DEVIO, device, READ_MEM, count
DEVIO, device, READ_MEMA, address, count
DEVIO, device, READ_MEMR, regAddr, regCount
```

Opcode:

DA

Byte 2:

device

Bit 7 6 5 4 3 2 1 0

Device	Number
--------	--------

Bits 7:4

Device Type

IDE Symbol

IDE Value

Device Type

MEM	0x00	Memory
FIFO1	0x01	FIFO buffer 1
FIFO2	0x02	FIFO buffer 2
FIFO3	0x03	FIFO buffer 3
FIFO4	0x04	FIFO buffer 4
OWIRE	0x10	1-Wire
I2C	0x20	I ² C
SPI	0x30	SPI
ASYN	0x40	Asynchronous Serial Port
COUNTER	0x50	Counter (Digital input)
SERVO	0x60	Servo Output

	LCD	0x80	LCD
	VDRIVE2	0x90	VDrive2 (USB storage)
Bits 3:0	Device Number		
	<i>Value</i>	<i>Description</i>	
	0 - 15	Device number (for device types that support multiple devices)	

Byte 3:

action

An unsigned byte specifying the device action. A description of actions that are common to all devices is shown below. For device specific actions, see separate descriptions for each device type. (e.g. *DEVIO*, *ASYNC*)

Disable (0x00)

DEVIO, device, DISABLE

Disable the specified device and release the digital pins.

Enable (0x01)

DEVIO, device, ENABLE, pin, config

Enable the specified device and assign the digital pins. The enable instruction must be used to initialize a device before any other device instructions are used.

Byte 4:

pin

Specifies the first pin used by the specified device (D0 to D23).

Byte 5:

config

Configuration byte for initializing the device. See the device specific descriptions for details.

Device Specific Actions (0x02 - 0x0F)

For device specific actions, see the separate documentation for each device type. (e.g. *DEVIO*, *ASYNC*)

Write 8-bit Value from Register (0x10, 0x14)

DEVIO, device, WRITE_REG8, register

Write the lower 8-bit value from the specified register to the device.

Write 16-bit Value from Register (0x11, 0x15)

DEVIO, device, WRITE_REG16{+MSB}{+LSB}, register

Write the lower 16-bit value from the specified register to the device. The value can be written with the most significant byte or least significant byte first.

Write 32-bit Value from Register (0x12, 0x16)


DEVIO, device, WRITE_REG32{+MSB}{+LSB}, register

Write the lower 32-bit word from the specified register to the device. The value can be written with the most significant byte or least significant byte first.

Write 64-bit Value from Register (0x13, 0x17)

DEVIO, device, WRITE_REG64{+MSB}{+LSB}, register

Write the 64-bit value from the specified register to the device. The value can be written with the most significant byte or least significant byte first.



	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	MSB	0x00	Most significant byte first
	LSB	0x04	Least significant byte first
Bits 1:0	Number of Bits		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	WRITE_REG8	0x10	1 byte (8-bit)
	WRITE_REG16	0x11	2 bytes (16-bit)
	WRITE_REG32	0x12	3 bytes (32-bit)
	WRITE_REG64	0x13	4 bytes (64-bit)

Byte 4: **register**
Register number (0 to 255).

Write Byte (0x20)

DEVIO, *device*, WRITE_BYTE, *byte*
Write the 8-bit value specified to the device.

Byte 4: **byte**
Unsigned 8-bit value to write to device.

Write Word (0x21)

DEVIO, *device*, WRITE_WORD, *word*
Write the 16-bit value specified to the device.

Bytes 4-5: **word**
Unsigned 16-bit value to write to device.

Write Multiple Bytes (0x22)

DEVIO, *device*, WRITE_NBYTE, *count*, *byte...byte*
Write the number of bytes specified by *count* to the device.

Byte 4: **count**
Unsigned 8-bit integer specifying the number of bytes to write.

Bytes 5-n: **byte...byte**
Unsigned 8-bit values to write to device.

Write Repeat Byte (0x23)

DEVIO, *device*, WRITE_REP, *count*, *byte*
Write the same byte repeatedly to the device the number of times specified by *count*.

Byte 4: **count**
Unsigned 8-bit integer specifying the number of times to write the byte.

Byte 5: **byte**
Unsigned 8-bit value to write to device.

Write String (0x24)

DEVIO, *device*, WRITE_STR, *string*
Write the zero-terminated string to the device. The zero terminator is not sent unless the device is MEM, FIFO1, FIFO2, or FIFO3.

Bytes 4-n: **string**
Zero-terminated string to write to device.

Write from String Buffer (0x25)

DEVIO, *device*, WRITE_SBUF
Write the contents of the string buffer to the device. A zero terminator is also sent if the device is MEM, FIFO1, FIFO2, or FIFO3.

Write from String Selection (0x26)DEVIO, *device*, WRITE_SSEL

Write the string selection to the device. A zero terminator is also sent if the device is MEM, FIFO1, FIFO2, or FIFO3.

Write from Memory Address 0 (0x27)DEVIO, *device*, WRITE_MEM, *count*

Read *count* bytes from memory, starting at memory address 0, and write the bytes to the device.

Byte 4:

count

Unsigned 8-bit integer specifying the number of bytes to write.

Write from Memory Address (0x28)DEVIO, *device*, WRITE_MEMA, *address*, *count*

Read *count* bytes from memory, starting at the memory address specified by *address*, and write the bytes to the device.

Byte 4-5:

address

Unsigned 16-bit integer specifying the memory address to write to.

Byte 6-7:

count

Unsigned 16-bit integer specifying the number of bytes to write.

Write from Memory Address specified by Register (0x29)DEVIO, *device*, WRITE_MEMR, *regAddr*, *regCount*

Read the number of bytes specified in *regCount* from memory, starting at the memory address specified in *regAddr*, and write the bytes to the device.

Byte 4:

regAddr

The lower 16-bits of the register specify the memory address to write to.

Byte 5:

regCount

The lower 16-bits of the register specify the number of bytes to write.

Read 8-bit value to Register (0x30, 0x34, 0x38, 0x3C)DEVIO, *device*, READ_REG8{+ZE}{+SE}, *register*

Read an 8-bit value from the device and store in the lower 8 bits of the specified register. The remaining bits in the register can be filled with either zero-extend or sign-extend.

Read 16-bit value to Register (0x31, 0x35, 0x39, 0x3D)DEVIO, *device*, READ_REG16{+MSB}{+LSB}{+ZE}{+SE}, *register*

Read a 16-bit value from the device and store in the lower 16 bits of the specified register. The value can be stored with the most significant byte or least significant byte first. The remaining bits in the register can be filled with either zero-extend or sign-extend.

Read 32-bit value to Register (0x32, 0x36, 0x3A, 0x3E)DEVIO, *device*, READ_REG32{+MSB}{+LSB}{+ZE}{+SE}, *register*

Read a 32-bit value from the device and store in the lower 32 bits of the specified register. The value can be stored with the most significant byte or least significant byte first. The remaining bits in the register can be filled with either zero-extend or sign-extend.

Read 64-bit value to Register (0x33, 0x37, 0x3B, 0x3F)DEVIO, *device*, READ_REG64{+MSB}{+LSB}{+ZE}{+SE}, *register*

Read a 64-bit value from the device and store in specified register. The value can be stored

with the most significant byte or least significant byte first. The remaining bits in the register can be filled with either zero-extend or sign-extend.

Bit 7 6 5 4 3 2 1 0

3	S	L	Bits
---	---	---	------

Bit 3 **Sign Extend**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
ZE	0x00	Zero extend.
SE	0x08	Sign extend.

Bit 2 **Byte Order**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
MSB	0x00	Most significant byte first
LSB	0x04	Least significant byte first

Bits 1:0 **Number of Bits**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
READ_REG8	0x30	1 byte (8-bit)
READ_REG16	0x31	2 bytes (16-bit)
READ_REG32	0x32	3 bytes (32-bit)
READ_REG64	0x33	4 bytes (64-bit)

Byte 4:

register

Register number (0 to 255).

Read and Skip Bytes (0x43)

DEVIO, *device*, READ_SKIP, *count*

Read and skip *count* bytes from device.

Byte 4:

count

Unsigned 8-bit integer specifying the number of bytes to skip.

Read String to String Buffer (0x45)

DEVIO, *device*, READ_SBUF

Read zero-terminated string from device and store in string buffer.

Read String to String Selection (0x46)

DEVIO, *device*, READ_SSEL

Read zero-terminated string from device and store at string selection point.

Read to Memory Address 0 (0x47)

DEVIO, *device*, READ_MEM, *count*

Read *count* bytes from the device and store in memory, starting at memory address 0.

Byte 4:

count

Unsigned byte specifying the number of bytes to read.

Read to Memory Address (0x48)

DEVIO, *device*, READ_MEMA, *address*, *count*

Read *count* bytes from the device and store in memory, starting at the memory address specified by *address*.

Byte 4-5:

address

Unsigned 16-bit integer specifying the memory address to read from.

Byte 6-7:

count

Unsigned 16-bit integer specifying the number of bytes to read.

Read to Memory Address specified by Register (0x49)

DEVIO, device, READ_MEMR, regAddr, regCount

Read the number of bytes specified in *regCount* from the device and store in memory starting at the memory address specified in *regAddr*.

Byte 4:

regAddr

The lower 16-bits of the register specify the memory address to read from.

Byte 5:

regCount

The lower 16-bits of the register specify the number of bytes to read.

DEVIO, ASYNC Asynchronous Serial Port Interface (new in uM-FPU64)

Syntax: **DEVIO, ASYNC, action{, ...}**

Description: This instruction provides support for sending and receiving data through an asynchronous serial connection. The serial connection can be configured as receive only (1 pin), transmit only (1 pin), receive and transmit (2 pins), or receive and transmit with hardware flow control (4 pins). The baud rate is selectable from 300 baud to 115,200 baud.

DEVIO, ASYNC, DISABLE

DEVIO, ASYNC, ENABLE, pin, config

Opcode:

DA

Byte 2:

ASYNC (0x40)

Byte 3:

action

An unsigned byte specifying the device action. Actions that are specific to the asynchronous serial device are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, ASYNC, DISABLE

Disable the asynchronous serial connection and release the digital pins.

Enable (0x01)

DEVIO, ASYNC, ENABLE, pin, config

Select the pins to use for the asynchronous serial connection, set the baud rate, and enable the asynchronous serial port.

Byte 4:

pin

Specifies the pins used for the asynchronous serial connection.

D0 to D8 28-pin uM-FPU64 chip

D0 to D18 44-pin uM-FPU64 chip

Pin Assignments

Receive only

pin Rx

Transmit only

pin Tx

Receive and Transmit

pin Rx

pin+1 Tx

Receive and Transmit with Flow Control

pin Rx

pin+1 Tx

pin+2 /CTS
pin+3 /RTS

Byte 5:

config

Bit	7	6	5	4	3	2	1	0
	-	-	Type	Baud Rate				

Bits 5:4

Connection Type

IDE Symbol	IDE Value	Description
RX	0x00	Receive Only
TX	0x10	Transmit Only
RX_TX	0x20	Receive and Transmit
RX_TX_HW	0x30	Receive and Transmit with Hardware Flow Control

Bit 3:0

Baud Rate

IDE Symbol	IDE Value	Description
-	-	57,600 baud
BAUD_300	0x01	300 baud
BAUD_600	0x02	600 baud
BAUD_1200	0x03	1200 baud
BAUD_2400	0x04	2400 baud
BAUD_4800	0x05	4800 baud
BAUD_9600	0x06	9600 baud
BAUD_19200	0x07	19200 baud
BAUD_38400	0x08	38400 baud
BAUD_57600	0x09	57600 baud
BAUD_115200	0x0A	115200 baud

See Also: SERIN, SEROUT

DEVIO, COUNTER 32-bit Counter Interface

(new in uM-FPU64)

Syntax: **DEVIO, COUNTER+n, action{,...}**

Description: This instruction provides support for detecting and counting digital input changes. Optional support is provided for switch debouncing and automatic repeat when the input is held in the active state. If the active state is high, a rising edge on the digital input is counted. If the active state is low, a falling edge on the digital input is counted. If debouncing is enabled, changes to the digital input will be ignored for the *period* specified. The debounce period is set to 10 milliseconds by default. If a repeat value is specified, and the signal is held in the active state for the specified *delay*, the counter will increment at the specified *rate* while the signal remains in the active state.

DEVIO, COUNTER+n, DISABLE
DEVIO, COUNTER+n, ENABLE, *pin*, *config*
DEVIO, COUNTER+n, DEBOUNCE, *period*
DEVIO, COUNTER+n, REPEAT, *delay*, *rate*
DEVIO, COUNTER+n, READ_COUNT

Opcode: **DA**

Byte 2: **COUNTER+n (0x50-0x53)**

Byte 3: **action**

An unsigned byte specifying the device action. Actions that are specific to counter devices are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)DEVIO, COUNTER+*n*, DISABLE

Disable the counter and release the digital pin.

Enable (0x01)DEVIO, COUNTER+*n*, ENABLE, *pin*, *config*

Selects the pin to use for the counter, the active level for counting, whether an event is associated with the counter, and enable the counter input.

Byte 4:

pin

Specifies the pin to use for the counter input.

D0 to D8 28-pin uM-FPU64 chip

D0 to D8 44-pin uM-FPU64 chip

Byte 5:

config

Bit 7 6 5 4 3 2 1 0

A	-	Event
---	---	-------

Bit 7 **Active State**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
LOW	0x00	Active low.
HIGH	0x80	Active high.

Bits 2:0 **Event Number**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
NO_EVENT	0x00	No event.
EVENT1	0x01	Event 1.
EVENT2	0x02	Event 2.
EVENT4	0x03	Event 3.
EVENT5	0x04	Event 4.
EVENT6	0x05	Event 5.
EVENT7	0x06	Event 6.
EVENT1	0x07	Event 7.

Set Debounce Period (0x02)DEVIO, COUNTER+*n*, DEBOUNCE, *period*

Specifies the debounce period in milliseconds. The counters are initialized with a debounce period of 10 milliseconds.

Byte 4-5:

***period* (unsigned word)**

Specifies the debounce period in milliseconds (0 to 32677). Transitions on the counter input are ignored during the debounce period.

Set Repeat Rate (0x03)DEVIO, COUNTER+*n*, REPEAT, *delay*, *rate*

Specifies the automatic repeat parameters. The counters are initialized with no automatic repeat.

Byte 4-5:

***delay* (unsigned word)**

Specifies the delay in milliseconds before automatic repeat is enabled. (0 to 32677)

Byte 6-7:

***rate* (unsigned word)**

Specifies the rate in milliseconds that the counter will be incremented if the counter input remains active. (1 to 32677)

Read Count (0x04)

DEVIO, COUNTER+*n*, READ_COUNT
 Reads the counter and returns the value in register 0.

DEVIO, FIFO FIFO Buffer Interface (new in uM-FPU64)

Syntax: **DEVIO, FIFO1, action{,...}**
 DEVIO, FIFO2, action{,...}
 DEVIO, FIFO3, action{,...}
 DEVIO, FIFO4, action{,...}

Description: These instructions provide support for First In First Out (FIFO) buffers. They can be used to buffer data, or to transfer data from one process to another.

DEVIO, FIFO*n*, DISABLE
DEVIO, FIFO*n*, ENABLE, *pin*, *config*
DEVIO, FIFO*n*, CLEAR
DEVIO, FIFO*n*, USED
DEVIO, FIFO*n*, FREE
DEVIO, FIFO*n*, STATUS
DEVIO, FIFO*n*, CLEAR_OVERFLOW

Opcode: **DA**

Byte 2: **FIFO1-FIFO3 (0x01-0x04)**

Byte 3: **action**

An unsigned byte specifying the device action. Actions that are specific to FIFO devices are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, FIFO*n*, DISABLE
 Disables the specified FIFO device.

Enable (0x01)

DEVIO, FIFO*n*, ENABLE, *pin*, *config*
 Initialize the FIFO.

Byte 4: ***pin***

Unused.

Byte 5: ***config***

Bit 7 6 5 4 3 2 1 0

-	Type
---	------

Bits 2:0

Event Type

IDE Symbol

IDE Value

Description

NO_EVENT

0x00

No event

EMPTY

0x01

Set event flag when buffer is empty.

NOT_EMPTY

0x02

Set event flag when data in buffer.

HALF_EMPTY

0x03

Set event flag when buffer is half empty.

HALF_FULL

0x04

Set event flag when buffer is half full.

FULL

0x05

Set event flag when buffer is full.

OVERFLOW

0x06

Set event flag when buffer overflows.

Clear Buffer (03)

DEVIO, MEM, CLEAR

Clear the buffer by resetting the input index and output index.

Get Number of Bytes Used (0x04)

DEVIO, MEM, USED

Get the number of bytes currently used in the memory buffer.

Get Number of Bytes Free (0x05)

DEVIO, MEM, FREE

Get the number of bytes currently available in the memory buffer.

Get Buffer Status (0x06)

DEVIO, MEM, STATUS

Get the current status of the memory buffer. The buffer status is returned in register 0. The status byte is as follows:

Bit	7	6	5	4	3	2	1	0
	O	F	H	E	-	Type		
Bit 7	Buffer Overflow							
Bit 6	Buffer Full							
Bit 5	Buffer Half Full							
Bit 4	Buffer Empty							
Bits 2:0	Event Type							

Clear Overflow Bit (0x07)

DEVIO, MEM, CLEAR_OVERFLOW

Clear the overflow bit for the memory buffer. The overflow bit is set if an attempt is made to store data to the buffer when the buffer is already full. Once the overflow bit is set, no data will not be stored in the buffer until the overflow bit has been cleared.

DEVIO, I2C

I²C Bus Interface

(new in uM-FPU64)

Syntax: **DEVIO, I2C, action{,...}**

Description: This instruction provides support for communicating with I²C devices using a local I²C bus on the specified pair of digital pins.

DEVIO, I2C, DISABLE
DEVIO, I2C, ENABLE, pin, config
DEVIO, I2C, START_WRITE
DEVIO, I2C, STOP

Opcode: **DA**

Byte 2: **I2C (0x20)**

Byte 3: **action**

An unsigned byte specifying the device action. Actions that are specific to I²C devices are shown below. For actions that are common to all devices, see the DEVIO description.

Disable (0x00)

DEVIO, I2C, DISABLE

Disable the I²C bus and release the digital pins.

Enable (0x01)

DEVIO, I2C, ENABLE, *pin*, *config*

Selects the pins to use for the I²C bus, the bus speed, and enables the I²C bus.

Byte 4:

pin

D0 to D8 28-pin uM-FPU64 chip
D0 to D22 44-pin uM-FPU64 chip

Pin Assignments

pin SDA
pin+1 SCL

Byte 5:

config

Bit 7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	S
Bit 0				Speed			

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
-	-	100 kHz
FAST	0x01	400 kHz

Start Write (0x02)

DEVIO, I2C, START_WRITE, *device*

Sends the start write sequence to the I²C bus, and sets the status bits for the acknowledge.

Z=ACK, NZ=NAK

Byte 4:

device

Unsigned byte specifying the I²C device address. (0 to 0xFF)

Stop (0x03)

DEVIO, I2C, STOP

Sends the stop sequence to the I²C bus.

DEVIO, LCD LCD Interface (new in uM-FPU64)

Syntax: **DEVIO, LCD, *action*{, ...}**

Description: This instruction provides support for LCD displays that are compatible with the widely used HD44780 chipset. It uses a 4-bit parallel interface. The LCD interface uses 4-bitdisplaconfigured as receive only (1 pin), transmit only (1 pin), receive and transmit (2 pins), or receive and transmit with hardware flow control (4 pins). The baud rate is selectable from 300 bud to 115,200 baud.

DEVIO, LCD, DISABLE
DEVIO, LCD, ENABLE, *pin*, *config*
DEVIO, LCD, CLEAR
DEVIO, LCD, HOME
DEVIO, LCD, MOVE, *row*, *column*
DEVIO, LCD, MOVE_REG, *rowReg*, *colReg*
DEVIO, LCD, CMD, *command*

Opcode: **DA**

Byte 2: **LCD (0x80)**

Byte 3: ***action***

An unsigned byte specifying the device action. Actions that are specific to the LCD device are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, LCD, DISABLE

Disable the LCD device and release the digital pins.

Enable (0x01)

DEVIO, LCD, ENABLE, pin, config

Selects the pins to use for the LCD, configures and initializes the display.

Byte 4:

pin

Specifies the pins to use for the LCD interface.

D0 to D8 28-pin uM-FPU64 chip

D0 to D22 44-pin uM-FPU64 chip

Pin Assignments

pin to *pin*+3 4-bit data

pin+4 E pin

pin+5 RS pin

pin+6 RW pin (if enabled)

Byte 5:

config

Bit	7	6	5	4	3	2	1	0
	-	R	F	Row				Col

Bit 6

RW pin setting

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
-	0x00	Read disabled, RW pin grounded
READ_ENABLED	0x40	Read enabled, RW pin required

Bit 5

Font

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
-	0x00	5x7 font
FONT_5x10	0x20	5x10 font

Bits 4:3

Row

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
ROWS_1	0x00	1 row
ROWS_2	0x08	2 rows
ROWS_4	0x10	4 rows

Bits 2:0

Column

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
COLS_8	0x00	8 columns
COLS_12	0x01	12 columns
COLS_16	0x02	16 columns
COLS_20	0x03	20 columns
COLS_40	0x04	40 columns

Clear Display (0x02)

DEVIO, LCD, CLEAR

Clear the LCD display.

Home (0x03)

DEVIO, LCD, HOME

Move cursor to the home position.

Move to row, column (0x04)DEVIO, LCD, MOVE, *row*, *column*Move to the *row* and *column* specified.

Byte 4:

row

Unsigned byte specifying the row number (0 to 3).

Byte 5:

column

Unsigned byte specifying the column number (0 to 39).

Move to row, column using register (0x05)DEVIO, LCD, MOVE_REG, *rowReg*, *colReg*Move to the row and column specified by the values in *rowReg* and *colReg* registers.

Byte 4:

rowReg

Register containing the row number.

Byte 5:

column

Register containing column number.

Send Command (0x06)DEVIO, LCD, CMD, *command*

Send HD44780U compatible LCD command.

Byte 4:

command

Unsigned byte specifying the HD44780U compatible LCD command.

DEVIO, MEM**Memory Interface***(new in uM-FPU64)*

Syntax:

DEVIO, MEM, *action*{, ...}

Description:

This instruction stores data to the general memory area in RAM. The total amount of available RAM is 2304 bytes, which is split into a general foreground memory area, general background memory area, FIFO1, FIFO2, FIFO3, and FIFO4. The default allocation of RAM is as follows:

General Foreground	1024 bytes
General Background	1024 bytes
FIFO1	64 bytes
FIFO2	64 bytes
FIFO3	64 bytes
FIFO4	64 bytes

The allocation can be changed with the DEVIO, ALLOCATE instruction.

DEVIO, MEM, DISABLE

DEVIO, MEM, ENABLE, *pin*, *config*DEVIO, MEM, ALLOCATE, *memSize*, *fifoSize*

Opcode:

DA

Byte 2:

MEM (0x00)

Byte 3:

action

An unsigned byte specifying the device action. Actions that are specific to the memory device are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, MEM, DISABLE

This action is not required when using general memory in RAM.

Enable (0x01)DEVIO, MEM, ENABLE, *pin*, *config*

This action is not required when using general memory in RAM.

Byte 4:

pin

Unused.

Byte 5:

config

Unused.


Allocate Memory Buffers (0x02)DEVIO, MEM, ALLOCATE, *memSize*, *fifoSize*

The 2304 bytes of available memory are allocated to foreground memory, background memory, FIFO1, FIFO2, FIFO3, and FIFO4. The 4-bit value for each memory type specifies the amount of memory to allocate. If the sum of all allocations is greater than 2304 bytes, all allocations will be reduced by half until the allocation fits. Any extra bytes are allocated to foreground memory.

Byte 4:

memSize (*unsigned byte*)

Specifies the number of bytes to allocate to the foreground and background memory buffers.



Bits 7:4

Foreground Memory Allocation


Bits 3:0

Background Memory Allocation

Byte 5-6:

fifoSize (*unsigned word*)

Specifies the number of bytes to allocate to the FIFO buffers.



Bits 15:12

FIFO1 Memory Allocation

Bits 11:8

FIFO2 Memory Allocation

Bits 7:4

FIFO3 Memory Allocation

Bits 3:0

FIFO4 Memory Allocation

<i>Value</i>	<i>Description</i>
0	No memory
1	2 bytes
2	4 bytes
3	8 bytes
4	16 bytes
5	32 bytes
6	64 bytes
7	128 bytes
8	256 bytes
9	512 bytes
10	1024 bytes
11	2048 bytes
12	4096 bytes
13	8192 bytes
14	16384 bytes

DEVIO, OWIRE 1-Wire Bus Interface**(new in uM-FPU64)***Syntax:* **DEVIO,OWIRE,action{,...}***Description:* This instruction provides support for communicating with 1-Wire devices using a local 1-Wire bus on the specified digital pin.

DEVIO, OWIRE, DISABLE
 DEVIO, OWIRE, ENABLE, *pin*, *config*
 DEVIO, OWIRE, RESET
 DEVIO, OWIRE, SELECT, *regAddr*
 DEVIO, OWIRE, VERIFY, *regAddr*
 DEVIO, OWIRE, SEARCH, *count*, *regAddr*
 DEVIO, OWIRE, ALARM, *count*, *regAddr*
 DEVIO, OWIRE, FAMILY_SEARCH, *count*, *regAddr*
 DEVIO, OWIRE, FAMILY_ALARM, *count*, *regAddr*

Opcode: **DA***Byte 2:* **OWIRE (0x10-0x1F)***Byte 3:* **action**

An unsigned byte specifying the device action. Actions that are specific to 1-Wire devices are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, OWIRE, DISABLE
 Disable the 1-wire bus and release the digital pin.

Enable (0x01)

DEVIO, OWIRE, ENABLE, *pin*, *config*
 The enable action is used to assign the digital pin for the 1-wire bus and initialize the bus.

Byte 4:

pin
 D0 to D8 28-pin uM-FPU64 chip
 D0 to D22 44-pin uM-FPU64 chip

Pin Assignments

pin	1-Wire bus
-----	------------

Byte 5:

config
 Not used.

Send Reset Pulse (0x02)

DEVIO, OWIRE, RESET
 Sends a 1-wire reset pulse to the 1-wire bus.

Select Device (0x03)

DEVIO, OWIRE, SELECT, *regAddr*
 Selects the device on the 1-wire bus.

Byte 4:

regAddr
 If *regAddr* is 32-bit, the SKIP_ROM 1-wire command is used and no address is sent.

If *regAddr* is 64-bit, the MATCH_ROM 1-wire command is used, and the 64-bit device address in *regAddr* is sent.

Verify Device (0x04)

DEVIO, OWIRE, VERIFY, *regAddr*

Verifies that a device of the specified address is present on the 1-wire bus.

Byte 4:

regAddr

A 64-bit register specifying the device address.

Search All (0x05)

DEVIO, OWIRE, SEARCH, *count*, *regAddr*

Searches for all devices on the 1-wire bus.

Byte 4:

count

Unsigned byte specifying the maximum number of addresses to store in consecutive registers starting at register *regAddr*.

Byte 5:

regAddr

The first of *count* 64-bit registers that the address of all devices found on the 1-wire bus.

Alarm Search (0x06)

DEVIO, OWIRE, ALARM, *count*, *regAddr*

Searches for all devices on the 1-wire bus.

Byte 4:

count

Unsigned byte specifying the maximum number of addresses to store in consecutive registers starting at register *regAddr*.

Byte 5:

regAddr

The first of *count* 64-bit registers that the address of all devices found on the 1-wire bus that have an active alarm value.

Family Search (0x07)

DEVIO, OWIRE, FAMILY_SEARCH, *count*, *regAddr*

Searches for all devices on the 1-wire bus.

Byte 4:

count

Unsigned byte specifying the maximum number of addresses to store in consecutive registers starting at register *regAddr*.

Byte 5:

regAddr

The first of *count* 64-bit registers that the address of all devices found on the 1-wire bus that are part of the specified family of devices.

Family Alarm Search (0x08)

DEVIO, OWIRE, FAMILY_ALARM, *count*, *regAddr*

Searches for all devices on the 1-wire bus.

Byte 4:

count

Unsigned byte specifying the maximum number of addresses to store in consecutive registers starting at register *regAddr*.

Byte 5:

regAddr

The first of *count* 64-bit registers that the address of all devices found on the 1-wire bus that have an active alarm value and are part of the specified family of devices..

DEVIO, SERVO Servo Control Interface (new in uM-FPU64)

Syntax: **DEVIO, SERVO+n, action{,...}**

Description: This instruction is used to interface with servo controllers on the specified digital pins.

DEVIO, SERVO+n, DISABLE
DEVIO, SERVO+n, ENABLE, pin, config
DEVIO, SERVO+n, PULSE, register
DEVIO, SERVO+n, SPEED, register
DEVIO, SERVO+n, TIME, register
DEVIO, SERVO+n, MOVE
DEVIO, SERVO+n, HOME
DEVIO, SERVO+n, READ_PULSE
DEVIO, SERVO+n, STATUS

Opcode: **DA**

Byte 2: **device (0x60-63)**

Byte 3: **action**

An unsigned byte specifying the device action. Actions that are specific to servo controllers are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, SERVO+n, DISABLE

Disable the servo controller and release the digital pin.

Enable (0x01)

DEVIO, SERVO+n, ENABLE, pin, config

Initialize the servo controller and optionally assign event.

Byte 4: **pin**

D0 to D8 28-pin uM-FPU64 chip
D0 to D22 44-pin uM-FPU64 chip

Byte 5: **config**

Bit 7 6 5 4 3 2 1 0

E	-	Event
---	---	-------

Bit 7 **Extended Mode**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
-	0x00	Normal, Pulse widths (800 usec to 2200 usec).
EXTENDED	0x80	Extended Mode, Pulse widths (500 usec to 2500 usec).

Bits 2:0 **Event Number**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
NO_EVENT	0x00	No event.
EVENT1	0x01	Event 1.
EVENT2	0x02	Event 2.
EVENT4	0x03	Event 3.
EVENT5	0x04	Event 4.
EVENT6	0x05	Event 5.
EVENT7	0x06	Event 6.

EVENT1 0x07 Event 7.

Set Pulse Width (0x02)

DEVIO, SERVO+n, PULSE, *register*

Sets the pulse width of the servo to the value specified in the register..

Byte 4: *register*

Set Speed (0x03)

DEVIO, SERVO+n, SPEED, *register*

Sets the speed of movement (microseconds/second) for the servo to the value specified in the register.

Byte 4: *register*

Set Time (0x04)

DEVIO, SERVO+n, TIME, *register*

Sets the time of movement (milliseconds) for all servos in a group move to the value specified in the register. The movement will not occur until the MOVE action is received.

Byte 4: *register*

Move (0x05)

DEVIO, SERVO+n, MOVE

Move all of the servos in a group move in the time specified by the TIME action.

Move Home (0x06)

DEVIO, SERVO+n, HOME

Move all active servos to the home position (1500 microseconds).

Read Pulse Width (0x07)

DEVIO, SERVO+n, READ

Return the current pulse width of the servo in register 0.

Get Servo Status (0x08)

DEVIO, SERVO+n, STATUS

Return the current status of all servos in register 0. The status bit is zero if the servo is in position, and one if the servo is still moving. The status value is as follows:

Bit	7	6	5	4	3	2	1	0
				-	3	2	1	0
Bit 3					Servo 3 Status			
Bit 2					Servo 2 Status			
Bit 1					Servo 1 Status			
Bit 0					Servo 0 Status			

DEVIO, SPI SPI Interface (new in uM-FPU64)

Syntax: **DEVIO, SPI+n, action{, ...}**

Description: This instruction provides support for communicating with SPI devices using a local SPI bus on the specified digital pins.

DEVIO, SPI+n, DISABLE

DEVIO, SPI+n, ENABLE, pin, config
 DEVIO, SPI+n, CS_LOW
 DEVIO, SPI+n, CS_HIGH

Opcode:

DA

Byte 2:

device (0x30-0x3F)

Byte 3:

action

An unsigned byte specifying the device action. Actions that are specific to SPI devices are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, SPI+n, DISABLE

Disable the SPI device and release the digital pin.

Enable (0x01)

DEVIO, SPI+n, ENABLE, pin, config

Initialize the SPI device according to the configuration byte.

Byte 4:

pin

D0 to D8 28-pin uM-FPU64 chip

D0 to D22 44-pin uM-FPU64 chip (Device 0)

D0 to D22 44-pin uM-FPU64 chip (Device 1-15)

Pin Assignments

Device 0

pin	SCLK	Serial clock (from FPU)
pin+1	MOSI	Master Output, Slave Input (from FPU)
pin+2	MISO	Master input, Slave Output (to FPU)

Device 1-15

pin	/CS	Slave chip select (from FPU)
-----	-----	------------------------------

Byte 5:

config

Bit	7	6	5	4	3	2	1	0
	-	-	Mode	Speed				

Bits 5:4

Clock Mode

IDE Symbol	IDE Value	Description
MODE0	0x00	Idle state low, data captured on rising edge.
MODE1	0x10	Idle state low, data captured on falling edge.
MODE2	0x20	Idle state high, data captured on falling edge.
MODE3	0x30	Idle state high, data captured on rising edge.

Bits 3:0

Speed

Value	Description
0	78.125 kHz
1	89.285 kHz
2	104.166 kHz
3	125.000 kHz
4	156.25 kHz
5	208.333 kHz

6	312.500 kHz
7	625.000 kHz
8	1.250 MHz
9	2.500 MHz
10	1.667 MHz
11	2.000 MHz
12	2.500 MHz
13	3.333 MHz
14	5.000 MHz
15	10.000 MHz

Set CS low (0x02)

DEVIO, SPI+*n*, CS_LOW

Sets the pin CS pin assigned to SPI device *n* low.

Set CS high (0x03)

DEVIO, SPI+*n*, CS_HIGH

Sets the pin CS pin assigned to SPI device *n* high.

When multiple devices are used on the local SPI bus, device 0 is used to assign the hardware SPI pins, and device 1 to *n* are used to specify the pin that is connected to the /SS pin of each slave device. Each SPI device can have a unique SPI mode and clock speed.

DEVIO, VDRIVE2 VDrive2 USB Flash Drive Interface

(new in uM-FPU64)

Syntax: **DEVIO, VDRIVE2, action{, ...}**

Description: This instruction is used to communicate with a VDrive2 USB Flash drive using the asynchronous serial connection with hardware flow control. It allows the FPU to read and write data to a USB Flash drive. DEVIO_ASYNC and DEVIO_VDRIVE2 can't be used at the same time.

DEVIO, VDRIVE2, DISABLE
DEVIO, VDRIVE2, ENABLE, *pin*, *config*
DEVIO, VDRIVE2, CHECK_INPUT
DEVIO, VDRIVE2, CHECK_DRIVE
DEVIO, VDRIVE2, NEW_FILE, *string*
DEVIO, VDRIVE2, WRITE_FILE, *string*
DEVIO, VDRIVE2, READ_FILE, *string*
DEVIO, VDRIVE2, CLOSE
DEVIO, VDRIVE2, READ_LINE

Opcode: **DA**

Byte 2: **VDRIVE2 (0x90)**

Byte 3: **action**

An unsigned byte specifying the device action. Actions that are specific to the VDrive2 USB Flash drive are shown below. For actions that are common to all devices, see the *DEVIO* description.

Disable (0x00)

DEVIO, VDRIVE2, DISABLE

Disable the VDrive2 device and release the digital pins.

Enable (0x01)

DEVIO, VDRIVE2, ENABLE, pin, config

This device uses the asynchronous port to communicate with the VDrive2 USB drive at 9600 baud.

*Byte 4:***pin**

D0 to D8 28-pin uM-FPU64 chip

D0 to D18 44-pin uM-FPU64 chip

<i>Pin Assignments</i>	<i>Description</i>
pin	Rx
pin+1	Tx
pin+2	/CTS
pin+3	/RTS

*Byte 5:***config**

Not used.

Check Input (0x02)

DEVIO, VDRIVE2, CHECK_INPUT

Returns the number of characters in receive buffer in register 0.

Check Drive (0x03)

DEVIO, VDRIVE2, CHECK_DRIVE

Checks if a USB Flash drive is installed in the VDrive2. The response code is returned in register 0.

Open New File for Write (0x04)

DEVIO, VDRIVE2, NEW_FILE, filename

Opens a new file for writing. A file of the same name must not already exist on the Flash drive.

*Bytes 4-n:***filename**

A zero-terminated string specifying the file name (with optional path).

Open Existing File for Write (0x05)

DEVIO, VDRIVE2, WRITE_FILE, filename

Opens the specified file for writing. The file must already exist on the Flash drive.

*Bytes 4-n:***filename**

A zero-terminated string specifying the file name.

Open Existing File for Read (0x06)

DEVIO, VDRIVE2, READ_FILE, filename

Opens the specified file for reading.

*Bytes 4-n:***filename**

A zero-terminated string specifying the file name (with optional path).

Close File (0x07)

DEVIO, VDRIVE2, CLOSE

Closes the current file.

Read Line from File (0x08)

DEVIO, VDRIVE2, READ_LINE

Reads a line of data from the currently open file, and stores it in the string buffer.

All actions return a response code in register 0. If the value is zero, the action was successful. If non-zero, an error occurred. The response codes are as follows:

0	OK. No error.
1	No disk. USB Flash memory not inserted in VDrive2.
4	Filename or directory not found.
5	Command failed.
6	Disk Full.
7	Attempting to open a directory as a file.
8	Attempting to open a read-only file for writing.
9	File must be closed before this command is executed.
10	Attempting to delete a directory that's not empty.
11	Invalid Filename.

DIGIO Digital Input/Output *(new in uM-FPU64)*

Syntax: **DIGIO, action{, mode}**

Description: This instruction is used to read and write the digital pins. The 28-pin uM-FPU64 chip has 9 digital pins (D0 to D8) and the 44-pin uM-FPU64 chip has 23 digital pins (D0 to D22). The byte immediately following the opcode specifies the action and pin number. The WRITE_BITS, READ_BITS, WRITE_BITP, and READ_BITP actions require an additional mode byte. The additional bytes used by the instruction, and the various actions that can be performed, are described below.

Opcode: **D0**
Byte 2: **action**

Bit	7	6	5	4	3	2	1	0
	Action			Pin				

Bits 7:5	Action	IDE Symbol	IDE Value	Description
	LOW		0x00	The <i>pin</i> is configured as an output pin, and set low.
	HIGH		0x20	The <i>pin</i> is configured as an output pin, and set high.
	TOGGLE		0x40	The <i>pin</i> is configured as an output pin, and set to the opposite value as the current value.
	INPUT		0x60	The <i>pin</i> is configured as an input pin, and the value is read. If <i>pin</i> is low, status = Z If <i>pin</i> is high, status = NZ
	WRITE_BITS		0x80	The value in register 0 is written serially to the <i>pin</i> and <i>pin</i> +1. The mode is specified by the next byte of the instruction (see below).

pin data pin
pin+1 clock pin

READ_BITS	0xA0	Read the value serially from the <i>pin</i> and <i>pin</i> +1. The mode is specified by the next byte of the instruction (see below).
		<i>pin</i> data pin <i>pin+1</i> clock pin
WRITE_BITP	0xC0	The <i>pins</i> are configured as output pins, and the value in register 0 is written in parallel to the <i>pins</i> . The mode is specified by the next byte of the instruction (see below).
READ_BITP	0xE0	The <i>pins</i> are configured as input pins, and the value of the pins is read in parallel and stored in register 0. The mode is specified by the next byte of the instruction (see below).

Bits 4:0	Pin	
	<i>Value</i>	<i>Description</i>
	D0 - D8	The 28-pin version of the chip has digital pins D0 to D8.
	D0 - D22	The 44-pin version of the chip has digital pins D0 to D22.

Byte 3:

mode (for WRITE_BITS and READ_BITS actions)

Bit	7	6	5	4	3	2	1	0
	P	M	F					# of Bits

Bit 7	Sample Time (RDBITS)		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	PRE	0x00	Sample pin level before clock pulse.
	POST	0x80	Sample pin level after clock pulse.
Bit 6	Bit order		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	MSB	0x00	Read most significant bit first.
	LSB	0x40	Read least significant bit first.
Bit 5	Clock Speed		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	FAST	0x00	Fast speed clock (743 KHZ).
	SLOW	0x20	Slow speed clock (534 KHZ).
Bits 4:0	Number of Bits		
	<i>Value</i>	<i>Description</i>	
	0 - 31		The number of bits to transfer. A value of 0 specifies 32 bits.

Byte 3:

mode (for WRITE_BITP and READ_BITP actions)

Bit	7	6	5	4	3	2	1	0
	I	-	-					# of Bits

Bit 7	Invert		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	-	-	Bits are not inverted.

	INVERT	0x40	Bits are inverted before write and after read.
Bits 4:0	Number of Bits		
	<i>Value</i>	<i>Description</i>	
	1 - 9	The 28-pin version of the chip has a maximum of 9 digital pins (D0 to D8).	
	1 - 23	The 44-pin version of the chip has a maximum of 23 digital pins (D0 to D22).	
<i>Examples:</i>	DIGIO, LOW+1	Pin D1 is set to output low.	
	DIGIO, WRITE_BITS+3, 8	The lower 8 bits of register 0 is serially shifted out most significant bit first, using D3 as the data pin, and D4 as the clock pin.	
	DIGIO, READ_BITP+5, 4	The lower 4 bits of register 0 are set to the value of pins D5, D6, D7, and D8.	
<i>See Also:</i>	DEVIO		

DREAD Read 64-bit value (new in uM-FPU64)

Syntax: **DREAD, register**

Description: The 64-bit value of *register* is returned.

Opcode: **73**

Byte 2: **register**
Register number (0 to 255).

Returns: *byte1, byte2, byte3, byte4, byte5, byte6, byte7, byte8*
The eight bytes representing the 64-bit value (MSB first) must be read immediately following this instruction.

Special Cases: • if *register* is 32-bit, the value is converted to 64-bit with sign extended before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, RDIND

DWRITE Write 64-bit value (new in uM-FPU64)

Syntax: **DWRITE, register, value**

Description: The 64-bit integer value is stored in *register*.

reg[*register*] = 64-bit value, status = longStatus(reg[*register*])

Opcode: 72

Byte 2: **register**
Register number (0 to 255).

Bytes 3-10: **value**
64-bit value represented by eight bytes (MSB first).

Special Cases: • if *register* is 32-bit, only the lower 32-bits of the value are stored.

- if *register* = 0 or 128, and **SETARGS** is not active
 - if reg[A] is 32-bit, the value is stored in registers 0
 - if reg[A] is 64-bit, the value is stored in registers 128
- if *register* = 0 or 128, and **SETARGS** is active
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEA, LWRITEX, WRIND, SETARGS**

EVENT **Background events** *(new in uM-FPU64)*

Syntax: **EVENT, action{, function}**

Description: Used to manage background events.

Opcode: **7F**

Byte 2: **action**

Bit	7	6	5	4	3	2	1	0
	Action				Event			

Bits 7:4		Action		
		<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
		DISABLE	0x00	Disable event.
		ENABLE	0x10	Enable event.
		PERIOD	0x20	Set period for timer event (1 to 3).
		SET	0x30	Set event flag.
		CLEAR	0x40	Clear event flag.
		WAIT	0x50	Wait for event.
Bits 3:0		Event		
		<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
		CALL	0x00	Call background function event.
		EVENT1, TIMER1	0x01	Software event, Timer 1 event.
		EVENT2, TIMER2	0x02	Software event, Timer 2 event.
		EVENT3, TIMER3	0x03	Software event, Timer 3 event.
		EVENT4, FIFO1	0x04	Software event, FIFO1 event.
		EVENT5, FIFO2	0x05	Software event, FIFO2 event.
		EVENT6, FIFO3	0x06	Software event, FIFO3 event.
		EVENT7, FIFO4	0x07	Software event, FIFO4 event.
		SERIN	0x08	SERIN receive event.
		ASYNC	0x09	DEVIO, ASYNC receive event.
		EXTIN	0x0A	External input event.
		ADC	0x0B	ADC ready event.
		RTC	0x0C	Real-time clock event.
		DELAY_FG	0x0E	Delay Foreground event. (SET only)
		DELAY_BG	0x0F	Delay Background event. (SET only)

Byte 3: **function** (for *ENABLE* action)

Function number to execute when event occurs.

EVENT, DISABLE+event

Disables the event.

EVENT, ENABLE+event, function

Enables the event. When the event occurs, the specified function is executed in the background.

EVENT, PERIOD+event

Sets the time period for timer events. If the event is *TIMER1*, *TIMER2*, *TIMER3*, the time period in milliseconds is passed in the lower 16 bits of register 0 or register 128.

EVENT, SET+event

Set the event flag and causes the background function to execute.

EVENT, CLEAR+event

Clears the event flag. The event flag is cleared automatically when an event occurs, so this action is not normally required.

EVENT, WAIT+event

Waits until the event occurs.

Examples:

LOADWORD, 500	Load time period value..
EVENT, ENABLE+TIMER1, 1	Enable timer 1 event with 500 msec period. Function 1 called on event.
EVENT, ENABLE+RTC, 2	Enable RTC event. Function 2 called on event.

Special Cases:

- when setting the period for the *TIMER1*, *TIMER2*, *TIMER3*, *TIMER4* events, only the lower 16 bits of reg[0 | 128] are used

EXP The value e raised to a power

Syntax: **EXP**

Description: Calculates the value of e (2.7182818) raised to the power of the floating point value in register A. The result is stored in register A.

reg[A] = exp(reg[A])

Opcode: **45**

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if reg[A] is +infinity or greater than 88, then the result is +infinity
- if reg[A] is -infinity or less than -88, then the result is 0.0

EXP10 The value 10 raised to a power*Syntax:* **EXP10***Description:* Calculates the value of 10 raised to the power of the floating point value in register A, and stores the result in register A.
$$\text{reg}[A] = \exp10(\text{reg}[A])$$
Opcode: **46**

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if reg[A] is +infinity, then the result is +infinity
- if reg[A] is 32-bit, and reg[A] is greater than 38, then the result is +infinity
- if reg[A] is 64-bit, and reg[A] is greater than 308, then the result is +infinity
- if reg[A] is -infinity, the result is 0.0
- if reg[A] is 32-bit, and reg[A] is less than -38, then the result is 0.0
- if reg[A] is 64-bit, and reg[A] is less than -308, then the result is 0.0

EXTLONG Load value of external input counter*Syntax:* **EXTLONG***Description:* Load register 0 with the external input count.

if reg[A] is 32-bit,
 reg[0] = external input count, status = longStatus(reg[0])
 if reg[A] is 64-bit,
 reg[128] = external input count, status = longStatus(reg[128])

Opcode: **E1****EXTSET Set value of external input counter***Syntax:* **EXTSET***Description:* The external input count is set to the value in register 0. If the value is -1 (0xFFFFFFFF) the external input counter is disabled.

if reg[A] is 32-bit,
 external input count = reg[0]
 if reg[A] is 64-bit,
 external input count = reg[128]

Opcode: **E0***Special Cases:* • if reg[A] is 64-bit, then only the lower 32 bits are used to set the external input count

EXTWAIT Wait for next external input pulse*Syntax:* **EXTWAIT***Description:* Wait for the next external input to occur.*Opcode:* **E2****FABS Floating point absolute value***Syntax:* **FABS***Description:* Sets the floating value in register A to the absolute value.

$$\text{reg}[A] = |\text{reg}[A]|$$

Opcode: **3F***Special Cases:* • if reg[A] is NaN, then the result is NaN**FADD Floating point add***Syntax:* **FADD, register***Description:* The floating point value in *register* is added to the value in register A.

$$\text{reg}[A] = \text{reg}[A] + \text{reg}[\text{register}]$$

Opcode: **21***Byte 2:* **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used

 • if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

 • if either value is NaN, then the result is NaN

 • if one value is +infinity and the other is -infinity, then the result is NaN

 • if one value is +infinity and the other is not -infinity, then the result is +infinity

 • if one value is -infinity and the other is not +infinity, then the result is -infinity

FADD0 Floating point add register 0*Syntax:* **FADD0***Description:* If register A is 32-bit, the floating point value in register 0 is added to the value in register A. If register A is 64-bit, the floating point value in register 128 is added to the value in register A.

$$\begin{aligned} &\text{if reg}[A] \text{ is 32-bit, } \text{reg}[A] = \text{reg}[A] + \text{reg}[0] \\ &\text{if reg}[A] \text{ is 64-bit, } \text{reg}[A] = \text{reg}[A] + \text{reg}[128] \end{aligned}$$

Opcode: **2A**

- Special Cases:*
- if either value is NaN, then the result is NaN
 - if one value is +infinity and the other is -infinity, then the result is NaN
 - if one value is +infinity and the other is not -infinity, then the result is +infinity
 - if one value is -infinity and the other is not +infinity, then the result is -infinity

FADDI Floating point add immediate value

Syntax: **FADDI, *signedByte***

Description: The signed byte value is converted to floating point and added to the value in register A.

$\text{reg}[A] = \text{reg}[A] + \text{float}(\text{signedByte})$

Opcode: **33**

Byte 2: ***signedByte***
A signed byte value (-128 to 127).

- Special Cases:*
- if reg[A] is NaN, then the result is NaN
 - if reg[A] is +infinity, then the result is +infinity
 - if reg[A] is -infinity, then the result is -infinity

FCALL Call Flash memory user defined function

Syntax: **FCALL, *function***

Description: The user-defined *function*, stored in Flash memory, is executed. Up to 16 levels of nesting is supported for function calls. The uM-FPU IDE provides support for programming user defined functions in Flash memory using the serial debug monitor (see datasheet).

Opcode: **7E**

Byte 2: ***function***
A function number (0 to 63).

- Special Cases:*
- only valid inside user-defined functions stored in Flash memory.
 - if the user function is not defined, register 0 is set to NaN, and execution continues.

FCMP Floating point compare

Syntax: **FCMP, *register***

Description: Compares the floating point value in register A with the value in *register* and sets the internal status byte.

$\text{status} = \text{floatStatus}(\text{reg}[A] - \text{reg}[\text{register}])$

Opcode: **28**

Byte 2: ***register***
Register number (0 to 255).

The status byte can be read with the **READSTATUS** instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	N	S	Z

Bit 2	Not-a-Number	Set if either value is not a valid number
Bit 1	Sign	Set if $\text{reg}[A] < \text{reg}[\text{register}]$
Bit 0	Zero	Set if $\text{reg}[A] = \text{reg}[\text{register}]$
		If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{reg}[\text{register}]$

- Special Cases:*
- if $\text{reg}[A]$ is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
 - if $\text{reg}[A]$ is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

FCMP0 Floating point compare register 0

Syntax: **FCMP0**

Description: If register **A** is 32-bit, the floating point value in register **A** is compared with the value in register 0, and the internal status byte is set. If register **A** is 64-bit, the signed long integer value in register **A** is compared with the value in register 128, and the internal status byte is set.

if $\text{reg}[A]$ is 32-bit, $\text{status} = \text{floatStatus}(\text{reg}[A] - \text{reg}[0])$
 if $\text{reg}[A]$ is 64-bit, $\text{status} = \text{floatStatus}(\text{reg}[A] - \text{reg}[128])$

Opcode: **31**

The status byte can be read with the **READSTATUS** instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	N	S	Z

Bit 2	Not-a-Number	Set if either value is not a valid number
Bit 1	Sign	Set if $\text{reg}[A] < \text{reg}[0 \mid 128]$
Bit 0	Zero	Set if $\text{reg}[A] = \text{reg}[0 \mid 128]$
		If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{reg}[0 \mid 128]$

FCMP2 Floating point compare

Syntax: **FCMP2, register1, register2**

Description: Compares the floating point value in *register1* with the value in *register2* and sets the internal status byte.

$\text{status} = \text{floatStatus}(\text{reg}[\text{register1}] - \text{reg}[\text{register2}])$

The status byte can be read with the **READSTATUS** instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	N	S	Z

Bit 2	Not-a-Number	Set if either value is not a valid number
-------	--------------	---

Bit 1	Sign	Set if $\text{reg}[\text{register2}] < \text{reg}[\text{register1}]$
Bit 0	Zero	Set if $\text{reg}[\text{register2}] = \text{reg}[\text{register1}]$
		If neither Bit 0 or Bit 1 is set, $\text{reg}[\text{register2}] > \text{reg}[\text{register1}]$

Opcode: **3D**

Byte 2: **register1**
Register number (0 to 255).

Byte 3: **register2**
Register number (0 to 255).

Special Cases:

- if *register1* is 32-bit and *register2* is 64-bit, the value is converted to 32-bit before being used
- if *register1* is 64-bit and *register2* is 32-bit, the value is converted to 64-bit before being used

FCMPI Floating point compare immediate value

Syntax: **FCMPI, signedByte**

Description: The signed byte value is converted to floating point and compared to the floating point value in register A.

The status byte can be read with the **READSTATUS** instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	N	S	Z

Bit 2	Not-a-Number	Set if either value is not a valid number
Bit 1	Sign	Set if $\text{reg}[A] < \text{float}(\text{signedByte})$
Bit 0	Zero	Set if $\text{reg}[A] = \text{float}(\text{signedByte})$
		If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{float}(\text{signedByte})$

$\text{status} = \text{floatStatus}(\text{reg}[A] - \text{float}(\text{signedByte}))$

Opcode: **3A**

Byte 2: **signedByte**
A signed byte value (-128 to 127).

The status byte can be read with the **READSTATUS** instruction.

FCNV Floating point conversion

Syntax: **FCNV, conversion**

Description: Convert the value in register A using the *conversion* specified and store the result in register A. If register A is 32-bit, the conversion uses 32-bit constants. If register A is 64-bit, the conversion uses 64-bit constants.

$\text{reg}[A] = \text{the converted value of reg}[A]$

Opcode: **56**

Byte 2: **conversion**
The conversion codes are as follows:

Value	IDE Symbol	IDE Value	Description
-------	------------	-----------	-------------

0	F_C	00	Fahrenheit to Celsius
1	C_F	01	Celsius to Fahrenheit
2	IN_MM	02	inches to millimeters
3	MM_IN	03	millimeters to inches
4	IN_CM	04	inches to centimeters
5	CM_IN	05	centimeters to inches
6	IN_M	06	inches to meters
7	M_IN	07	meters to inches
8	FT_M	08	feet to meters
9	M_FT	09	meters to feet
10	YD_M	0A	yards to meters
11	M_YD	0B	meters to yards
12	MILES_KM	0C	miles to kilometers
13	KM_MILES	0D	kilometers to miles
14	NM_M	0E	nautical miles to meters
15	M_NM	0F	meters to nautical miles
16	ACRES_M2	10	acres to meters ²
17	M2_ACRES	11	meters ² to acres
18	OZ_G	12	ounces to grams
19	G_OZ	13	grams to ounces
20	LB_KG	14	pounds to kilograms
21	KG_LB	15	kilograms to pounds
22	USGAL_L	16	US gallons to liters
23	L_USGAL	17	liters to US gallons
24	UKGAL_L	18	UK gallons to liters
25	L_UKGAL	19	liters to UK gallons
26	USOZ_ML	1A	US fluid ounces to milliliters
27	ML_USOZ	1B	milliliters to US fluid ounces
28	UKOZ_ML	1C	UK fluid ounces to milliliters
29	ML_UKOZ	1D	milliliters to UK fluid ounces
30	CAL_J	1E	calories to Joules
31	J_CAL	1F	Joules to calories
32	HP_W	20	horsepower to watts
33	W_HP	21	watts to horsepower
34	ATM_KP	22	atmospheres to kilopascals
35	KP_ATM	23	kilopascals to atmospheres
36	MMHG_KP	24	mmHg to kilopascals
37	KP_MMHG	25	kilopascals to mmHg
38	DEG_RAD	26	degrees to radians
39	RAD_DEG	27	radians to degrees

Special Cases: • if *conversion* greater than 39, the value of register A is unchanged.

Examples: FCNV, C_F Converts the value in register A from celsius to fahrenheit.
 FCNV, IN_CM Converts the value in register A from inches to centimeters.

FCOPYI Copy Immediate value *(new in uM-FPU64)*

Syntax: **FCOPYI, signedByte, register**

Description: The 8-bit signed value is converted to a long integer and copied to *register*.

$\text{reg}[\text{register}] = \text{float}(\text{signedByte}), \text{status} = \text{longStatus}(\text{reg}[\text{register}])$

Opcode: **5F**

Byte 2: **signedByte**

An signed byte value (-128 to 127).

Byte 3: **register**

Register number (0 to 255).

FDIV Floating point divide

Syntax: **FDIV, register**

Description: The floating point value in register A is divided by the floating point value in *register*.

$\text{reg}[A] = \text{reg}[A] / \text{reg}[\text{register}]$

Opcode: **25**

Byte 2: **register**

Register number (0 to 255).

Special Cases:

- if $\text{reg}[A]$ is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if $\text{reg}[A]$ is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN
- if both values are zero or both values are infinity, then the result is NaN
- if $\text{reg}[\text{register}]$ is zero and $\text{reg}[A]$ is not zero, then the result is infinity
- if $\text{reg}[\text{register}]$ is infinity, then the result is zero

FDIV0 Floating point divide by register 0

Syntax: **FDIV0**

Description: If register A is 32-bit, the floating point value in register A is divided by the value in register 0. If register A is 64-bit, the floating point value in register A is divided by the value in register 128.

if $\text{reg}[A]$ is 32-bit, $\text{reg}[A] = \text{reg}[A] / \text{reg}[0]$
 if $\text{reg}[A]$ is 64-bit, $\text{reg}[A] = \text{reg}[A] / \text{reg}[128]$

Opcode: **2E**

Special Cases:

- if either value is NaN, then the result is NaN
- if both values are zero or both values are infinity, then the result is NaN
- if $\text{reg}[0 \mid 128]$ is zero and $\text{reg}[A]$ is not zero, then the result is infinity
- if $\text{reg}[0 \mid 128]$ is infinity, then the result is zero

FDIVI Floating point divide by immediate value**Syntax:** **FDIVI, *signedByte*****Description:** The signed byte value is converted to floating point and the value in register A is divided by the converted value.

$$\text{reg}[A] = \text{reg}[A] / \text{float}(\text{signedByte})$$

Opcode: **37****Byte 2:** ***signedByte***

A signed byte value (-128 to 127).

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if both values are zero, then the result is NaN
- if the *signedByte* is zero and reg[A] is not zero, then the result is infinity

FDIVR Floating point divide (reversed)**Syntax:** **FDIVR, *register*****Description:** The floating point value in *register* is divided by the floating point value in register A and the result is stored in register A.

$$\text{reg}[A] = \text{reg}[\text{register}] / \text{reg}[A]$$

Opcode: **26****Byte 2:** ***register***

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN
- if both values are zero or both values are infinity, then the result is NaN
- if reg[A] is zero and reg[*register*] is not zero, then the result is infinity
- if reg[A] is infinity, then the result is zero

FDIVR0 Floating point divide register 0 (reversed)**Syntax:** **FDIVR0****Description:** If register A is 32-bit, the floating point value in register 0 is divided by the floating point value in register A and the result is stored in register A. If register A is 64-bit, the floating point value in register 128 is divided by the floating point value in register A and the result is stored in register A.

$$\begin{aligned} \text{if reg}[A] \text{ is 32-bit, } & \text{reg}[A] = \text{reg}[0] / \text{reg}[A] \\ \text{if reg}[A] \text{ is 64-bit, } & \text{reg}[A] = \text{reg}[128] / \text{reg}[A] \end{aligned}$$

Opcode: **2F**

Special Cases:

- if either value is NaN, then the result is NaN

- if both values are zero or both values are infinity, then the result is NaN
- if reg[A] is zero and reg[0 | 128] is not zero, then the result is infinity
- if reg[A] is infinity, then the result is zero

FDIVRI Floating point divide by immediate value (reversed)

Syntax: **FDIVRI, signedByte**

Description: The signed byte value is converted to floating point and divided by the value in register A. The result is stored in register A.

$$\text{reg[A]} = \text{float}(\text{signedByte}) / \text{reg[A]}$$

Opcode: **38**

Byte 2: **signedByte**

A signed byte value (-128 to 127).

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if both values are zero, then the result is NaN
- if the value reg[A] is zero and float(signedByte) is not zero, then the result is infinity

FFT Fast Fourier Transform

Syntax: **FFT, action**

Description: This instruction performs Fast Fourier Transform (FFT) operations.

Opcode: **6F**

Byte 2: **action**

The type of action performed is specified by the action byte as follows:

<i>Value</i>	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
0	FIRST_STAGE	0x00	first stage of FFT
1	NEXT_STAGE	0x01	next stage of multistage FFT
2	NEXT_LEVEL	0x02	next level of multistage FFT
3	NEXT_BLOCK	0x03	next block of multistage FFT
+4	BIT_REVERSE	0x04	pre-processing bit reverse sort
+8	PRE_ADJUST	0x08	pre-processing for inverse FFT
+16	POST_ADJUST	0x10	post-processing for inverse FFT

The data for the FFT instruction must be 32-bit floating point values stored in matrix A as a Nx2 matrix, where N must be a power of two. The data points are specified as complex numbers, with the real part stored in the first column and the imaginary part stored in the second column. If all data points can be stored in the matrix (maximum of 64 points if all 128 registers are used), the Fast Fourier Transform can be calculated with a single instruction. If more data points are required than will fit in the matrix, the calculation must be done in blocks. The algorithm iteratively writes the next block of data, executes the FFT instruction for the appropriate stage of the FFT calculation, and reads the data back to the microcontroller. This proceeds in stages until all data points have been processed. See application notes for more details.

FINV Floating point inverse

Syntax: **FINV**

Description: The inverse of the floating point value in register A is stored in register A.

$\text{reg}[A] = 1 / \text{reg}[A]$

Opcode: **40**

Special Cases: • if reg[A] is NaN, then the result is NaN
 • if reg[A] is zero, then the result is infinity
 • if reg[A] is infinity, then the result is zero

FIX Convert floating point to long integer

Syntax: **FIX**

Description: Converts the floating point value in register A to a long integer value.

$\text{reg}[A] = \text{fix}(\text{reg}[A])$

Opcode: **61**

Special Cases: • if reg[A] is NaN, then the result is zero
 • if reg[A] is +infinity or greater than the maximum signed long integer, then the result is the maximum signed long integer (decimal: 2147483647, hex: \$7FFFFFFF)
 • if reg[A] is -infinity or less than the minimum signed long integer, then the result is the minimum signed long integer (decimal: -2147483648, hex: \$80000000)

FIXR Convert floating point to long integer with rounding

Syntax: **FIXR**

Description: Converts the floating point value in register A to a long integer value with rounding.

$\text{reg}[A] = \text{fix}(\text{round}(\text{reg}[A]))$

Opcode: **62**

Special Cases: • if reg[A] is NaN, then the result is zero
 • if reg[A] is +infinity or greater than the maximum signed long integer, then the result is the maximum signed long integer (decimal: 2147483647, hex: \$7FFFFFFF)
 • if reg[A] is -infinity or less than the minimum signed long integer, then the result is the minimum signed long integer (decimal: -2147483648, hex: \$80000000)

FLOAT Convert long integer to floating point*Syntax:* **FLOAT***Description:* Converts the long integer value in register A to a floating point value.
$$\text{reg}[A] = \text{float}(\text{reg}[A])$$
Opcode: **60****FLOOR Floor***Syntax:* **FLOOR***Description:* Calculates the floating point value equal to the nearest integer that is less than or equal to the floating point value in register A. The result is stored in register A.
$$\text{reg}[A] = \text{floor}(\text{reg}[A])$$
Opcode: **51***Special Cases:*

- if reg[A] is NaN, then the result is NaN
- if reg[A] is +infinity or -infinity, then the result is +infinity or -infinity
- if reg[A] is 0.0 or -0.0, then the result is 0.0 or -0.0

See Also: CEIL**FMAC Multiply and add***Syntax:* **FMAC, register1, register2***Description:* The floating point value in *register1* is multiplied by the value in *register2* and the result is added to register A.
$$\text{reg}[A] = \text{reg}[A] + (\text{reg}[\text{register1}] * \text{reg}[\text{register2}])$$
Opcode: **57***Byte 2:* **register1**
Register number (0 to 255).*Byte 3:* **register2**
Register number (0 to 255).*Special Cases:*

- if reg[A] is 32-bit and *register1* or *register2* are 64-bit, the values are converted to 32-bit before being used
- if reg[A] is 64-bit and *register1* or *register2* are 32-bit, the values are converted to 64-bit before being used
- if either value is NaN, or one value is zero and the other is infinity, then the result is NaN
- if either values is infinity and the other is nonzero, then the result is infinity

FMAX Floating point maximum*Syntax:* **FMAX, register***Description:* The maximum floating point value of register A and *register* is stored in register A.

$$\text{reg}[A] = \max(\text{reg}[A], \text{reg}[\text{register}])$$

Opcode: **55***Byte 2:* **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN

FMIN Floating point minimum*Syntax:* **FMIN, register***Description:* The minimum floating point value of register A and *register* is stored in register A.

$$\text{reg}[A] = \min(\text{reg}[A], \text{reg}[\text{register}])$$

Opcode: **54***Byte 2:* **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN

FMOD Floating point remainder*Syntax:* **FMOD, register***Description:* The floating point remainder of the floating point value in register A divided by *register* is stored in register A.

$$\text{reg}[A] = \text{remainder of } \text{reg}[A] / (\text{reg}[\text{register}])$$

Opcode: **50***Byte 2:* **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

FMSC Multiply and subtract from

Syntax: **FMSC, register1, register2**

Description: The floating point value in *register1* is multiplied by the value in *register2* and the result is subtracted from register A.

$$\text{reg}[A] = \text{reg}[A] - (\text{reg}[\text{register1}] * \text{reg}[\text{register2}])$$

Opcode: **58**

Byte 2: **register1**

Register number (0 to 255).

Byte 3: **register2**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register1* or *register2* are 64-bit, the values are converted to 32-bit before being used
- if reg[A] is 64-bit and *register1* or *register2* are 32-bit, the values are converted to 64-bit before being used
- if either value is NaN, or one value is zero and the other is infinity, then the result is NaN
- if either values is infinity and the other is nonzero, then the result is infinity

FMUL Floating point multiply

Syntax: **FMUL, register**

Description: The floating point value in register A is multiplied by the value in *register*.

$$\text{reg}[A] = \text{reg}[A] * \text{reg}[\text{register}]$$

Opcode: **24**

Byte 2: **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, or one value is zero and the other is infinity, then the result is NaN
- if either values is infinity and the other is nonzero, then the result is infinity

FMULO Floating point multiply by register 0

Syntax: **FMULO**

Description: If register A is 32-bit, the floating point value in register A is multiplied by the value in register 0. If register A is 64-bit, the floating point value in register A is multiplied by the value in register 128. The result is stored in register A.

$$\begin{aligned} \text{if reg}[A] \text{ is 32-bit, } & \text{reg}[A] = \text{reg}[A] * \text{reg}[0] \\ \text{if reg}[A] \text{ is 64-bit, } & \text{reg}[A] = \text{reg}[A] * \text{reg}[128] \end{aligned}$$

Opcode: **2D**

Special Cases:

- if either value is NaN, or one value is zero and the other is infinity, then the result is NaN
- if either values is infinity and the other is nonzero, then the result is infinity

FMULI Floating point multiply by immediate value

Syntax: **FMULI, signedByte**

Description: The signed byte value is converted to floating point and the value in register A is multiplied by the converted value.

$\text{reg}[A] = \text{reg}[A] * \text{float}[\text{signedByte}]$

Opcode: **36**

Byte 2: **signedByte**
A signed byte value (-128 to 127).

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if the signed byte is zero and reg[A] is infinity, then the result is NaN

FNEG Floating point negate

Syntax: **FNEG**

Opcode: **3E**

Description: $\text{reg}[A] = -\text{reg}[A]$

The negative of the floating point value in register A is stored in register A.

Special Cases:

- if the value is NaN, then the result is NaN

FPOW Floating point power

Syntax: **FPOW, register**

Description: The floating point value in register A is raised to the power of the floating point value in *register* and stored in register A.

$\text{reg}[A] = \text{reg}[A] ** \text{reg}[\text{register}]$

Opcode: **27**

Byte 2: **register**
Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if reg[*register*] is 0.0 or -0.0, then the result is 1.0
- if reg[*register*] is 1.0, then the result is the same as the A value

- if $\text{reg}[\text{register}]$ is NaN, then the result is NaN
- if $\text{reg}[A]$ is NaN and $\text{reg}[\text{register}]$ is nonzero, then the result is NaN
- if $|\text{reg}[A]| > 1$ and $\text{reg}[\text{register}]$ is +infinite, then the result is +infinity
- if $|\text{reg}[A]| < 1$ and $\text{reg}[\text{register}]$ is -infinite, then the result is +infinity
- if $|\text{reg}[A]| > 1$ and $\text{reg}[\text{register}]$ is -infinite, then the result is 0.0
- if $|\text{reg}[A]| < 1$ and $\text{reg}[\text{register}]$ is +infinite, then the result is 0.0
- if $|\text{reg}[A]| = 1$ and $\text{reg}[\text{register}]$ is infinite, then the result is NaN
- if $\text{reg}[A]$ is 0.0 and $\text{reg}[\text{register}] > 0$, then the result is 0.0
- if $\text{reg}[A]$ is +infinity and $\text{reg}[\text{register}] < 0$, then the result is 0.0
- if $\text{reg}[A]$ is 0.0 and $\text{reg}[\text{register}] < 0$, then the result is +infinity
- if $\text{reg}[A]$ is +infinity and $\text{reg}[\text{register}] > 0$, then the result is +infinity
- if $\text{reg}[A]$ is -0.0 and $\text{reg}[\text{register}] > 0$ but not a finite odd integer, then the result is 0.0
- if the $\text{reg}[A]$ is -infinity and $\text{reg}[\text{register}] < 0$ but not a finite odd integer, then the result is 0.0
- if $\text{reg}[A]$ is -0.0 and the $\text{reg}[\text{register}]$ is a positive finite odd integer, then the result is -0.0
- if $\text{reg}[A]$ is -infinity and $\text{reg}[\text{register}]$ is a negative finite odd integer, then the result is -0.0
- if $\text{reg}[A]$ is -0.0 and $\text{reg}[\text{register}] < 0$ but not a finite odd integer, then the result is +infinity
- if $\text{reg}[A]$ is -infinity and $\text{reg}[\text{register}] > 0$ but not a finite odd integer, then the result is +infinity
- if $\text{reg}[A]$ is -0.0 and $\text{reg}[\text{register}]$ is a negative finite odd integer, then the result is -infinity
- if $\text{reg}[A]$ is -infinity and $\text{reg}[\text{register}]$ is a positive finite odd integer, then the result is -infinity
- if $\text{reg}[A] < 0$ and $\text{reg}[\text{register}]$ is a finite even integer, then the result is equal to $|\text{reg}[A]|$ to the power of $\text{reg}[\text{register}]$
- if $\text{reg}[A] < 0$ and $\text{reg}[\text{register}]$ is a finite odd integer, then the result is equal to the negative of $|\text{reg}[A]|$ to the power of $\text{reg}[\text{register}]$
- if $\text{reg}[A] < 0$ and finite and $\text{reg}[\text{register}]$ is finite and not an integer, then the result is NaN

FPOW0 Floating point power by register 0

Syntax: **FPOW0**

Description: If register A is 32-bit, the floating point value in register A is raised to the power of the floating point value in register 0 and stored in register A. If register A is 64-bit, the floating point value in register A is raised to the power of the floating point value in register 128 and stored in register A.

if $\text{reg}[A]$ is 32-bit, $\text{reg}[A] = \text{reg}[A] ** \text{reg}[0]$
 if $\text{reg}[A]$ is 64-bit, $\text{reg}[A] = \text{reg}[A] ** \text{reg}[128]$

Opcode: **30**

Special Cases:

- if $\text{reg}[0 \mid 128]$ is 0.0 or -0.0, then the result is 1.0
- if $\text{reg}[0 \mid 128]$ is 1.0, then the result is the same as the A value
- if $\text{reg}[0 \mid 128]$ is NaN, then the result is NaN
- if $\text{reg}[A]$ is NaN and $\text{reg}[0 \mid 128]$ is nonzero, then the result is NaN
- if $|\text{reg}[A]| > 1$ and $\text{reg}[0 \mid 128]$ is +infinite, then the result is +infinity
- if $|\text{reg}[A]| < 1$ and $\text{reg}[0 \mid 128]$ is -infinite, then the result is +infinity
- if $|\text{reg}[A]| > 1$ and $\text{reg}[0 \mid 128]$ is -infinite, then the result is 0.0
- if $|\text{reg}[A]| < 1$ and $\text{reg}[0 \mid 128]$ is +infinite, then the result is 0.0
- if $|\text{reg}[A]| = 1$ and $\text{reg}[0 \mid 128]$ is infinite, then the result is NaN
- if $\text{reg}[A]$ is 0.0 and $\text{reg}[0 \mid 128] > 0$, then the result is 0.0

- if reg[A] is +infinity and reg[0 | 128] < 0, then the result is 0.0
- if reg[A] is 0.0 and reg[0 | 128] < 0, then the result is +infinity
- if reg[A] is +infinity and reg[0 | 128] > 0, then the result is +infinity
- if reg[A] is -0.0 and reg[0 | 128] > 0 but not a finite odd integer, then the result is 0.0
- if the reg[A] is -infinity and reg[0 | 128] < 0 but not a finite odd integer, then the result is 0.0
- if reg[A] is -0.0 and the reg[0 | 128] is a positive finite odd integer, then the result is -0.0
- if reg[A] is -infinity and reg[0 | 128] is a negative finite odd integer, then the result is -0.0
- if reg[A] is -0.0 and reg[0 | 128] < 0 but not a finite odd integer, then the result is +infinity
- if reg[A] is -infinity and reg[0 | 128] > 0 but not a finite odd integer, then the result is +infinity
- if reg[A] is -0.0 and reg[0 | 128] is a negative finite odd integer, then the result is -infinity
- if reg[A] is -infinity and reg[0 | 128] is a positive finite odd integer, then the result is -infinity
- if reg[A] < 0 and reg[0 | 128] is a finite even integer, then the result is equal to | reg[A] | to the power of reg[0 | 128]
- if reg[A] < 0 and reg[0 | 128] is a finite odd integer, then the result is equal to the negative of | reg[A] | to the power of reg[0 | 128]
- if reg[A] < 0 and finite and reg[0 | 128] is finite and not an integer, then the result is NaN

FPOWI Floating point power by immediate value

Syntax: **FPOWI, signedByte**

Description: The signed byte value is converted to floating point and the floating point value in register A is raised to the power of the converted value and stored in register A.

reg[A] = reg[A] ** float[signedByte]

Opcode: **39**

Byte 2: **signedByte**

A signed byte value (-128 to 127).

Special Cases:

- if *signedByte* is 0, then the result is 1.0
- if *signedByte* is 1, then the result is the same as the A value
- if reg[A] is NaN and *signedByte* is nonzero, then the result is NaN
- if reg[A] is 0.0 and *signedByte* > 0, then the result is 0.0
- if reg[A] is +infinity and *signedByte* < 0, then the result is 0.0
- if reg[A] is 0.0 and *signedByte* < 0, then the result is +infinity
- if reg[A] is +infinity and *signedByte* > 0, then the result is +infinity
- if reg[A] is -0.0 and *signedByte* > 0 but not an odd integer, then the result is 0.0
- if the reg[A] is -infinity and *signedByte* < 0 but not an odd integer, then the result is 0.0
- if reg[A] is -0.0 and *signedByte* is a positive odd integer, then the result is -0.0
- if reg[A] is -infinity and *signedByte* is a negative odd integer, then the result is -0.0
- if reg[A] is -0.0 and *signedByte* < 0 but not an odd integer, then the result is +infinity
- if reg[A] is -infinity and *signedByte* > 0 but not an odd integer, then the result is +infinity
- if reg[A] is -0.0 and *signedByte* is a negative odd integer, then the result is -infinity
- if reg[A] is -infinity and *signedByte* is a positive odd integer, then the result is -infinity
- if reg[A] < 0 and *signedByte* is an even integer, then the result is equal to | reg[A] | to the power of *signedByte*

- if $\text{reg}[A] < 0$ and *signedByte* is an odd integer,
then the result is equal to the negative of $|\text{reg}[A]|$ to the power of *signedByte*

FRAC Get fractional part of floating point value

Syntax: **FRAC**

Description: Register A is loaded with the fractional part the floating point value in register A. The sign of the fraction is the same as the sign of the original value.

Opcode: **63**

Special Cases: • if $\text{reg}[A]$ is NaN or infinity, then the result is NaN

FREAD Read floating point value

Syntax: **FREAD, register**

Return: **float32Value**

Description: The floating point value of *register* is returned. The four bytes of the 32-bit floating point value must be read immediately following this instruction.

Return 32-bit floating point value from $\text{reg}[\text{register}]$

Opcode: **1A**

Byte 2: **register**
Register number (0 to 255).

Return: **float32Value**
Four bytes representing a 32-bit floating point value (MSB first).

Special Cases: • if *register* is 64-bit, the value is converted to 32-bit before being sent.
• if PIC mode is selected, the value is converted to PIC format before being sent.

See Also: SETREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND

FREAD0 Read floating point value from register 0

Syntax: **FREAD0**

Return: **float32Value**

Description: If register A is 32-bit, the floating point value from register 0 is returned. If register A is 64-bit, the floating point value from register 128 is returned. The four bytes of the 32-bit floating point value must be read immediately following this instruction.

if $\text{reg}[A]$ is 32-bit, return 32-bit floating point value from $\text{reg}[0]$
if $\text{reg}[A]$ is 64-bit, convert 64-bit value from $\text{reg}[128]$ and return 32-bit floating point value

Opcode: **1D**

Return: **float32Value**

Four bytes representing the 32-bit floating point value (MSB first).

Special Cases:

- if reg[A] is 64-bit, the value is converted to 32-bit before being sent.
- if PIC mode is selected, the value is converted to PIC format before being sent.

See Also: SETREAD, FREAD, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND

FREADA Read floating point value from register A

Syntax: **FREADA**

Return: **float32Value**

Description: The floating point value of register A is returned. The four bytes of the 32-bit floating point value must be read immediately following this instruction.

Return 32-bit floating point value from reg[A]

Opcode: **1B**

Return: **float32Value**

Four bytes representing the 32-bit floating point value (MSB first).

Special Cases:

- if reg[A] is 64-bit, the value is converted to 32-bit before being sent.
- if PIC mode is selected, the value is converted to PIC format before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND

FREADX Read floating point value from register X

Syntax: **FREADX**

Return: **float32Value**

Description: The floating point value from register X is returned, and X is incremented to the next register. The four bytes of the 32-bit floating point value must be read immediately following this instruction.

Return 32-bit value floating point from reg[X], X = X + 1

Opcode: **1C**

Return: **float32Value**

Four bytes representing the 32-bit floating point value (MSB first).

Special Cases:

- if reg[X] is 64-bit, the value is converted to 32-bit before being sent.
- if PIC mode is selected, the value is converted to PIC format before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND

FSET Set register A*Syntax:* **FSET, register***Description:* Set register A to the value of *register*.

if reg[A] = reg[register]

Opcode: **20***Byte 2:* **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
 • if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

FSET0 Set register A from register 0*Syntax:* **FSET0***Description:* If register A is 32-bit, it is set to the value of register 0. If register A is 64-bit, it is set to the value of register 128.

if reg[A] is 32-bit, reg[A] = reg[0]

if reg[A] is 64-bit, reg[A] = reg[128]

Opcode: **29****FSETI Set register from immediate value***Syntax:* **FSETI, signedByte***Description:* The signed byte value is converted to floating point and stored in register A.

reg[A] = float(signedByte)

Opcode: **32***Byte 2:* **signedByte**

A signed byte value (-128 to 127).

FSPLIT Split integer and fractional portions of floating point value*Syntax:* **FSPLIT***Description:* The integer portion of the original value in register A is stored in register A. If register A is 32-bit, the fractional portion of the original value is stored in register 0. If register A is 64-bit, the fractional portion of the original value is stored in register 128. Both values are stored as floating point values.

reg[A] = float(integer portion of reg[A])

if reg[A] is 32-bit, reg[0] = fractional portion of reg[A]
 if reg[A] is 64-bit, reg[128] = fractional portion of reg[A]

Opcode: **64**

Special Cases: • if reg[A] is NaN or Infinity, reg[A] is set to zero
 • if reg[A] is NaN or Infinity, reg[0 | 128] is set to NaN

FSTATUS Get floating point status

Syntax: **FSTATUS, register**

Description: Set the internal status byte to the floating point status of the value in *register*. The status byte can be used directly by instructions in user-defined functions, or read by the microcontroller with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	I	N	S	Z
Bit 3	Infinity		Set if the value is an infinity					
Bit 2	Not-a-Number		Set if the value is not a valid number					
Bit 1	Sign		Set if the value is negative					
Bit 0	Zero		Set if the value is zero					

status = floatstatus(reg[*register*])

Opcode: **3B**

Byte 2: **register**
 Register number (0 to 255).

See Also: FSTATUSA, LSTATUS, LSTATUSA, READSTATUS

FSTATUSA Get floating point status of register A

Syntax: **FSTATUSA**

Description: Set the internal status byte to the floating point status of the value in register A. The status byte can be used directly by instructions in user-defined functions, or read by the microcontroller with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	I	N	S	Z
Bit 3	Infinity		Set if the value is an infinity					
Bit 2	Not-a-Number		Set if the value is not a valid number					
Bit 1	Sign		Set if the value is negative					
Bit 0	Zero		Set if the value is zero					

status = floatstatus(reg[A])

Opcode: **3C**

See Also: FSTATUS, LSTATUS, LSTATUSA, READSTATUS

FSUB Floating point subtract

Syntax: **FSUB, register**

Description: The floating point value in *register* is subtracted from the value in register A.

$\text{reg}[A] = \text{reg}[A] - \text{reg}[\text{register}]$

Opcode: **22**

Byte 2: **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN
- if both values are infinity and the same sign, then the result is NaN
- if reg[A] is +infinity and reg[*register*] is not +infinity, then the result is +infinity
- if reg[A] is -infinity and reg[*register*] is not -infinity, then the result is -infinity
- if reg[A] is not an infinity and reg[*register*] is an infinity, then the result is an infinity of the opposite sign as reg[*register*]

FSUB0 Floating point subtract register 0

Syntax: **FSUB0**

Description: If register A is 32-bit, the floating point value in register 0 is subtracted from the value in register A. If register A is 64-bit, the floating point value in register 128 is subtracted from the value in register A.

if reg[A] is 32-bit, $\text{reg}[A] = \text{reg}[A] - \text{reg}[0]$
 if reg[A] is 64-bit, $\text{reg}[A] = \text{reg}[A] - \text{reg}[128]$

Opcode: **2B**

Special Cases:

- if either value is NaN, then the result is NaN
- if both values are infinity and the same sign, then the result is NaN
- if reg[A] is +infinity and reg[0 | 128] is not +infinity, then the result is +infinity
- if reg[A] is -infinity and reg[0 | 128] is not -infinity, then the result is -infinity
- if reg[A] is not an infinity and reg[0 | 128] is an infinity, then the result is an infinity of the opposite sign as reg[0 | 128]

FSUBI Floating point subtract immediate value

Syntax: **FSUBI, signedByte**

Description: The signed byte value is converted to floating point and subtracted from the value in register A.

$\text{reg}[A] = \text{reg}[A] - \text{float}[\text{signedByte}]$

Opcode: **34**
Byte 2: ***signedByte***
 A signed byte value (-128 to 127).

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if reg[A] is +infinity, then the result is +infinity
- if reg[A] is -infinity, then the result is -infinity

FSUBR Floating point subtract (reversed)

Syntax: **FSUBR, *register***

Description: The floating point value in register A is subtracted from the value in *register* and the result is stored in register A.

$$\text{reg}[A] = \text{reg}[\text{register}] - \text{reg}[A]$$

Opcode: **23**
Byte 2: ***register***
 Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN
- if both values are infinity and the same sign, then the result is NaN
- if reg[*register*] is +infinity and reg[A] is not +infinity, then the result is +infinity
- if reg[*register*] is -infinity and reg[A] is not -infinity, then the result is -infinity
- if reg[*register*] is not an infinity and reg[A] is an infinity, then the result is an infinity of the opposite sign as reg[A]

FSUBR0 Floating point subtract register 0 (reversed)

Syntax: **FSUBR0**

Description: If register A is 32-bit, the floating point value in register A is subtracted from the value in register 0, and the result is stored in register A. If register A is 64-bit, the floating point value in register A is subtracted from the value in register 128, and the result is stored in register A.

$$\begin{aligned} \text{if reg}[A] \text{ is 32-bit, } & \text{reg}[A] = \text{reg}[0] - \text{reg}[A] \\ \text{if reg}[A] \text{ is 64-bit, } & \text{reg}[A] = \text{reg}[128] - \text{reg}[A] \end{aligned}$$

Opcode: **2C**

Special Cases:

- if either value is NaN, then the result is NaN
- if both values are infinity and the same sign, then the result is NaN
- if reg[*register*] is +infinity and reg[0 | 128] is not +infinity, then the result is +infinity
- if reg[*register*] is -infinity and reg[A] is not -infinity, then the result is -infinity
- if reg[*register*] is not an infinity and reg[A] is an infinity, then the result is an infinity of the opposite sign as reg[A]

FSUBRI Floating point subtract immediate value (reversed)

Syntax: **FSUBRI, signedByte**

Description: The signed byte value is converted to floating point and the value in register A is subtracted from the converted value. The result is stored in register A.

$\text{reg}[A] = \text{float}[\text{signedByte}] - \text{reg}[A]$

Opcode: **35**

Byte 2: **signedByte**

A signed byte value (-128 to 127).

Special Cases:

- if reg[A] is NaN, then the result is NaN
- if reg[A] is +infinity, then the result is +infinity
- if reg[A] is -infinity, then the result is -infinity

FTABLE Floating point reverse table lookup

Syntax: **FTABLE, conditionCode, tableSize, tableItem1..tableItemN**

Description: A reverse table lookup is performed on the floating point value in register A. The value is compared to the values in the 32-bit table using the *conditionCode*. The index number of the first table entry that satisfies the test condition is stored in register 0. If no entry is found, register 0 is unchanged. The index number for the first table entry is zero.

if reg[A] is 32-bit, reg[0] = index of table entry that matches test conditions for reg[A]

if reg[A] is 64-bit, reg[128] = index of table entry that matches test conditions for reg[A]

Opcode: **86**

Byte 2: **conditionCode**

The list of condition codes is as follows:

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal
PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite
PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)

TRUE	0x00	True
FALSE	0xFF	False

Byte 3: **tableSize**

Bytes 4-n: **tableItem1..tableItemN**

The number of 32-bit values specified by *tableSize*. Each 32-bit value is represented by four bytes (MSB first).

Special Cases:

- only valid inside user-defined functions stored in Flash memory.
- if reg[A] is 64-bit, then the value is converted to 32-bit before being used

See Also: TABLE, LTABLE, POLY

FTOA Convert floating point value to ASCII string

Syntax: **FTOA, format**

Description: The floating point value in register A is converted to an ASCII string.

Opcode: **1F**

Byte 2: **format**

The floating point value in register A is converted to an ASCII string and stored in the string buffer at the current selection point. The selection point is updated to point immediately after the inserted string, so multiple insertions can be appended. The byte immediately following the FTOA opcode is the format byte and determines the format of the converted value.

If *format* is zero, as many digits as necessary will be used to represent the number with up to eight significant digits. Very large or very small numbers are represented in exponential notation. The length of the displayed value is variable and can be from 3 to 12 characters in length. The special cases of NaN (Not a Number), +infinity, -infinity, and -0.0 are handled. Examples of the ASCII strings produced are as follows:

1.0	NaN	0.0
10e20	Infinity	-0.0
3.1415927	-Infinity	1.0
-52.333334	-3.5e-5	0.01

If *format* is non-zero, it is interpreted as a decimal number. The hundreds and tens digits specify the length of the converted string (to a maximum of 24), and the ones digit specifies the number of decimal points. If the floating point value is too large for the format specified, asterisks will be stored. If the number of decimal points is zero, no decimal point will be displayed. Examples of the display format are as follows: (note: leading spaces are shown where applicable)

<i>Value in register A</i>	<i>Format byte</i>	<i>Display format</i>
123.567	61 (6.1)	123.6
123.567	62 (6.2)	123.57
123.567	42 (4.2)	*. **
0.9999	20 (2.0)	1
0.9999	31 (3.1)	1.0

This instruction is usually followed by a READSTR instruction to read the string.

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, LTOA, READSTR, READSEL

FWRITE **Write floating point value**

Syntax: **FWRITE, register, float32Value**

Description: If the PIC data format has been selected (using the PICMODE instruction), the PIC format floating point value is converted to IEEE 754 format. If register is 32-bit, the floating point value is stored in register 0. If *register* is 64-bit, *float32Value* is converted to 64-bit before being stored in the register.

if *register* is 32-bit, reg[*register*] = 32-bit floating point value

if *register* is 64-bit, reg[*register*] = 32-bit value converted to 64-bit floating point

Opcode: **16**

Byte 2: **register**

Register number (0 to 255).

Bytes 3 to 6: **float32Value**

Four bytes representing a 32-bit floating point value (MSB first).

Special Cases:

- if *register* is 64-bit, the *float32Value* is converted to 64-bit before being stored.
- if *register* = 0 or 128, and SETARGS is not active
 - if reg[A] is 32-bit, the value is stored in registers 0
 - if reg[A] is 64-bit, the value is stored in registers 128
- if *register* = 0 or 128, and SETARGS is active
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEA, LWRITEX, DWRITE, WRIND, SETARGS

FWRITE0 **Write floating point value to register 0**

Syntax: **FWRITE0, float32Value**

Description: If the PIC data format has been selected (using the PICMODE instruction), the PIC format floating point value is converted to IEEE 754 format. If register A is 32-bit, the floating point value is stored in register 0. If register A is 64-bit, the 32-bit floating point value is converted to 64-bit before being stored in register 128.

if reg[A] is 32-bit, reg[0] = 32-bit floating point value

if reg[A] is 64-bit, reg[128] = 32-bit value converted to 64-bit floating point

Opcode: **19**

Bytes 2 to 5: **float32Value**

Four bytes representing a 32-bit floating point value (MSB first).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: FWRITE, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEA, LWRITEX, DWRITE, WRIND, SETARGS

FWRITEA Write floating point value to register A

Syntax: **FWRITEA, float32Value**

Description: If the PIC data format has been selected (using the PICMODE instruction), the PIC format floating point value is converted to IEEE 754 format. If register A is 32-bit, the floating point value is stored in register A. If register A is 64-bit, the 32-bit floating point value is converted to 64-bit before being stored in the register A.

if reg[A] is 32-bit, reg[A] = 32-bit floating point value
 if reg[A] is 64-bit, reg[A] = 32-bit value converted to 64-bit floating point

Opcode: **17**

Bytes 2 to 5: **float32Value**

Four bytes representing a 32-bit floating point value (MSB first).

See Also: FWRITE, FWRITE0, FWRITEX, LWRITE, LWRITE0, LWRITEA, LWRITEX, DWRITE, WRIND

FWRITEX Write floating point value to register X

Syntax: **FWRITEX, float32Value**

Description: If the PIC data format has been selected (using the PICMODE instruction), the PIC format floating point value is converted to IEEE 754 format. If register X is 32-bit, the floating point value is stored in register X. If register X is 64-bit, the 32-bit floating point value is converted to 64-bit before being stored in the register X. Register X is incremented to the next register.

if reg[X] is 32-bit, reg[X] = 32-bit floating point value
 if reg[X] is 64-bit, reg[X] = 32-bit value converted to 64-bit floating point
 $X = X + 1$

Opcode: **18**

Bytes 2 to 5: **float32Value**

Four bytes representing a 32-bit floating point value (MSB first).

Special Cases:

- if reg[X] is 32-bit, it will not increment past register 127
- if reg[X] is 64-bit, it will not increment past register 255

See Also: FWRITE, FWRITE0, FWRITEA, LWRITE, LWRITE0, LWRITEA, LWRITEX, DWRITE, WRIND

GOTO Computed GOTO

Syntax: **GOTO, register**

Description: This instruction jumps to the address determined by adding the register value to the current function address.

Opcode: **89**

Byte 2: **register**
Register number (0 to 255).

This instruction is only valid in a user-defined function in Flash memory. If the register value is negative, or the new address is outside the address range of the function, a function return occurs.

See Also: BRA, BRA,cc, JMP, JMP,cc, RET, RET,cc

IEEEMODE Select IEEE floating point format

Syntax: **IEEEMODE**

Description: Selects the IEEE 754 32-bit floating point format for the FREAD, FREADA, FREADX, FWRITE, FWRITEA, and FWRITEX instructions. This is the default mode on reset and only needs to be changed if the PICMODE instruction has been used.

Opcode: **F4**

INDA Select A using value in register

Syntax: **INDA, register**

Description: Select register A using the lower 8 bits of the value in *register*.

$A = \text{reg}[\text{register}]$

Opcode: **7C**

Byte 2: **register**
Register number (0 to 255).

See Also: SELECTA, SELECTX, INDX

INDX Select X using value in register

Syntax: **INDX, register**

Description: Select register X using the lower 8 bits of the value in *register*.

$X = \text{reg}[\text{register}]$

Opcode: **7D**
Byte 2: **register**
 Register number (0 to 255).

See Also: SELECTA, SELECTX, INDA

JMP **Unconditional jump**

Syntax: **JMP, address**

Description: This instruction jumps unconditionally to the instruction at the *address* specified. If the jump is within -128 to 127 bytes of the address of the next instruction, the **BRA** instruction can be used.

Opcode: **83**
Bytes 2-3: **address**
 An unsigned word value that specifies the address of the next instruction.

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: BRA, BRA,cc, GOTO, JMP,cc, RET, RET,cc

JMP, cc **Conditional jump**

Syntax: **JMP, conditionCode, address**

Description: If the condition is true, this instruction jumps to the instruction at the *address* specified. If the condition is false, no jump occurs. If the jump is within -128 to 127 bytes of the address of the next instruction, the **BRA** instruction can be used.

Opcode: **84**
Byte 2: **conditionCode**
 The list of condition codes is as follows:

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal
PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite

PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)
TRUE	0x00	True
FALSE	0xFF	False

Bytes 3-4: **address**
An unsigned word value that specifies the address of the next instruction.

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: BRA, BRA,CC, GOTO, JMP, RET, RET,CC

LABS Long Integer absolute value

Syntax: **LABS**

Description: The absolute value of the long integer value in register A is stored in register A.

$\text{reg}[A] = |\text{reg}[A]|$, status = longStatus(reg[A])

Opcode: **BC**

LADD Long integer add

Syntax: **LADD, register**

Description: The long integer value in *register* is added to register A.

$\text{reg}[A] = \text{reg}[A] + \text{reg}[\text{register}]$, status = longStatus(reg[A])

Opcode: **9D**

Byte 2: **register**
Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
• if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LADD0 Long integer add register 0

Syntax: **LADD0**

Description: If register A is 32-bit, the long integer value in register 0 is added to register A. If register A is 64-bit, the long integer value in register 128 is added to register A.

if reg[A] is 32-bit, $\text{reg}[A] = \text{reg}[A] + \text{reg}[0]$
if reg[A] is 64-bit, $\text{reg}[A] = \text{reg}[A] + \text{reg}[128]$
status = longStatus(reg[A])

Opcode: **A6**

LADDI Long integer add immediate value

Syntax: **LADDI, signedByte**

Description: The signed byte value is converted to a long integer and added to register A.

$\text{reg}[A] = \text{reg}[A] + \text{long}(\text{signedByte}), \text{status} = \text{longStatus}(\text{reg}[A])$

Opcode: **AF**

Byte 2: **signedByte**
A signed byte value (-128 to 127).

LAND Long integer AND

Syntax: **LAND, register**

Description: The bitwise AND of the values in register A and *register* is stored in register A.

$\text{reg}[A] = \text{reg}[A] \text{ AND } \text{reg}[\text{register}], \text{status} = \text{longStatus}(\text{reg}[A])$

Opcode: **C0**

Byte 2: **register**
Register number (0 to 255).

Special Cases: • if $\text{reg}[A]$ is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
• if $\text{reg}[A]$ is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LANDI Long integer AND immediate value (new in uM-FPU64)

Syntax: **LANDI, unsignedByte**

Description: The unsigned byte value is converted to a long integer and the bitwise AND of register A and the value is stored in register A.

$\text{reg}[A] = \text{reg}[A] \text{ AND } \text{long}(\text{signedByte}), \text{status} = \text{longStatus}(\text{reg}[A])$

Opcode: **CB**

Byte 2: **unsignedByte**
An unsigned byte value (0 to 255).

LBIT Long integer Bit Clear, Set, Toggle, Test (new in uM-FPU64)

Syntax: **LBIT, bitCode, register**

Description: The specified bit in *register* is cleared to zero, set to one, toggled, or tested. The action and bit number are specified by the *bitCode*. The status byte is set according to the state of selected bit after the action has been completed (Z if the bit is zero, NZ if the bit is non-zero).

Opcode: **74**

Byte 2: **bitCode**

Bit 7 6 5 4 3 2 1 0

Op	Bit Number
----	------------

Bits 7:6

Operation

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
CLEAR	0x00	Clear bit
SET	0x40	Set bit
TOGGLE	0x80	Toggle bit
TEST	0xC0	Test bit

Bits 5:0

Bit Number

<i>Value</i>	<i>Description</i>
0-63	Bit Number

Byte 3: **register**

Register number (0 to 255).

LCMP Long integer compare

Syntax: **LCMP, register**

Description: Compares the signed long integer value in register A with the value in *register* and sets the internal status byte as follows:

Bit 7	6	5	4	3	2	1	0
1	-	-	-	-	-	S	Z

Bit 1 Sign

Set if $\text{reg}[A] < \text{reg}[\text{register}]$

Bit 0 Zero

Set if $\text{reg}[A] = \text{reg}[\text{register}]$

If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{reg}[\text{register}]$

$\text{status} = \text{longStatus}(\text{reg}[A] - \text{reg}[\text{register}])$

Opcode: **A1**

Byte 2: **register**

Register number (0 to 255).

The status byte can be read with the **READSTATUS** instruction.

Special Cases:

- if $\text{reg}[A]$ is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if $\text{reg}[A]$ is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LCMP0 Long integer compare register 0

Syntax: **LCMP0**

Description:

if $\text{reg}[A]$ is 32-bit, $\text{status} = \text{longStatus}(\text{reg}[A] - \text{reg}[0])$
 if $\text{reg}[A]$ is 64-bit, $\text{status} = \text{longStatus}(\text{reg}[A] - \text{reg}[128])$

If register A is 32-bit, the signed long integer value in register A is compared with the value in register 0, and the internal status byte is set. If register A is 64-bit, the signed long integer value in

register A is compared with the value in register 128, and the internal status byte is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if $\text{reg}[A] < \text{reg}[0 \mid 128]$

Bit 0 Zero Set if $\text{reg}[A] = \text{reg}[0 \mid 128]$

If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{reg}[0 \mid 128]$

Opcode: **AA**

The status byte can be read with the **READSTATUS** instruction.

LCMP2 Long integer compare

Syntax: **LCMP2, register1, register2**

Description: Compares the signed long integer value in *register1* with the value in *register2* and sets the internal status byte as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if $\text{reg}[\text{register1}] < \text{reg}[\text{register2}]$

Bit 0 Zero Set if $\text{reg}[\text{register1}] = \text{reg}[\text{register2}]$

If neither Bit 0 or Bit 1 is set, $\text{reg}[\text{register1}] > \text{reg}[\text{register2}]$

$\text{status} = \text{longStatus}(\text{reg}[\text{register1}] - \text{reg}[\text{register2}])$

Opcode: **B9**

Byte 2: **register1**

Register number (0 to 255).

Byte 3: **register2**

Register number (0 to 255).

The status byte can be read with the **READSTATUS** instruction.

Special Cases: • if *register1* is 32-bit and *register2* is 64-bit, the value is converted to 32-bit before being used
• if *register1* is 64-bit and *register2* is 32-bit, the value is converted to 64-bit before being used

LCMPI Long integer compare immediate value

Syntax: **LCMPI, signedByte**

Description: $\text{status} = \text{longStatus}(\text{reg}[A] - \text{long}(\text{signedByte}))$

The signed byte value is converted to long integer and compared to the signed long integer value in register A. The internal status byte is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if $\text{reg}[A] < \text{long}(\text{signedByte})$

Bit 0	Zero	Set if $\text{reg}[A] = \text{long}(\text{signedByte})$
Bit 1	Greater	If neither Bit 0 or Bit 1 is set, $\text{reg}[A] > \text{long}(\text{signedByte})$

Opcode: **B3**
Byte 2: ***signedByte***
 A signed byte value (-128 to 127).

The status byte can be read with the **READSTATUS** instruction.

LCOPYI Copy Immediate value *(new in uM-FPU64)*

Syntax: **LCOPYI, signedByte, register**

Description: The 8-bit signed value is converted to a long integer and copied to *register*.

```
reg[register] = long(signedByte), status = longStatus(reg[register])
```

<i>Opcode:</i>	11
<i>Byte 2:</i>	<i>signedByte</i> An signed byte value (-128 to 127).
<i>Byte 3:</i>	<i>register</i> Register number (0 to 255).

LDEC **Long integer decrement**

Syntax: **LDEC, register**

Description: The long integer value in *register* is decremented by one. The long integer status is stored in the status byte.

```
reg[register] = reg[register] - 1, status = longStatus(reg[register])
```

Opcode: **BE**
Byte 2: **register**
 Register number (0 to 255).

LDIV	Long integer divide
-------------	----------------------------

Syntax: **LDIV, register**

Description: The long integer value in register A is divided by the signed value in *register*, and the result is stored in register A. If register A is 32-bit, the remainder is stored in register 0. If register A is 64-bit, the remainder is stored in register 128.

```
reg[A] = reg[A] / reg[register]
if reg[A] is 32-bit, reg[0] = remainder
if reg[A] is 64-bit, reg[128] = remainder
status = longStatus(reg[A])
```

Opcode: **A0**

Byte 2: **register**
 Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if reg[*register*] is zero, the result is the largest positive integer (32-bit: \$7FFFFFFF, 64-bit:\$FFFFFFFFFFFFFFFF)

LDIV0 Long integer divide by register 0

Syntax: **LDIV0**

Description: If register A is 32-bit, the long integer value in register A is divided by the signed long integer value in register 0, and the result is stored in register A with the remainder stored in register 0. If register A is 64-bit, the long integer value in register A is divided by the signed long integer value in register 128, and the result is stored in register A with the remainder stored in register 128.

if reg[A] is 32-bit, reg[A] = reg[A] / reg[0], reg[0] = remainder
 if reg[A] is 64-bit, reg[A] = reg[A] / reg[128], reg[128] = remainder
 status = longStatus(reg[A])

Opcode: **A9**

Special Cases:

- if reg[0 | 128] is zero, the result is the largest positive integer (32-bit: \$7FFFFFFF, 64-bit:\$FFFFFFFFFFFFFFFF)

LDIVI Long integer divide by immediate value

Syntax: **LDIVI, signedByte**

Description: The signed byte value is converted to a long integer and register A is divided by the converted value. The result is stored in register A. If register A is 32-bit, the remainder is stored in register 0. If register A is 64-bit, the remainder is stored in register 128.

reg[A] = reg[A] / long(*signedByte*)
 if reg[A] is 32-bit, reg[0] = remainder
 if reg[A] is 64-bit, reg[128] = remainder
 status = longStatus(reg[A])

Opcode: **B2**

Byte 2: **signedByte**
 A signed byte value (-128 to 127).

Special Cases:

- if the signed byte value is zero, the result is the largest positive integer (32-bit: \$7FFFFFFF, 64-bit:\$FFFFFFFFFFFFFFFF)

LEFT Left Parenthesis

Syntax: **LEFT**

Description: Saves the current registerA and allocates a temporary register as register A.

Opcode: **14**

The **LEFT** parenthesis instruction saves the current register A selection, allocates the next temporary register, sets the value of the temporary register to the current register A value, then selects the temporary register as register A. The **RIGHT** parenthesis instruction is used to restore previous values. When used together, these instructions are like parentheses in an equation, and can be used to allocate temporary registers, and change the order of a calculation. Parentheses can be nested up to eight levels. If register A is 32-bit, the 32-bit temporary registers are used. If register A is 64-bit, the 64-bit temporary registers are used.

Special Cases: • If the maximum number of temporary register is exceeded, reg[A] is set to NaN.

See Also: **RIGHT**

LINC **Long integer increment**

Syntax: **LINC, register**

Description: The long integer value in *register* is incremented by one. The long integer status is stored in the status byte.

$\text{reg}[\text{register}] = \text{reg}[\text{register}] + 1, \text{status} = \text{longStatus}(\text{reg}[\text{register}])$

Opcode: **BD**

Byte 2: **register**
Register number (0 to 255).

LMAX **Long integer maximum**

Syntax: **LMAX, register**

Description: The maximum signed long integer value of register A and *register* is stored in register A.

$\text{reg}[A] = \max(\text{reg}[A], \text{reg}[\text{register}]), \text{status} = \text{longStatus}(\text{reg}[A])$

Opcode: **C5**

Byte 2: **register**
Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
• if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
• if either value is NaN, then the result is NaN

LMIN **Long integer minimum**

Syntax: **LMIN, register**

Description: The minimum signed long integer value of register A and *register* is stored in register A.

$$\text{reg}[A] = \min(\text{reg}[A], \text{reg}[\text{register}]), \text{status} = \text{longStatus}(\text{reg}[A])$$

Opcode: **C4**

Byte 2: **register**
Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
- if either value is NaN, then the result is NaN

LMUL Long integer multiply

Syntax: **LMUL, register**

Description: The long integer value in register A is multiplied by the value in *register*.

$$\text{reg}[A] = \text{reg}[A] * \text{reg}[\text{register}], \text{status} = \text{longStatus}(\text{reg}[A])$$

Opcode: **9F**

Byte 2: **register**
Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LMULO Long integer multiply by register 0

Syntax: **LMULO**

Description: If register A is 32-bit, the long integer value in register A is multiplied by the value in register 0. If register A is 64-bit, the long integer value in register A is multiplied by the value in register 128.

if reg[A] is 32-bit, $\text{reg}[A] = \text{reg}[A] * \text{reg}[0]$
if reg[A] is 64-bit, $\text{reg}[A] = \text{reg}[A] * \text{reg}[128]$
 $\text{status} = \text{longStatus}(\text{reg}[A])$

Opcode: **A8**

LMULI Long integer multiply by immediate value

Syntax: **LMULI, signedByte**

Description: The signed byte value is converted to a long integer and register A is multiplied by the converted value.

$$\text{reg}[A] = \text{reg}[A] * \text{long}(\text{signedByte}), \text{status} = \text{longStatus}(\text{reg}[A])$$

Opcode: **B1**

Byte 2: ***signedByte***
A signed byte value (-128 to 127).

LNEG Long integer negate

Syntax: **LNEG**

Description: The negative of the long integer value in register A is stored in register A.

reg[A] = -reg[A], status = longStatus(reg[A])

Opcode: **BB**

LNOT A = NOT A

Syntax: **LNOT**

Description: The bitwise complement of the value in register A is stored in register A.

reg[A] = NOT reg[A], status = longStatus(reg[A])

Opcode: **BF**

LOAD Load register 0 with value of register

Syntax: **LOAD, register**

Description: If register A is 32-bit, register 0 is loaded with the value in *register*. If register A is 64-bit, register 128 is loaded with the value in *register*.

if reg[A] is 32-bit, reg[0] = reg[*register*]
if reg[A] is 64-bit, reg[128] = reg[*register*]
status = longStatus(reg[A])

Opcode: **0A**

Byte 2: ***register***
Register number (0 to 255).

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **LOADA, LOADX, ALOADX, XSAVE, XSAVEA, SETARGS**

LOADA Load register 0 with the value of register A

Syntax: **LOADA**

Description: If register A is 32-bit, register 0 is loaded with the value in register A. If register A is 64-bit, register 128 is loaded with the value in register A.

if reg[A] is 32-bit, reg[0] = reg[A], status = longStatus(reg[0])
 if reg[A] is 64-bit, reg[128] = reg[A], status = longStatus(reg[128])

Opcode: **0B**

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOAD, LOADX, ALOADX, XSAVE, XSAVEA

LOADBYTE Load register 0 with 8-bit signed value

Syntax: **LOADBYTE, signedByte**

Description: If register A is 32-bit, register 0 is loaded with the 8-bit signed integer value converted to 32-bit floating point value. If register A is 64-bit, register 128 is loaded with the 8-bit signed integer value converted to 64-bit floating point value.

if reg[A] is 32-bit, reg[0] = float(*signedByte*)
 if reg[A] is 64-bit, reg[128] = float(*signedByte*)

Opcode: **59**

Byte 2: **signedByte**
 A signed byte value (-128 to 127).

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LOADE Load register 0 with floating point value of e

Syntax: **LOADE**

Description: If register A is 32-bit, register 0 is loaded with the floating point value of e (2.7182818). If register A is 64-bit, register 128 is loaded with the floating point value of e (2.718281828459045).

if reg[A] is 32-bit, reg[0] = 2.7182818
 if reg[A] is 64-bit, reg[128] = 2.718281828459045

Opcode: **5D**

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS**

LOADIND Load Indirect *(modified in uM-FPU64)*

Syntax: **LOADIND, register**

Description: If register A is 32-bit, register 0 is loaded with the data value from the indirect pointer specified by *register*. If register A is 64-bit, register 128 is loaded with the data value from the indirect pointer specified by *register*.

if reg[A] is 32-bit, reg[0] = data value pointed to by *register*
 if reg[A] is 64-bit, reg[128] = data value pointed to by *register*

Opcode: **7A**

Byte 2: **register**
 Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and the data value pointed to by *register* is 64-bit, the value is converted to 32-bit before being used
 • if reg[A] is 64-bit and the data value pointed to by *register* is 32-bit, the value is converted to 64-bit before being used

Special Cases: • if SETARGS is active
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **SETIND, ADDIND, WRIND, RDIND, COPYIND, SAVEIND**
LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LOADMA Load register 0 with the value from matrix A

Syntax: **LOADMA, row, column**

Description: Load register 0 with a value from matrix A. Row and column numbers start from 0.

if reg[A] is 32-bit, reg[0] = matrix A [*row*, *column*]
 if reg[A] is 64-bit, reg[128] = matrix A [*row*, *column*]

Opcode: **68**

Byte 2: **row**
 A value from 0 to n, specifying the row of the matrix.

Byte 3: **column**
 A value from 0 to n, specifying the column of the matrix.

Special Cases: • if *row* or *column* is out of range, register 0 is set to NaN.
 • if reg[A] is 64-bit, the value from the matrix is converted to 32-bit before being stored in register 128

See Also: **MOP, SELECTMA, SELECTMB, SELECTMC, LOADMB, LOADMC, SAVEMA,**

SAVEMB, SAVEMC

LOADMB Load register 0 with the value from matrix A*Syntax:* **LOADMA, row, column***Description:* Load register 0 with a value from matrix B. Row and column numbers start from 0.

if reg[A] is 32-bit, reg[0] = matrix B [row, column]
 if reg[A] is 64-bit, reg[128] = matrix B [row, column]

Opcode: **69**

Byte 2: **row**
 A value from 0 to n, specifying the row of the matrix.

Byte 3: **column**
 A value from 0 to n, specifying the column of the matrix.

Special Cases:

- if row or column is out of range, register 0 is set to NaN.
- if reg[A] is 64-bit, the value from the matrix is converted to 32-bit before being stored in register 128

See Also: MOP, SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMC, SAVEMA,
 SAVEMB, SAVEMC

LOADMC Load register 0 with the value from matrix A*Syntax:* **LOADMA, row, column***Description:* Load register 0 with a value from matrix C. Row and column numbers start from 0.

if reg[A] is 32-bit, reg[0] = matrix C [row, column]
 if reg[A] is 64-bit, reg[128] = matrix C [row, column]

Opcode: **6A**

Byte 2: **row**
 A value from 0 to n, specifying the row of the matrix.

Byte 3: **column**
 A value from 0 to n, specifying the column of the matrix.

Special Cases:

- if row or column is out of range, register 0 is set to NaN.
- if reg[A] is 64-bit, the value from the matrix is converted to 32-bit before being stored in register 128

See Also: MOP, SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMB, SAVEMA,
 SAVEMB, SAVEMC

LOADPI Load register 0 with value of Pi*Syntax:* **LOADPI***Description:* If register A is 32-bit, register 0 is loaded with the floating point value of pi (3.1415927). If register A is 64-bit, register 128 is loaded with the floating point value of pi (3.141592653589793).

if reg[A] is 32-bit, reg[0] = 3.1415927
 if reg[A] is 64-bit, reg[128] = 3.141592653589793

Opcode: **5E**

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LONGBYTE,
 LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LOADUBYTE Load register 0 with 8-bit unsigned value*Syntax:* **LOADUBYTE, unsignedByte***Description:* If register A is 32-bit, register 0 is loaded with the 8-bit unsigned integer value converted to 32-bit floating point value. If register A is 64-bit, register 128 is loaded with the 8-bit unsigned integer value converted to 64-bit floating point value.

if reg[A] is 32-bit, reg[0] = float(unsignedByte)
 if reg[A] is 64-bit, reg[128] = float(unsignedByte)

Opcode: **5A**

Byte 2: **unsignedByte**
 An unsigned byte value (0 to 255).

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE,
 LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LOADUWORD Load register 0 with 16-bit unsigned value*Syntax:* **LOADUWORD, unsignedWord***Description:* If register A is 32-bit, register 0 is loaded with the 16-bit unsigned integer value converted to 32-bit floating point value. If register A is 64-bit, register 128 is loaded with the 16-bit unsigned integer value converted to 64-bit floating point value.

if reg[A] a 32-bit, $\text{reg}[0] = \text{float}(\text{unsignedWord})$
 if reg[A] a 64-bit, $\text{reg}[128] = \text{float}(\text{unsignedWord})$

Opcode: **5C**
Bytes 2-3: **unsignedWord**
 An unsigned word value (0 to 65535).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LOADIND, SETARGS

LOADWORD Load register 0 with 16-bit signed value

Syntax: **LOADWORD, signedWord**

Description: If register A is 32-bit, register 0 is loaded with the 16-bit signed integer value converted to 32-bit floating point value. If register A is 64-bit, register 128 is loaded with the 16-bit signed integer value converted to 64-bit floating point value.

if reg[A] is 32-bit, $\text{reg}[0] = \text{float}(\text{signedWord})$
 if reg[A] is 64-bit, $\text{reg}[128] = \text{float}(\text{signedWord})$

Opcode: **5B**
Bytes 2-3: **signedWord**
 A signed word value (-32768 to 32767).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADUBYTE, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LOADX Load register 0 with the value of register X

Syntax: **LOADX**

Description: If register A is 32-bit, register 0 is loaded with the value in register X. If register A is 64-bit, register 128 is loaded with the value in register X.

if reg[A] is 32-bit, $\text{reg}[0] = \text{reg}[X]$, $\text{status} = \text{longStatus}(\text{reg}[0])$, $X = X + 1$
 if reg[A] is 64-bit, $\text{reg}[128] = \text{reg}[X]$, $\text{status} = \text{longStatus}(\text{reg}[128])$, $X = X + 1$

Opcode: **0C**

Special Cases:

- if reg[X] is 32-bit, it will not increment past register 127
- if reg[X] is 64-bit, it will not increment past register 255

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **LOAD, LOADA, ALOADX, XSAVE, XSAVEA, SETARGS**

LOG Logarithm (base e)

Syntax: **LOG**

Description: Calculates the natural log of the floating point value in register A. The result is stored in register A. The number e (2.7182818) is the base of the natural system of logarithms.

$\text{reg}[A] = \log(\text{reg}[A])$

Opcode: **43**

Special Cases:

- if the value is NaN or less than zero, then the result is NaN
- if the value is +infinity, then the result is +infinity
- if the value is 0.0 or -0.0, then the result is -infinity

LOG10 Logarithm (base 10)

Syntax: **LOG10**

Description: Calculates the base 10 logarithm of the floating point value in register A. The result is stored in register A.

$\text{reg}[A] = \log_{10}(\text{reg}[A])$

Opcode: **44**

Special Cases:

- if the value is NaN or less than zero, then the result is NaN
- if the value is +infinity, then the result is +infinity
- if the value is 0.0 or -0.0, then the result is -infinity

LONGBYTE Load register 0 with 8-bit signed value

Syntax: **LONGBYTE, signedByte**

Description: If register A is 32-bit, the 8-bit signed value is converted to a long integer and stored in register 0. If register A is 64-bit, the 8-bit signed value is converted to a long integer and stored in register 128.

if reg[A] is 32-bit, $\text{reg}[0] = \text{long}(\text{signedByte})$, status = longStatus(reg[0])

if reg[A] is 64-bit, $\text{reg}[128] = \text{long}(\text{signedByte})$, status = longStatus(reg[128])

Opcode: **C6**

Byte 2: **signedByte**

A signed byte value (-128 to 127).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGUBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LONGUBYTE Load register 0 with 8-bit unsigned value

Syntax: **LONGUBYTE, unsignedByte**

Description: If register A is 32-bit, the 8-bit unsigned value is converted to a long integer and stored in register 0. If register A is 64-bit, the 8-bit unsigned value is converted to a long integer and stored in register 128.

if reg[A] is 32-bit, reg[0] = long(unsignedByte), status = longStatus(reg[0])
 if reg[A] is 64-bit, reg[128] = long(unsignedByte), status = longStatus(reg[128])

Opcode: **C7**

Byte 2: **unsignedByte**
 An unsigned byte value (0 to 255).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGWORD, LONGUWORD, LOADIND, SETARGS

LONGUWORD Load register 0 with 16-bit unsigned value

Syntax: **LONGUWORD, unsignedByte**

Description: If register A is 32-bit, the 16-bit unsigned value is converted to a long integer and stored in register 0. If register A is 64-bit, the 16-bit unsigned value is converted to a long integer and stored in register 128.

if reg[A] is 32-bit,
 reg[0] = long(unsigned (unsignedWord), status = longStatus(reg[0])
 if reg[A] is 64-bit,
 reg[128] = long(unsigned (unsignedWord), status = longStatus(reg[128])

Opcode: **C9**

Bytes 2-3: **unsignedWord**
 An unsigned word value (0 to 65535).

Special Cases:

- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGWORD, LOADIND, SETARGS**

LONGWORD Load register 0 with 16-bit signed value

Syntax: **LONGWORD, signedByte**

Description: If register A is 32-bit, the 16-bit signed value is converted to a long integer and stored in register 0.
If register A is 64-bit, the 16-bit signed value is converted to a long integer and stored in register 128.

if reg[A] is 32-bit, reg[0] = long(signed (*signedWord*), status = longStatus(reg[0])
if reg[A] is 64-bit, reg[128] = long(signed (*signedWord*), status = longStatus(reg[128])

Opcode: **C8**

Bytes 2-3: **signedWord**

A signed word value (-32768 to 32767).

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: **LOADBYTE, LOADUBYTE, LOADWORD, LOADUWORD, LOADE, LOADPI, LONGBYTE, LONGUBYTE, LONGUWORD, LOADIND, SETARGS**

LOR Long integer OR

Syntax: **LOR, register**

Description: The bitwise OR of the values in register A and *register* is stored in register A.

reg[A] = reg[A] OR reg[*register*], status = longStatus(reg[A])

Opcode: **C1**

Byte 2: **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
 • if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LORI Long integer OR immediate value (new in uM-FPU64)

Syntax: **LORI, unsignedByte**

Description: The unsigned byte value is converted to a long integer and the bitwise OR of register A and the value is stored in register A.

reg[A] = reg[A] OR long(*unsignedByte*), status = longStatus(reg[A])

Opcode: **CC**
Byte 2: **unsignedByte**
 An unsigned byte value (0 to 255).

LREAD Read long integer value

Syntax: **LREAD, register**

Description: The long integer value of *register* is returned. The four bytes of the 32-bit value must be read immediately following this instruction.

return 32-bit integer value from reg[*register*]

Opcode: **94**
Byte 2: **register**
 Register number (0 to 255).

Returns: **int32Value**
 Four bytes representing a 32-bit integer value (MSB first).

Special Cases: • if *register* is 64-bit, the value is converted to 32-bit before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD0, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

LREAD0 Read long integer value from register 0

Syntax: **LREAD0**

Description: If register A is 32-bit, the value of register 0 is returned. If register A is 64-bit, the value of register 128 is returned. The four bytes of the 32-bit value must be read immediately following this instruction.

if reg[A] is 32-bit, return 32-bit integer value from reg[0]
 if reg[A] is 64-bit, return 32-bit integer value from reg[128]

Opcode: **97**
Returns: **int32Value**
 Four bytes representing a 32-bit integer value (MSB first).

Special Cases: • if reg[A] is 64-bit, the value from reg[128] is converted to 32-bit before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREADA, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

LREADA Read long integer value from register A

Syntax: **LREADX**

Description: The long integer value of register A is returned. The four bytes of the 32-bit value must be read immediately following this instruction.

return 32-bit integer value from reg[A]

Opcode: **95**

Returns: **int32Value**

Four bytes representing a 32-bit integer value (MSB first).

Special Cases: • if reg[A] is 64-bit, the value is converted to 32-bit before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADX, LREADBYTE, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

LREADBYTE Read the lower 8-bits of register A

Syntax: **LREADBYTE**

Description: The lower 8 bits of register A are returned. The byte containing the 8-bit value must be read immediately following the instruction.

Return 8-bit integer value from reg[A]

Opcode: **98**

Returns: **byteValue**

One byte representing an 8-bit integer value.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

LREADWORD Read the lower 16-bits of register A

Syntax: **LREADWORD**

Description: Returns the lower 16 bits of register A. The two bytes of the 16-bit value must be read immediately following this instruction.

Return 16-bit integer value from reg[A]

Opcode: **99**

Returns: **wordValue**

Two bytes representing a 16-bit integer value (MSB first).

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADX, LREADBYTE, DREAD, RDIND, READSTR, READSEL, READSTATUS

LREADX Read long integer value from register X

Syntax: **LREADX**

Description: The long integer value from register X is returned, and X is incremented to the next register. The four bytes of the 32-bit value must be read immediately following this instruction.

Return 32-bit integer value from reg[X], $X = X + 1$

Opcode: **96**

Returns: **int32Value**

Four bytes representing a 32-bit integer value (MSB first).

Special Cases: • if reg[X] is 64-bit, the value is converted to 32-bit before being sent.

See Also: SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA, LREADBYTE, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

LSET Set register A

Syntax: **LSET, register**

Description: Set register A to the value of *register*.

$\text{reg}[A] = \text{reg}[\text{register}]$, status = longStatus(reg[A])

Opcode: **9C**

Byte 2: **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
• if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LSET0 Set register A from register 0

Syntax: **LSET0**

Description: If register A is 32-bit, it is set to the value of register 0. If register A is 64-bit, it is set to the value of register 128.

if reg[A] is 32-bit, $\text{reg}[A] = \text{reg}[0]$
if reg[A] is 64-bit, $\text{reg}[A] = \text{reg}[128]$
status = longStatus(reg[A])

Opcode: **A5**

LSETI Set register from immediate value

Syntax: **LSETI, signedByte**

Description: The *signedByte* is converted to a long integer and stored in register A.

$\text{reg}[A] = \text{long}(\text{signedByte})$, status = longStatus(reg[A])

Opcode: **AE**
Byte 2: ***signedByte***
 A signed byte value (-128 to 127).

LSHIFT **Long integer shift**

Syntax: **LSHIFT, *register***

Description: The shift count is specified by the long integer value in *register*. Register A is shifted left or right depending on the shift count. If the shift count is positive, a left shift is performed with the number of bits equal to the shift count. If the shift count is -1 to -63, a logical right shift is performed with the number of bits equal to the absolute value of the shift count. If the shift count is -64 to -128, an arithmetic right shift is performed with the number of bits equal to the absolute value of the shift count - 64.

if $\text{reg}[\text{register}] > 0$, then $\text{reg}[A] = \text{reg}[A]$ shifted left by $\text{reg}[\text{register}]$ bits
 $-63 < \text{reg}[\text{register}] < 0$ and , then $\text{reg}[A] = \text{reg}[A]$ shifted right by $-\text{reg}[\text{register}]$ bits
 $-128 < \text{reg}[\text{register}] < -64$, then $\text{reg}[A] = \text{reg}[A]$ shifted right by $-(\text{reg}[\text{register}] + 64)$ bits
 status = longStatus(reg[A])

Opcode: **C3**
Byte 2: ***register***
 Register number (0 to 255).

Special Cases: • if $\text{reg}[\text{register}] = 0$ or -64, no shift occurs
 • if $\text{reg}[A]$ is 32-bit and $(\text{reg}[\text{register}] > 32 \text{ or } \text{reg}[\text{register}] < -32)$, then $\text{reg}[A] = 0$
 • if $\text{reg}[A]$ is 64-bit and $(\text{reg}[\text{register}] > 64 \text{ or } \text{reg}[\text{register}] < -64)$, then $\text{reg}[A] = 0$

LSHIFTI **Long integer shift using immediate value** *(new in uM-FPU64)*

Syntax: **LSHIFTI, *signedByte***

Description: The shift count is specified by the signed byte value. Register A is shifted left or right depending on the shift count. If the shift count is positive, a left shift is performed with the number of bits equal to the shift count. If the shift count is -1 to -63, a logical right shift is performed with the number of bits equal to the absolute value of the shift count. If the shift count is -64 to -128, an arithmetic right shift is performed with the number of bits equal to the absolute value of the shift count - 64.

signedByte > 0, then $\text{reg}[A] = \text{reg}[A]$ shifted left by *signedByte* bits
 $-63 < \text{signedByte} < 0$ and , then $\text{reg}[A] = \text{reg}[A]$ shifted right by $-\text{signedByte}$ bits
 $-128 < \text{signedByte} < -64$, then $\text{reg}[A] = \text{reg}[A]$ shifted right by $-(\text{signedByte} + 64)$ bits
 status = longStatus(reg[A])

Opcode: **CA**
Byte 2: ***signedByte***
 A signed byte value (-128 to 127).


Special Cases: • if *signedByte* = 0 or -64, no shift occurs

- if reg[A] is 32-bit and (*signedByte* > 32 or *signedByte* < -32), then reg[A] = 0
- if reg[A] is 64-bit and (*signedByte* > 64 or *signedByte* < -64), then reg[A] = 0

LSTATUS Get long integer status

Syntax: **LSTATUS, register**

Description: Set the internal status byte to the long integer status of the value in *register*. The status byte can be used directly by instructions in user-defined functions, or read by the microcontroller with the READSTATUS instruction. It is set as follows:

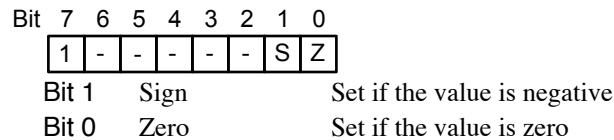

status = longStatus(reg[*register*])

Opcode: **B7**

Byte 2: **register**
 Register number (0 to 255).


See Also: FSTATUS, FSTATUSA, LSTATUSA, READSTATUS

LSTATUSA Get long integer status of register A

Syntax: **LSTATUSA**

Description: status = longStatus(reg[A])

Set the internal status byte to the long integer status of the value in register A. The status byte can be used directly by instructions in user-defined functions, or read by the microcontroller with the READSTATUS instruction. It is set as follows:

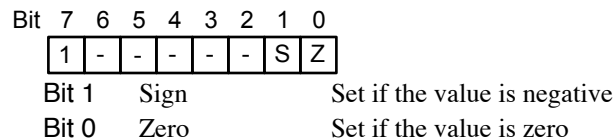

Opcode: **B8**

See Also: FSTATUS, FSTATUSA, LSTATUS, READSTATUS

LSUB Long integer subtract

Syntax: **LSUB, register**

Description: The long integer value in *register* is subtracted from register A.

$\text{reg}[A] = \text{reg}[A] - \text{reg}[\text{register}]$, status = longStatus(reg[A])

Opcode: **9E**

Byte 2: **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LSUB0 Long integer subtract register 0

Syntax: **LSUB0**

Description: If register A is 32-bit, the long integer value in register 0 is subtracted from register A. If register A is 64-bit, the long integer value in register 128 is subtracted from register A.

if reg[A] is 32-bit, $\text{reg}[A] = \text{reg}[A] - \text{reg}[0]$
 if reg[A] is 64-bit, $\text{reg}[A] = \text{reg}[A] - \text{reg}[128]$
 status = longStatus(reg[A])

Opcode: **A7**

LSUBI Long integer subtract immediate value

Syntax: **LSUBI, signedByte**

Description: The signed byte value is converted to a long integer and subtracted from register A.

$\text{reg}[A] = \text{reg}[A] - \text{long}(\text{signedByte})$, status = longStatus(reg[A])

Opcode: **B0**

Byte 2: **signedByte**

A signed byte value (-128 to 127).

LTABLE Long integer reverse table lookup

Syntax: **LTABLE, conditionCode, tableSize, TableItem1...TableItemN**

Description: It performs a reverse table lookup on a long integer value. The value in register A is compared to the values in the 32-bit table using the specified test condition. The index number of the first table entry that satisfied the test condition is stored in register 0. If no entry is found, register 0 is unchanged. The index number for the first table entry is zero.

if reg[A] is 32-bit,
 $\text{reg}[0] = \text{index of table entry that matches test conditions}$, status = longStatus(reg[0])
 if reg[A] is 64-bit,
 $\text{reg}[128] = \text{index of table entry that matches test conditions}$, status = longStatus(reg[128])

Opcode: **87**

Byte 2: **conditionCode**

The list of condition codes is as follows:

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal
PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite
PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)
TRUE	0x00	True
FALSE	0xFF	False

Byte 3: **tableSize**

Number of item in table.

Bytes 4-n: **TableItem1...TableItemN**

32-bit long integer values

Special Cases:

- only valid inside user-defined functions stored in Flash memory.
- if reg[A] is 64-bit, then the value is converted to 32-bit before being used.

See Also: TABLE, FTABLE, POLY

LTOA Convert long integer value to ASCII string and store in string buffer

Syntax: **LTOA, format**

Description: The long integer value in register A is converted to an ASCII string and stored in the string buffer at the current selection point. The selection point is updated to point immediately after the inserted string, so multiple insertions can be appended. The byte immediately following the LTOA opcode is the format byte and determines the format of the converted value.

If the format byte is zero, the length of the converted string is variable, depending on the size of the number. Examples of the converted string are as follows:

```
1
500000
-3598390
```

If the format byte is non-zero, a value between 1 and 24 specifies the length of the converted string. The converted string is right justified. If the format byte is positive, leading spaces are used. If the format byte is negative, its absolute value specifies the length of the converted string, and leading zeros are used. If the converted string is longer than the specified length, asterisks are stored. If the length is specified as zero, the string will be as long as necessary to represent the

number.

Unsigned

If 100 is added to the format value the value is converted as an unsigned long integer, otherwise it is converted as an signed long integer.

Hexadecimal

If the format byte is 40 to 56, the hexadecimal value of the register is stored. The length of the converted string is determined by subtracting 40 from the format byte. (e.g. 41 stores one hexadecimal digit, 42 stores two hexadecimal digits, ...). If the format byte is 40, then the maximum number of hexadecimal digits are stored. The maximum number of hexadecimal digits is 8 for a 32-bit register, and 16 for a 64-bit register.

Examples of the converted string are as follows: (note: leading spaces are shown where applicable)

<i>Value in register A</i>	<i>Format byte</i>	<i>Description</i>	<i>Display format</i>
-1	10	(signed 10)	-1
-1	110	(unsigned 10)	4294967295
-1	4	(signed 4)	-1
-1	104	(unsigned 4)	****
0	4	(signed 4)	0
0	0	(unformatted)	0
1000	6	(signed 6)	1000
1000	-6	(signed 6, zero fill)	001000

The maximum length of the string is 24. This instruction is usually followed by a READSTR instruction to read the string.

stringbuffer = converted string

Opcode: **9B**

Byte 2: ***format***

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, READSTR, READSEL

LTST Long integer bit test

Syntax: **LTST, register**

Description: The internal status byte is set based on the result of a bitwise AND of the value in register A and *register*. The values of register A and *register* are not changed.

status = longStatus(reg[A] AND reg[*register*])

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1	Sign	Set if the MSB of the result is set
Bit 0	Zero	Set the result is zero

Opcode: **A4**
Byte 2: **register**
 Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LTST0 Long integer bit test register 0

Syntax: **LTST0**

Description: If register A is 32-bit, the internal status byte is set based on the result of a bitwise AND of the value in register A and register 0. If register A is 64-bit, the internal status byte is set based on the result of a bitwise AND of the values in register A and register 128. The values of register A and register 0 are not changed.

if reg[A] is 32-bit, status = longStatus(reg[A] AND reg[0])
 if reg[A] is 64-bit, status = longStatus(reg[A] AND reg[128])

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z
Bit 1	Sign		Set if the MSB of the result is set					
Bit 0	Zero		Set the result is zero					

Opcode: **AD**

LTSTI Long integer bit test using immediate value

Syntax: **LTSTI, unsignedByte**

Description: The internal status byte is set based on the result of a bitwise AND of the value in register A and the unsigned byte value. The value of register A is not changed.

status = longStatus(reg[A] AND long(unsignedByte))

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	-	Z
Bit 0	Zero		Set if the result is zero					

Opcode: **B6**
Byte 2: **unsignedByte**
 An unsigned byte value (0 to 255).

LUCMP Unsigned long integer compare

Syntax: **LUCMP, register**

Description: Compares the unsigned long integer value in register A with the value in *register* and sets the internal status byte.

status = longStatus(reg[A] - reg[*register*])

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if reg[A] < reg[*register*]

Bit 0 Zero Set if reg[A] = reg[*register*]

 If neither Bit 0 or Bit 1 is set, reg[A] > reg[*register*]

Opcode: **A3**

Byte 2: **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
 • if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

LUCMP0 Unsigned long integer compare register 0

Syntax: **LUCMP0**

Description: If register A is 32-bit register, the unsigned long integer value in register A is compared with the value in register 0, and the internal status byte is set. If register A is 64-bit, the signed long integer value in register A is compared with the value in register 128, and the internal status byte is set.

if reg[A] is 32-bit, status = longStatus(reg[A] - reg[0])

if reg[A] is 64-bit, status = longStatus(reg[A] - reg[128])

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if reg[A] < reg[0 | 128]

Bit 0 Zero Set if reg[A] = reg[0 | 128]

 If neither Bit 0 or Bit 1 is set, reg[A] > reg[0 | 128]

Opcode: **AC**

LUCMP2 Unsigned long integer compare

Syntax: **LUCMP2, register1, register2**

Description: Compares the unsigned long integer value in *register1* with the value in *register2* and sets the internal status byte.

$\text{status} = \text{longStatus}(\text{reg}[\text{register1}] - \text{reg}[\text{register2}])$

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if $\text{reg}[\text{register1}] < \text{reg}[\text{register2}]$

Bit 0 Zero Set if $\text{reg}[\text{register1}] = \text{reg}[\text{register2}]$

If neither Bit 0 or Bit 1 is set, $\text{reg}[\text{register1}] > \text{reg}[\text{register2}]$

Opcode: **BA**

Byte 2: **register1**

Register number (0 to 255).

Byte 3: **register2**

Register number (0 to 255).

Special Cases: • if $\text{reg}[\text{register1}]$ is 32-bit and $\text{reg}[\text{register2}]$ is 64-bit, the value is converted to 32-bit before being used
 • if $\text{reg}[\text{register1}]$ is 64-bit and $\text{reg}[\text{register2}]$ is 32-bit, the value is converted to 64-bit before being used

LUCMPI Unsigned long integer compare immediate value

Syntax: **LUCMPI, unsignedByte**

Description: The unsigned byte value is converted to long integer and compared to register A.

$\text{status} = \text{longStatus}(\text{reg}[\text{A}] - \text{long}(\text{unsignedByte}))$

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign Set if $\text{reg}[\text{A}] < \text{long}(\text{unsignedByte})$

Bit 0 Zero Set if $\text{reg}[\text{A}] = \text{long}(\text{unsignedByte})$

If neither Bit 0 or Bit 1 is set, $\text{reg}[\text{A}] > \text{long}(\text{unsignedByte})$

Opcode: **B5**

Byte 2: **unsignedByte**

An unsigned byte value (0 to 255).

LUDIV Unsigned long integer divide

Syntax: **LUDIV, register**

Description: The long integer value in register A is divided by the unsigned value in *register*, and the result is stored in register A. If register A is 32-bit, the remainder is stored in register 0. If register A is 64-bit, the remainder is stored in register 128.

reg[A] = reg[A] / reg[register]
 if reg[A] is 32-bit, reg[0] = remainder
 if reg[A] is 64-bit, reg[128] = remainder
 status = longStatus(reg[A])

Opcode: **A2**

Byte 2: **register**

Register number (0 to 255).

Special Cases: • if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
 • if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used
 • if reg[register] is zero, the result is the largest unsigned integer
 (32-bit: \$FFFFFFFF, 64-bit: \$FFFFFFFFFFFFFFFF)

LUDIV0 Unsigned long integer divide by register 0

Syntax: **LUDIV0**

Description: If register A is 32-bit, the long integer value in register A is divided by the unsigned long integer value in register 0, and the result is stored in register A with the remainder stored in register 0. If register A is 64-bit, the long integer value in register A is divided by the unsigned long integer value in register 128, and the result is stored in register A with the remainder stored in register 128.

if reg[A] is 32-bit, reg[A] = reg[A] / reg[0], reg[0] = remainder
 if reg[A] is 64-bit, reg[A] = reg[A] / reg[128], reg[128] = remainder
 status = longStatus(reg[A])

Opcode: **AB**

Special Cases: • if reg[0 | 128] is zero, the result is the largest unsigned integer
 (32-bit: \$FFFFFFFF, 64-bit: \$FFFFFFFFFFFFFFFF)

LUDIVI Unsigned long integer divide by immediate value

Syntax: **LUDIVI, unsignedByte**

Description: The unsigned byte value is converted to a long integer and register A is divided by the converted value. The result is stored in register A. The remainder is stored in register 0.

reg[A] = reg[A] / long(unsignedByte), status = longStatus(reg[A])
 if reg[A] is 32-bit, reg[0] = remainder

if reg[A] is 64-bit, reg[128] = remainder

Opcode: **B4**

Byte 2: ***unsignedByte***

An unsigned byte value (0 to 255).

Special Cases: • if *unsignedByte* is zero, the result is the largest unsigned integer (32-bit: \$FFFFFFFF, 64-bit: \$FFFFFFFFFFFFFFFF)

LWRITE Write long integer value

Syntax: **LWRITE, register, int32Value**

Description: The long integer value is stored in *register*. If *register* is 64-bit, *int32Value* is converted to 64-bit before being stored in the register.

reg[*register*] = 32-bit long integer value, status = longStatus(reg[*register*])

Opcode: **90**

Byte 2: ***register***

Register number (0 to 255).

Bytes 3 to 6: ***int32Value***

Four bytes representing a 32-bit integer value (MSB first).

Special Cases:

- if *register* is 64-bit, the value is converted to 64-bit before being stored.
- if *register* = 0 or 128, and SETARGS is not active
 - if reg[A] is 32-bit, the value is stored in registers 0
 - if reg[A] is 64-bit, the value is stored in registers 128
- if *register* = 0 or 128, and SETARGS is active
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE0, LWRITEA, LWRITEX, DWRITE, WRIND, SETARGS

LWRITE0 Write long integer value to register0

Syntax: **LWRITE0, int32Value**

Description: If register A is 32-bit, the long integer value is stored in register 0. If register A is 64-bit, the long integer value is stored in register 128.

if reg[A] is 32-bit, reg[0] = 32-bit long integer value,
status = longStatus(reg[0])

if reg[A] is 64-bit, reg[128] = 32-bit value converted to 64-bit floating point,
status = longStatus(reg[128])

Opcode: **93**

Bytes 2 to 5: ***int32Value***

Four bytes representing a 32-bit integer value (MSB first).

Special Cases:

- if reg[A] is 64-bit, the value is converted to 64-bit before being stored.
- if SETARGS is used
 - if reg[A] is 32-bit, the value is stored in registers 1 to 9
 - if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITEA, LWRITEX, DWRITE, WRIND

LWRITEA Write long integer value to register A

Syntax: **LWRITEA, int32Value**

Description: The long integer value is stored in register A.

reg[A] = 32-bit long integer value, status = longStatus(reg[A])

Opcode: **91**

Bytes 2 to 5: **int32Value**
Four bytes representing a 32-bit integer value (MSB first).

Special Cases:

- if reg[A] is 64-bit, the value is converted to 64-bit before being stored.

See Also: FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEX, DWRITE, WRIND

LWRITEX Write long integer value to register X

Syntax: **LWRITEX, int32Value**

Description: The long integer value is stored in register X.

reg[X] = 32-bit long integer value, status = longStatus(reg[X]), X = X + 1

Opcode: **92**

Bytes 2 to 5: **int32Value**
Four bytes representing a 32-bit integer value (MSB first).

Special Cases:

- if reg[X] is 64-bit, the value is converted to 64-bit before being stored.

See Also: FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEA, DWRITE, WRIND

LXOR Long integer XOR

Syntax: **LXOR, register**

Description: The bitwise XOR of the values in register A and *register* is stored in register A.

reg[A] = reg[A] XOR reg[register], status = longStatus(reg[A])

Opcode: **C2**
Byte 2: **register**
 Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and *register* is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and *register* is 32-bit, the value is converted to 64-bit before being used

MOP Matrix Operation

Syntax: **MOP, action{, byteCount, byte...byte}**

Description: Performs matrix operations. The matrices are stored in 32-bit registers.

Opcode: **6E**
Byte 2: **action**

Details: The *action* selects one of the following operations:

<i>Value</i>	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
0	SCALAR_SET	0x00	Scalar Set. For each element: $MA[r,c] = \text{reg}[0]$
1	SCALAR_ADD	0x01	Scalar Add. For each element: $MA[r,c] = MA[r,c] + \text{reg}[0]$
2	SCALAR_SUB	0x02	Scalar Subtract. For each element: $MA[r,c] = MA[r,c] - \text{reg}[0]$
3	SCALAR_SUBR	0x03	Scalar Subtract (reverse). For each element: $MA[r,c] = \text{reg}[0] - MA[r,c]$
4	SCALAR_MUL	0x04	Scalar Multiply. For each element: $MA[r,c] = MA[r,c] * \text{reg}[0]$
5	SCALAR_DIV	0x05	Scalar Divide. For each element: $MA[r,c] = MA[r,c] / \text{reg}[0]$
6	SCALAR_DIVR	0x06	Scalar Divide (reverse). For each element: $MA[r,c] = \text{reg}[0] / MA[r,c]$
7	SCALAR_POW	0x07	Scalar Power. For each element: $MA[r,c] = MA[r,c] ** \text{reg}[0]$
8	EWISE_SET	0x08	Element-wise Set. Each element: $MA[r,c] = MB[r,c]$
9	EWISE_ADD	0x09	Element-wise Add. For each element: $MA[r,c] = MA[r,c] + MB[r,c]$
10	EWISE_SUB	0x0A	Element-wise Subtract. For each element: $MA[r,c] = MA[r,c] - MB[r,c]$
11	EWISE_SUBR	0x0B	Element-wise Subtract (reverse). For each element: $MA[r,c] = MB[r,c] - MA[r,c]$
12	EWISE_MUL	0x0C	Element-wise Multiply. For each element: $MA[r,c] = MA[r,c] * MB[r,c]$
13	EWISE_DIV	0x0D	Element-wise Divide. For each element: $MA[r,c] = MA[r,c] / MB[r,c]$
14	EWISE_DIVR	0x0E	Element-wise Divide (reverse). For each element: $MA[r,c] = MB[r,c] / MA[r,c]$

15	EWISE_POW	0x0F	For each element: $MA[r,c] = MB[r,c] / MA[r,c]$ Element-wise Power.
16	MULTIPLY	0x10	For each element: $MA[r,c] = MA[r,c] ** MB[r,c]$ Matrix Multiply. Calculate: $MA = MB * MC$
17	IDENTITY	0x11	Identity matrix. $MA = \text{identity matrix}$
18	DIAGONAL	0x12	Diagonal matrix. (reg[0] value stored on diagonal) $MA = \text{diagonal matrix}$
19	TRANSPOSE	0x13	Transpose. $MA = \text{transpose } MB$
20	COUNT	0x14	Count. $\text{reg}[0] = \text{count of all elements in } MA$
21	SUM	0x15	Sum. $\text{reg}[0] = \text{sum of all elements in } MA$
22	AVE	0x16	Average. $\text{reg}[0] = \text{average of all elements in } MA$
23	MIN	0x17	Minimum. $\text{reg}[0] = \text{minimum of all elements in } MA$
24	MAX	0x18	Maximum. $\text{reg}[0] = \text{maximum of all elements in } MA$
25	COPY_AB	0x19	Copy matrix A to matrix B
26	COPY_AC	0x1A	Copy matrix A to matrix C
27	COPY_BA	0x1B	Copy matrix B to matrix A
28	COPY_BC	0x1C	Copy matrix B to matrix C
29	COPY_CA	0x1D	Copy matrix C to matrix A
30	COPY_CB	0x1E	Copy matrix C to matrix B
31	DETERM	0x1F	Matrix Determinant (2x2 and 3x3 matrices only) $\text{reg}[0] = \text{determinant of } MA$
32	INVERSE	0x20	Matrix Inverse. (2x2 and 3x3 matrices only) $MA = \text{inverse of } MB$

*Byte 3:***byteCount**

The value specifies the number of bytes to follow.

*Bytes 4-n:***byte...byte**

A list of byte values.

These operations can be used to quickly load matrices, save results, or to extract and save matrix subsets.

The load register operations take a list of register numbers and sequentially copy the indexed register values to the matrix specified. Register 0 is cleared to zero before the indexed values are copied, to provide an easy way to load zero values to a matrix. If an index is negative, the absolute value is used as an index, and the negative value of the indexed register is copied.

33	LOAD_RA	0x21	Load registers to matrix A
34	LOAD_RB	0x22	Load registers to matrix B
35	LOAD_RC	0x23	Load registers to matrix C

The load matrix operations take a list of matrix indices and sequentially copy the indexed matrix values to Matrix A. If an index value is negative, the absolute value is used as an index, and the

negative value of the indexed value is copied. An index of 0x80 is used to copy the negative of the value at index 0.

36	LOAD_BA	0x24	Load matrix B to matrix A
37	LOAD_CA	0x25	Load matrix C to matrix A

These save matrix to registers operation takes a list of register numbers and sequentially copies the values from matrix A to the registers. If an index value is negative, the matrix A value for that index position is not stored.

38	SAVE_AR	0x26	Save matrix A to registers
----	---------	------	----------------------------

The save matrix to matrix operations take a list of matrix indices and sequentially copies the values from matrix A to matrix B or matrix C. If an index value is negative, the matrix A value for that index position is not stored.

39	SAVE_AB	0x27	Save matrix A to matrix B
40	SAVE_AC	0x28	Save matrix A to matrix C

- Special Cases:*
- all matrices must be defined in 32-bit registers.
 - in a background process, a matrix that starting at register 0 to 15 must not extend beyond register 15.
 - in a background process, larger matrices should be defined using registers 16 to 127.

See Also: SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMB, SAVEMC

NOP **No operation**

Syntax: **NOP**

Description: No operation.

Opcode: **00**

PICMODE **Select PIC floating point format**

Syntax: **PICMODE**

Description: Selects the alternate PIC floating point mode using by many PIC compilers. All internal data on the uM-FPU is stored in IEEE 754 format, but when the uM-FPU is in PIC mode an automatic conversion is done by the FREAD, FREADA, FREADX, FWRITE, FWRITEA, and FWRITEX instructions so the PIC program can use 32-bit floating point data in the alternate format. Normally this instruction would be issued immediately after the reset as part of the initialization code. The IEEEEMODE instruction can be used to revert to standard IEEE 754 32-bit floating point mode.

Opcode: **F5**

POLY A = nth order polynomial

Syntax: **POLY, count, float32Value1...float32ValueN**

Description: This instruction is only valid in a user-defined function in Flash memory.
The value of the specified polynomial is calculated and stored in register A. The general form of the polynomial is:

$$y = A_0 + A_1x^1 + A_2x^2 + \dots A_nx^n$$

The value of x is the initial value of register A. An n^{th} order polynomial will have $n+1$ coefficients stored in the table. The coefficient values A_0, A_1, A_2, \dots are stored as a series of 32-bit floating point values (4 bytes) stored in order from A_n to A_0 . If a given term in the polynomial is not needed, a zero must be stored for that value.

reg[A] = result of nth order polynomial calculation

Opcode: **88**

Byte 2: **count**

The number of 32-bit floating point values that follow.

Bytes 3-n: **float32Value1...float32ValueN**

Each 32-bit floating point value is represented by four bytes (MSB first).

Example: The polynomial $3x + 5$ would be represented as follows:

88 02 40 A0 00 00 40 40 00 00

Where:	88	opcode
	02	size of the table (order of the polynomial + 1)
	40 40 00 00	floating point constant 3.0
	40 A0 00 00	floating point constant 5.0

Special Cases: • only valid inside user-defined functions stored in Flash memory.
• if reg[A] is 64-bit, then the value is converted to 32-bit before being used, and the result is converted to 64-bit before being stored.

See Also: TABLE, FTABLE, LTABLE

RADIANS Convert degrees to radians

Syntax: **RADIANS**

Description: The floating point value in register A is converted from degrees to radians and the result is stored in register A.

reg[A] = radians(reg[A])

Opcode: **4F**

Special Cases: • if the value is NaN, then the result is NaN

See Also: ACOS, ASIN, ATAN, ATAN2, COS, SIN, TAN, DEGREES

RDIND **Read data using indirect pointer** *(new in uM-FPU64)*

Syntax: **RDIND, dataType, pointer, count**

Description: Read *count* data values of the specified *dataType* from the *pointer* location. The pointer can be a register pointer or a memory pointer. If *dataType* is different then the data type of the *pointer* data conversion is automatically performed. The data items must be read immediately following this instruction.

Opcode: **71**

Byte 2: **dataType**

Bit 7	6	5	4	3	2	1	0
-							Data Type

Bits 3:0	Data Type		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	INT8	0x08	8-bit signed integer data
	UINT8	0x09	8-bit unsigned integer data
	INT16	0x0A	16-bit signed integer data
	UINT16	0x0B	16-bit unsigned integer data
	LONG32	0x0C	32-bit long integer data
	FLOAT32	0x0D	32-bit floating point data
	LONG64	0x0E	64-bit long integer data
	FLOAT64	0x0F	64-bit float point data

Byte 3: **pointer**
The register number of a register that contains a pointer (0 to 255).

Byte 4: **count**
An 8-bit value that specifies the number of data items to read from the pointer location (0 to 255).

Special Cases: • if *dataType* is 32-bit floating point, and PICMODE is enabled, the values are converted from IEEE-754 format before being sent

See Also: SETIND, ADDIND, WRIND, COPYIND, LOADIND, SAVEIND
SETREAD, FREAD, FREAD0, FREADA, FREADX, LREAD, LREAD0, LREADA,
LREADX, LREADBYTE, LREADWORD, DREAD

READSEL **Read string selection**

Syntax: **READSEL**

Description: Returns the current string selection. Data bytes must be read immediately following this instruction and continue until a zero byte is read. This instruction is typically used after the **STRSEL** or **STRFIELD** instructions.

Opcode: **EC**

Returns: **byte1...byteN**

A zero-terminated string.

See Also: SETREAD, STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR

READSTATUS Return the last status byte

Syntax: **READSTATUS**

Description: The 8-bit internal status byte is returned.

Opcode: **F1**

Returns: **status**
The status byte.

See Also: SETREAD, FSTATUS, FSTATUSA, LSTATUS, LSTATUSA

READSTR Read string

Syntax: **READSTR**

Description: Returns the zero terminated string in the string buffer. Data bytes must be read immediately following this instruction and continue until a zero byte is read. This instruction is used after instructions that load the string buffer (e.g. FTOA, LTOA, VERSION). On completion of the READSTR instruction the string selection is set to select the entire string.

Opcode: **F2**

Returns: **byte1...byteN**
A zero-terminated string.

See Also: SETREAD, STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSEL

READVAR Read internal variable (modified in uM-FPU64)

Syntax: **READVAR, item**

Description: Stores the internal value selected by *item* to register 0.

0	A register
1	X register
2	Matrix A register
3	Matrix A rows
4	Matrix A columns
5	Matrix B register
6	Matrix B rows
7	Matrix B columns
8	Matrix C register

9	Matrix C rows
10	Matrix C columns
11	Internal mode word
12	Last status byte
13	Clock ticks per millisecond
14	Current length of string buffer
15	String selection starting point
16	String selection length
17	8-bit character at string selection point
18	Number of bytes in instruction buffer
19	Silicon revision number
20	Device type (28 for 28-pin, 44 for 44-pin)

if reg[A] is 32-bit, reg[0] = internal register value, status = longStatus(reg[0])

if reg[A] is 64-bit, reg[128] = internal register value, status = longStatus(reg[128])

Opcode: **FC**

Byte 2: **item**

Selects the internal value to load into register 0.

RESET Reset

Syntax: **RESET**

Description: Nine consecutive 0xFF bytes will cause the uM-FPU to reset. If less than nine consecutive 0xFF bytes are received, they are treated as NOPs.

Opcode: **FF**

RET Return from user-defined function

Syntax: **RET**

Description: This instruction unconditionally returns from the current function.
This instruction is only valid in user-defined function stored in Flash memory.

Opcode: **80**

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: BRA, BRA,cc, GOTO, JMP, JMP,cc, RET, RET,cc

RET, cc Conditional return from user-defined function

Syntax: **RET, conditionCode**

Description: If the condition is true, this instruction returns from the current function. If the condition is false, no return occurs.

Opcode: **8A**

Byte 2: **conditionCode**

The list of condition codes is as follows:

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
Z	0x51	Zero
EQ	0x51	Equal
NZ	0x50	Not Zero
NE	0x50	Not Equal
LT	0x72	Less Than
LE	0x62	Less Than or Equal
GT	0x70	Greater Than
GE	0x60	Greater Than or Equal
PZ	0x71	Positive Zero
MZ	0x73	Negative Zero
INF	0xC8	Infinity
FIN	0xC0	Finite
PINF	0xE8	Positive Infinity
MINF	0xEA	Minus infinity
NAN	0x44	Not-a-Number (NaN)
TRUE	0x00	True
FALSE	0xFF	False

This instruction is only valid in a user-defined function in Flash memory.

Special Cases: • only valid inside user-defined functions stored in Flash memory.

See Also: BRA, BRA,cc, GOTO, JMP, JMP,cc, RET, RET,cc

RIGHT **Right Parenthesis**

Syntax: **RIGHT**

Description: If register A is 32-bit, the value of register A is loaded to register 0. If register A is 64-bit, the value of register A is loaded to register 128. If the RIGHT parenthesis is the outermost parenthesis, the register A selection from before the first LEFT parenthesis is restored, otherwise the previous temporary register is selected as register. This is used together with the LEFT parenthesis command to allocate temporary registers, and to change the order of a calculation. Parentheses can be nested up to eight levels.

Opcode: **15**

Special Cases: • if no left parenthesis is currently outstanding, then register 0 (32-bit) or register 128 (64-bit) is set to NaN.

Special Cases: • if SETARGS is used
 • if reg[A] is 32-bit, the value is stored in registers 1 to 9
 • if reg[A] is 64-bit, the value is stored in registers 129 to 137

See Also: LEFT, SETARGS

ROOT Calculate nth root*Syntax:* **ROOT, register***Description:* Calculates the nth root of the floating point value in register A and stores the result in register A. It is equivalent to raising register A to the power of (1 / n), where n is the floating point value in register.

$$\text{reg}[A] = \text{reg}[A] ** (1 / \text{reg}[\text{register}])$$

Opcode: **42***Byte 2:* **register**

Register number (0 to 255).

Special Cases:

- if reg[A] is 32-bit and register is 64-bit, the value is converted to 32-bit before being used
- if reg[A] is 64-bit and register is 32-bit, the value is converted to 64-bit before being used
- see the description of the POWER instruction for the special cases of (1/reg[register])
- if reg[register] is infinity, then (1 / reg[register]) is zero
- if reg[register] is zero, then (1 / reg[register]) is infinity

ROUND Floating point Rounding*Syntax:* **ROUND***Description:* The floating point value equal to the nearest integer to the floating point value in register A is stored in register A.

$$\text{reg}[A] = \text{round}(\text{reg}[A])$$

Opcode: **53**

Special Cases:

- if the value is NaN, then the result is NaN
- if the value is +infinity or -infinity, then the result is +infinity or -infinity
- if the value is 0.0 or -0.0, then the result is 0.0 or -0.0

RTC Real-time Clock (new in uM-FPU64)*Syntax:* **RTC, action***Description:* Used to manage the real-time clock.*Opcode:* **DC***Byte 2:* **action**

Bit	7	6	5	4	3	2	1	0
	Action				Options			

Bits 7:4
IDE Symbol
 INIT

Action
IDE Value
 0x00

Description
 Set the real-time clock mode.

START	0x10	Start real-time clock.
STOP	0x20	Stop real-time clock.
ALARM_MASK	0x30	Set alarm mask.
WRITE_TIME	0x40	Write real-time clock date and time value.
WRITE_ALARM	0x50	Write alarm data and time value.
READ_TIME	0x60	Read real-time clock date and time value.
READ_ALARM	0x70	Read alarm data and time value.
Bits 3:0	Options	
		<i>See descriptions below.</i>

INIT action

Bit	7	6	5	4	3	2	1	0
	0				E	S	C	A

Bits 3	Enable RTCC output pin		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	–	0x00	The RTC output pin is disabled.
	RTCC	0x08	The RTC output pin is enabled.
Bits 2	Type of output		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	ALARM_OUT	0x00	Toggle RTC on each alarm event.
	HZ_OUT	0x04	One Hz output.
Bits 1	Calibration		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	–	0x00	No Calibration.
	CAL	0x02	Set calibration from lower 8 bits of register 0.
Bits 0	Alarm Event		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	–	0x00	Alarm event disabled.
	ALARM_ON	0x00	Alarm event enabled.

START, STOP actions

Bit	7	6	5	4	3	2	1	0
	Action				-			

ALARM MASK action

Bit	7	6	5	4	3	2	1	0
	Action				Mask			

Bits 3:0	Alarm Mask
<i>Value</i>	<i>Description</i>
0	Alarm event every half second.
1	Alarm event every second.
2	Alarm event every 10 seconds.
3	Alarm event every minute.
4	Alarm event every 10 minutes.
5	Alarm event every hour.
6	Alarm event every day.
7	Alarm event every week.
8	Alarm event every month.
9	Alarm event every year.

WRITE_TIME, WRITE_ALARM, READ_TIME, READ_ALARM actions

Bit 7 6 5 4 3 2 1 0

Action	S	Item
--------	---	------

Bits 3	Numeric/String Select		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	–	0x00	The numeric value in register 0 is used.
Bits 2:0	STR	0x08	A string value is used. If the string selection is not empty, the string selection is used, otherwise the string buffer is used.
	Item		
	<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
	DATE_TIME	0x00	Year, Month, Day, Hour, Minute, Second. Number: $\text{year} * 13 * 32 * 24 * 60 * 60 +$ $\text{month} * 32 * 24 * 60 * 60 +$ $\text{day} * 24 * 60 * 60 +$ $\text{hours} * 60 * 60 +$ $\text{minutes} * 60 +$ seconds String: YYYY-MM-DD HH:MM:SS
	SECOND	0x01	Seconds. Number: 0 to 59 String: 00...59
	MINUTE	0x02	Minutes. Number: 0 to 59 String: 00...59
	HOURL	0x03	Hours. Number: 0 to 23 String: 00...23
	DAY	0x04	Day. Number: 1 to 31 String: 01...31
	MONTH	0x05	Month. Number: 1 to 12 String: 01...12
	YEAR	0x06	Year. Number: 0 to 99 String: 2000...2099
	WEEKDAY	0x07	Weekday. Number: 0 to 6 String: 0...6

The 32-bit integer date/time format is:

Number: $\text{year} * 13 * 32 * 24 * 60 * 60 + \text{month} * 32 * 24 * 60 * 60 + \text{day} * 24 * 60 * 60 + \text{hours} * 60 * 60 + \text{minutes} * 60 + \text{seconds}$

The string date/time format is:

YYYY-MM-DD HH:MM:SS

Examples: RTC, INIT+ALARM_ON Disable RTCC pin clock, no calibration, enable alarm events.
 RTC, START Start the real-time clock.

See Also: TIMESSET, TIMELONG, TICKLONG, DELAY

SAVEIND Save using Indirect Pointer *(modified in uM-FPU64)*

Syntax: **SAVEIND, register**

Description: The value of register A is stored at the indirect pointer specified by *register*.

data value pointed to by *register* = reg[A]

Opcode: **7B**

Byte 2: **register**

Register number (0 to 255).

Special Cases: • if data value pointed to by *register* is 32-bit and reg[A] is 64-bit, the value is converted to 32-bit before being saved
 • if data value pointed to by *register* is 64-bit and reg[A] is 32-bit, the value is converted to 64-bit before being used

See Also: SETIND, ADDIND, WRIND, RDIND, COPYIND, LOADIND

SAVEMA Save register 0 value to matrix A

Syntax: **SAVEMA, row, column**

Description: Store the register 0 value to matrix A at the row, column specified.

if reg[A] is 32-bit, matrix A [*row*, *column*] = reg[0]

if reg[A] is 64-bit, matrix A [*row*, *column*] = reg[128]

Opcode: **6B**

Byte 2: **row**

Row number of matrix (starting from zero).

Byte 3: **column**

Column number of matrix (starting from zero).

Special Cases: • if *row* or *column* is out of range, no value is stored in the matrix
 • if reg[A] is 64-bit, the value from register 128 is converted to 32-bit before being stored in the matrix

See Also: MOP, SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMB, SAVEMC

SAVEMB Save register 0 value to matrix B

Syntax: **SAVEMB, row, column**

Description: Store the register 0 value to matrix B at the row, column specified.

if reg[A] is 32-bit, matrix B [*row*, *column*] = reg[0]

if reg[A] is 64-bit, matrix B [*row*, *column*] = reg[128]

Opcode: **6C**

Byte 2: **row**
Row number of matrix (starting from zero).

Byte 3: **column**
Column number of matrix (starting from zero).

Special Cases:

- if *row* or *column* is out of range, no value is stored in the matrix
- if register A is 64-bit, the value from register 128 is converted to 32-bit before being stored in the matrix

See Also: MOP, SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMC

SAVEMC Save register 0 value to matrix C

Syntax: **SAVEMC, row, column**

Description: Store the register 0 value to matrix C at the row, column specified.

if reg[A] is 32-bit, matrix C [*row*, *column*] = reg[0]
if reg[A] is 64-bit, matrix C [*row*, *column*] = reg[128]

Opcode: **6D**

Byte 2: **row**
Row number of matrix (starting from zero).

Byte 3: **column**
Column number of matrix (starting from zero).

Special Cases:

- if *row* or *column* is out of range, no value is stored in the matrix
- if reg[A] is 64-bit, the value from register 128 is converted to 32-bit before being stored in the matrix

See Also: MOP, SELECTMA, SELECTMB, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMB

SELECTA Select A

Syntax: **SELECTA, register**

Description: The *register* specified is selected as register A.

A = register

Opcode: **01**

Byte 2: **register**
Register number (0 to 255).

See Also: SELECTX, INDA, INDX

SELECTMA Select matrix A

Syntax: **SAVEMA, register, rows, columns**

Description: The *register* specifies a 32-bit register that is the start of matrix A. Matrix values are stored in sequential registers (rows * columns). The X register is also set to the first element of the matrix so that the FREADX, FWRITE, LREADX, LWRITE, SAVEX, SETX, LOADX instructions can be immediately used to store values to or retrieve vales from the matrix.

Select matrix A, X = *register*

Opcode: **65**

Byte 2: **register**

Register number for start of matrix (0 to 127).

Byte 3: **rows**

Number of rows in matrix.

Byte 4: **columns**

Number of columns in matrix.

Special Cases: • all matrices must be defined in 32-bit registers.
 • in a background process, a matrix that starting at register 0 to 15 must not extend beyond register 15.
 • in a background process, larger matrices should be defined using registers 16 to 127.

See Also: MOP, SELECTMB, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMB, SAVEMC

SELECTMB Select matrix B

Syntax: **SAVEMB, register, rows, columns**

Description: The *register* specifies a 32-bit register that is the start of matrix B. Matrix values are stored in sequential registers (rows * columns). The X register is also set to the first element of the matrix so that the FREADX, FWRITE, LREADX, LWRITE, SAVEX, SETX, LOADX instructions can be immediately used to store values to or retrieve vales from the matrix.

Select matrix B, X = *register*

Opcode: **66**

Byte 2: **register**

Register number for start of matrix (0 to 127).

Byte 3: **rows**

Number of rows in matrix.

Byte 4: **columns**

Number of columns in matrix.

Special Cases: • all matrices must be defined in 32-bit registers.
 • in a background process, a matrix that starting at register 0 to 15 must not extend beyond register 15.

- in a background process, larger matrices should be defined using registers 16 to 127.

See Also: MOP, SELECTMA, SELECTMC, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMB, SAVEMC

SELECTMC Select matrix C

Syntax: **SAVEMC, register, rows, columns**

Description: The *register* specifies a 32-bit register that is the start of matrix C. Matrix values are stored in sequential registers (rows * columns). The X register is also set to the first element of the matrix so that the FREADX, FWRITE, LREADX, LWRITE, SAVEX, SETX, LOADX instructions can be immediately used to store values to or retrieve vales from the matrix.

Select matrix C, X = *register*

Opcode: **67**

Byte 2: **register**

Register number for start of matrix (0 to 127).

Byte 3: **rows**

Number of rows in matrix.

Byte 4: **columns**

Number of columns in matrix.

Special Cases:

- all matrices must be defined in 32-bit registers.
- in a background process, a matrix that starting at register 0 to 15 must not extend beyond register 15.
- in a background process, larger matrices should be defined using registers 16 to 127.

See Also: MOP, SELECTMA, SELECTMB, LOADMA, LOADMB, LOADMC, SAVEMA, SAVEMB, SAVEMC

SELECTX Select register X

Syntax: **SELECTX, register**

Description: The *register* specified is selected as register X.

X = *register*

Opcode: **02**

Byte 2: **register**

Register number (0 to 255).

See Also: SELECTA, INDA, INDX

SERIN Serial input

(modified in uM-FPU64)

Syntax: **SERIN, action**

Description: This instruction is used to read serial data from the SERIN pin or one of the digital I/O pins.

SERIN, DISABLE
SERIN, ENABLE_CHAR
SERIN, STATUS_CHAR
SERIN, READ_CHAR
SERIN, ENABLE_NMEA
SERIN, STATUS_NMEA
SERIN, READ_NMEA

Opcode: **CF**

Byte 2: **action**

Bit 7 6 5 4 3 2 1 0

Device	Action
--------	--------

Bit 7:4 **Device**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
-	0x00	SERIN pin
ASYNC	0x40	Digital I/O pin assigned by DEVIO, ASYNC

Bits 7:5 **Action**

<i>IDE Symbol</i>	<i>IDE Value</i>	<i>Description</i>
DISABLE	0x00	Disable serial input.
ENABLE_CHAR	0x10	Enable character mode serial input.
STATUS_CHAR	0x20	Get character mode serial input status.
READ_CHAR	0x30	Get character mode serial input status.
ENABLE_NMEA	0x40	Enable NMEA serial input.
STATUS_NMEA	0x50	Get NMEA input status.
READ_NMEA	0x60	Transfer NMEA sentence to string buffer.

If the input pin is SERIN:

- the instruction is ignored if Debug Mode is enabled
- the baud rate for serial input is the same as the baud rate for serial output, and is set with the SEROUT, 0 instruction.

If the input pin is a digital I/O pin:

- the pin must first be initialized for serial input using the DEVIO, ASYNC instruction.
- the baud rate is specified using the DEVIO, ASYNC instruction

SERIN, DISABLE

Disable serial input. This can be used to save interrupt processing time if serial input is not used continuously.

SERIN, ENABLE_CHAR

Enable character mode serial input. Serial input is enabled, and incoming characters are stored in a 160 byte buffer. The serial input status can be checked with the SERIN, 2 instruction and input characters can be read using the SERIN, 3 instruction.

SERIN, STATUS_CHAR

Get character mode serial input status. The status byte is set to zero (Z) if the input buffer is empty, or non-zero (NZ) if the input buffer is not empty.

SERIN, READ_CHAR

Read next serial input character. The serial input character is stored in register 0. If this instruction is the last instruction in the instruction buffer, it will wait for the next available input character. If there are other instructions in the instruction buffer, or another instruction is sent before the SERIN, 3 instruction has completed, it will terminate and store a zero value in register 0.

SERIN, ENABLE_NMEA

Enable NMEA serial input. Serial input is enabled, and the serial input data is scanned for NMEA sentences which are then stored in a 200 byte buffer. Additional NMEA sentences can be buffered while the current sentence is being processed. The sentence prefix character (\$), trailing checksum characters (if specified), and the terminator (CR,LF) are not stored in the buffer. NMEA sentences are transferred to the string buffer for processing using the SERIN, 6 instruction, and the NMEA input status can be checked with the SERIN, 5 instruction.

SERIN, STATUS_NMEA

Get the NMEA input status. The status byte is set to zero (Z) if the buffer is empty, or non-zero (NZ) if at least one NMEA sentence is available in the buffer.

SERIN, READ_NMEA

Transfer next NMEA sentence to string buffer. This instruction transfers the next NMEA sentence to the string buffer, and selects the first field of the string so that a STRCMP instruction can be used to check the sentence type. If the sentence is valid, the status byte is set to 0x80 and the greater-than (GT) test condition will be true. If an error occurs, the status byte will be set to 0x82, 0x92, 0xA2, or 0xB2. Bit 4 of the status byte is set if an overrun error occurred. Bit 5 of the status byte is set if a checksum error occurred. The less-than (LT) test condition will be true for all errors. If this instruction is the last instruction in the instruction buffer, it will wait for the next available NMEA sentence. If there are other instructions in the instruction buffer, or another instruction is sent before the SERIN, 6 instruction has completed, it will terminate and store an empty sentence.

Examples:

SERIN, ENABLE_CHAR	Enable character input on SERIN pin.
SERIN, ASYNC+ENABLE_CHAR	Enable character input on DEVIO, ASYNC pin.
SERIN, READ_CHAR	Read the next character received on the SERIN pin and store the value in register 0.

See Also: SEROUT, DEVIO, ASYNC

SEROUT Serial Output

Syntax: **SEROUT, action{, mode} / {, string}**

Description: This instruction is used to enable and disable Debug Mode, set the baud rate for the SERIN and SEROUT pins, and to write serial data to the SEROUT pin or one of the digital I/O pins.

```
SEROUT, SET_BAUD, mode
SEROUT, WRITE_STR, string
SEROUT, WRITE_SBUF
SEROUT, WRITE_SSEL
```

SEROUT, WRITE_CHAR
 SEROUT, WRITE_STRZ, *string*

Opcode:

CE

Byte 2:

action

Bit	7	6	5	4	3	2	1	0
	Device				Action			

Bit 7:4

Device

IDE Symbol

IDE Value

Description

-

0x00

SEROUT pin

ASYN

0x40

Digital I/O pin assigned by the

DEVIO, ASYN

Bits 7:5

Action

IDE Symbol

IDE Value

Description

SET_BAUD

0x00

Set serial I/O mode and baud rate.

WRITE_STR

0x01

Send string to serial output.

WRITE_SBUF

0x02

Send string buffer to serial output.

WRITE_SSEL

0x03

Send string selection to serial output.

WRITE_CHAR

0x04

Send lower 8 bits of register 0 to serial output.

WRITE_STRZ

0x05

Send string and zero terminator to serial output.

If the output pin is SEROUT:

- the instruction is ignored if Debug Mode is enabled
- the baud rate for serial output is set with the SEROUT, 0 instruction.

If the output pin is a digital I/O pin:

- the pin must first be initialized for serial output using the DEVIO instruction.
- the baud rate is specified using the DEVIO instruction

SEROUT, SET_BAUD, mode

This instruction sets the baud rate for SERIN and SEROUT pins, and enables or disables Debug Mode. The mode is specified by the byte immediately following the opcode and action byte.

Byte 3:

mode

<i>Value</i>	<i>Description</i>
0	57,600 baud, Debug Mode enabled
1	300 baud, Debug Mode disabled
2	600 baud, Debug Mode disabled
3	1200 baud, Debug Mode disabled
4	2400 baud, Debug Mode disabled
5	4800 baud, Debug Mode disabled
6	9600 baud, Debug Mode disabled
7	19200 baud, Debug Mode disabled
8	38400 baud, Debug Mode disabled
9	57600 baud, Debug Mode disabled
10	115200 baud, Debug Mode disabled

If the serial output pin is SEROUT (ASYNC0), the baud rate and debug mode is set according to the value. If the mode value is 0, a {DEBUG ON} message is sent to the serial output and the baud rate is changed. If the mode value is 1 through 10, if the debug mode is enabled, and a {DEBUG OFF} message is sent to the SEROUT before the baud rate is changed.

If the serial output pin is a digital I/O pin (ASYNC1), the SET_BAUD instruction is ignored. The serial port must be initialized with the DEVIO, INIT instruction.

SEROUT, WRITE_STR, string

The zero-terminated text string specified by the instruction (not including the zero-terminator) is sent to the serial output. The instruction is ignored if Debug Mode is enabled.

SEROUT, WRITE_SBUF

The contents of the string buffer are sent to the serial output. The instruction is ignored if Debug Mode is enabled.

SEROUT, WRITE_SSEL

The current string selection is sent to the serial port. The instruction is ignored if Debug Mode is enabled.

SEROUT, WRITE_CHAR

The lower 8 bits of register 0 are sent to the serial port as an 8-bit character. The instruction is ignored if Debug Mode is enabled.

SEROUT, WRITE_STRZ, string

The zero-terminated text string specified by the instruction is sent to the serial output, including the zero-terminator. The instruction is ignored if Debug Mode is enabled.

Examples:

SEROUT, ENABLE_CHAR	Enable character input on SERIN pin.
SEROUT, ASYNC+ENABLE_CHAR	Enable character input on DEVIO, ASYNC pin.
SEROUT, READ_CHAR	Read the next character received on the SERIN pin and store the value in register 0.

See Also: SERIN, DEVIO, ASYNC

SETARGS Enable FCALL argument loading (new in uM-FPU64)

Syntax: **SETARGS**

Description: The SETARGS instruction is used to facilitate the passing of arguments to a user-defined function. Once the SETARGS instruction is executed, instructions that normally load values to register 0, will instead load values sequentially into registers 1, 2, 3, ... Instructions that normally load values to register 128, will instead load values sequentially into registers 129, 130, 131, ... Argument loading is disabled once the FCALL instruction is executed.

Opcode: **DD**

See Also: CLR, CLR0, DWRITE, FWRITE, FWRITE0, LOAD, LOADA, LOADX, LOADBYTE, LOADE, LOADIND, LOADPI, LOADUBYTE, LOADUWORD, LOADWORD, LONGBYTE,

LONGUBYTE, LONGUWORD, LONGWORD, LWRITE, LWRITE0, RIGHT

SETIND Set indirect pointer (new in uM-FPU64)

Syntax: **SETIND, type, register**
 SETIND, type, address

Description: Register A is set to the value of an indirect pointer. Indirect pointers can point to registers or memory. If *type* specifies a register pointer, the register value is specified. If *type* specifies a memory pointer, the memory address.

Opcode: **77**

Byte 2: **type**

Bit 7 6 5 4 3 2 1 0

A	-	D	Data Type
---	---	---	-----------

Bits 7 **Auto Increment**

IDE Symbol	IDE Value	Description
INC	0x80	Auto-increment the pointer when used

Bits 4 **DMA Pointer**

IDE Symbol	IDE Value	Description
DMA	0x10	DMA buffer pointer

Bits 3:0 **Data Type**

IDE Symbol	IDE Value	Description
REG_LONG	0x00	Register, Long integer data
REG_FLOAT	0x01	Register, Floating point data
MEM_INT8	0x08	Memory, 8-bit signed integer data
MEM_UINT8	0x09	Memory, 8-bit unsigned integer data
MEM_INT16	0x0A	Memory, 16-bit signed integer data
MEM_UINT16	0x0B	Memory, 16-bit unsigned integer data
MEM_LONG32	0x0C	Memory, 32-bit long integer data
MEM_FLOAT32	0x0D	Memory, 32-bit floating point data
MEM_LONG64	0x0E	Memory, 64-bit long integer data
MEM_FLOAT64	0x0F	Memory, 64-bit floating point data

This type is stored in the type field of the indirect pointer.


Byte 3: **register** (if *type* specifies a register pointer)

Register number (0 to 255). This value is stored in the address field of the indirect pointer.

Byte 3-4: **address** (if *type* specifies a memory pointer)

A 16-bit value the specifies the memory address (0 to 65535). This value is stored in the address field of the indirect pointer.

The indirect pointer stored in Register A has the following format:

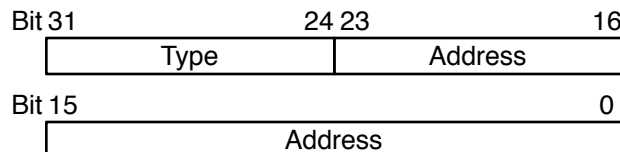

Special Cases: • if reg[A] is 64-bit, the upper 32 bits are set to zero.

See Also: ADDIND, WRIND, RDIND, COPYIND, LOADIND, SAVEIND

SETREAD Set Read Mode (new in uM-FPU64)

Syntax: **SETREAD**

Description: This instruction should be used by the foreground process prior to any read instruction. It ensures that the FPU stays in foreground mode, and is ready to send data when the read instruction is received from the microcontroller. Background processes will not run until the next read instruction has finished executing.

Opcode: **FD**

See Also: FREAD, FREADA, FREADX, FREAD0, LREAD, LREADA, LREADX, LREAD0, LREADBYTE, LREADWORD, DREAD, RDIND, READSTR, READSEL, READSTATUS

SETSTATUS Set status byte

Syntax: **SETSTATUS, status**

Description: The internal status byte is set to the 8-bit value specified.

$\text{status} = \text{status}$

Opcode: **CD**

Byte 2: **status**
The 8-bit value to store as the internal status value.

SIN Sine

Syntax: **SIN**

Description: Calculates the sine of the angle (in radians) in register A and stores the result in register A.

$\text{reg}[A] = \sin(\text{reg}[A])$

Opcode: **47**

Special Cases:

- if A is NaN or an infinity, then the result is NaN
- if A is 0.0, then the result is 0.0
- if A is -0.0, then the result is -0.0

See Also: ACOS, ASIN, ATAN, ATAN2, COS, TAN, DEGREES, RADIANS

SQRT Square root

Syntax: **SQRT**

Description: Calculates the square root of the floating point value in register A and stores the result in register A.

$\text{reg}[A] = \text{sqrt}(\text{reg}[A])$

Opcode: **41**

Special Cases:

- if the value is NaN or less than zero, then the result is NaN
- if the value is +infinity, then the result is +infinity
- if the value is 0.0 or -0.0, then the result is 0.0 or -0.0

STRBYTE Insert byte at string selection*Syntax:* **STRBYTE***Description:* If register A is 32-bit, the lower 8 bits of register 0 are stored as an 8-bit character in the string buffer at the current selection point. If register A is 64-bit, the lower 8 bits of register 128 are stored as an 8-bit character in the string buffer at the current selection point. The selection point is updated to point immediately after the stored byte, so multiple bytes can be appended.*Opcode:* **ED***See Also:* STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL**STRCMP Compare string with string selection***Syntax:* **STRCMP, *string****Description:* The *string* is compared with the string at the current selection point of the string buffer and the internal status byte is set.

status = longStatus of string compare

The status byte can be read with the READSTATUS instruction. It is set as follows:

Bit	7	6	5	4	3	2	1	0
	1	-	-	-	-	-	S	Z

Bit 1 Sign

Set if string selection < specified string

Bit 0 Zero

Set if string selection = specified string

If neither Bit 0 or Bit 1 is set, string selection > specified string

Opcode: **E6***Bytes 2-n:* ***string***

A zero-terminated string.

See Also: STRSET, STRSEL, STRINS, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL**STRDEC Decrement string selection point***Syntax:* **STRDEC***Description:* The string selection point is incremented and the selection length is set to zero.*Opcode:* **EF***Special Cases:* • the selection point will not decrement past the beginning of the string*See Also:* STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRFCHR Set field separator characters

Syntax: **STRFCHR, *string***

Description: The *string* specifies a list of characters (maximum of six) to be used as field separators by the STRFIELD instruction. The default field separator is a comma.

Opcode: **E8**

Bytes 2-n: ***string***
A zero-terminated string.

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRFIELD Find field in string

Syntax: **STRFIELD, *field***

Description: The selection point is set to the specified *field*. Fields are numbered from 1 to n, and are separated by the characters specified by the last STRFCHR instruction. If no STRFCHR instruction has been executed, the default field separator is a comma. If bit 7 of *field* is set, then bits 6:0 of *field* specify a register number, and the lower 8 bits of the register specify the field number.

Opcode: **E9**

Byte 2: ***field***
An 8-bit unsigned integer value.

Special Cases:

- if *field* = 0, selection point is set to the start of the string buffer
- if *field* > number of fields, selection point is set to the end of the string buffer

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRFIND Find string in the string buffer

Syntax: **STRFIND, *string***

Description: Search the current string selection in the string buffer for the first occurrence of the specified *string*. If the *string* is found, the selection point is set to the matching substring. If the *string* is not found, the selection point is set to the end of the current string selection.

Opcode: **E7**

Bytes 2-n: ***string***
A zero-terminated string.

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRINC Increment string selection point

Syntax: **STRINC**

Description: The string selection point is incremented and the selection length is set to zero.

Opcode: **EE**

Special Cases: • the selection point will not increment past the end of the string

See Also: STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRINS Insert string

Syntax: **STRINS, *string***

Description: Insert the *string* in the string buffer at the current selection point. The selection point is updated to point immediately after the inserted string, so multiple insertions can be appended.

Opcode: **E5**

Bytes 2-n: ***string***
A zero-terminated string.

See Also: STRSET, STRSEL, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC, STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRSEL Set string selection point

Syntax: **STRSEL, *start*, *length***

Description: Set the start of the string selection to character *start* and the length of the selection to *length* characters. Characters are numbered from 0 to n. If bit 7 of *start* is set, then bits 6:0 of *start* specify a register number, and the lower 8 bits of the register specify the start of the selection. If bit 7 of *length* is set, then bits 6:0 of *length* specify a register number, and the lower 8 bits of the register specify the length of the selection.

Opcode: **E4**

Byte 2: ***start***
Start of the string selection.

Byte 3: ***length***
Length of the string selection.

Special Cases: • if *start* > string length, start of selection is set to end of string
• if *start+length* > string length, selection is adjusted for the end of string

See Also: STRSET, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC,

STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRSET Copy string to string buffer*Syntax:* **STRSET, string***Description:* Copy the *string* to the string buffer and set the selection point to the end of the string buffer.*Opcode:* **E3***Bytes 2-n:* **string**
A zero-terminated string.*Special Cases:* • if *string* length > 127, *string* will be truncated to 127 characters*See Also:* STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD, STRINC,
STRDEC, STRBYTE, STRTOF, STRTOL, FTOA, LTOA, READSTR, READSEL

STRTOF Convert string selection to floating point*Syntax:* **STRTOF***Description:* Convert the string at the current selection point to a floating point value. If register A is 32-bit, the result is stored in register 0. If register A is 64-bit, the result is stored in register 128.*Opcode:* **EA***See Also:* STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD,
STRINC, STRDEC, STRBYTE, STRTOL, FTOA, LTOA, READSTR, READSEL

STRTOL Convert string selection to long integer*Syntax:* **STRTOL***Description:* Convert the string at the current selection point to a long integer value. If register A is 32-bit, the result is stored in register 0. If register A is 64-bit, the result is stored in register 128.*Opcode:* **EB***See Also:* STRSET, STRSEL, STRINS, STRCMP, STRFIND, STRFCHR, STRFIELD,
STRINC, STRDEC, STRBYTE, STRTOF, FTOA, LTOA, READSTR, READSEL

SWAP Swap registers*Syntax:* **SWAP, register1, register2***Description:* The values of *register1* and *register2* are swapped.
$$\text{tmp} = \text{reg}[\text{register1}], \text{reg}[\text{register1}] = \text{reg}[\text{register2}], \text{reg}[\text{register2}] = \text{tmp}$$

<i>Opcode:</i>	12
<i>Byte 2:</i>	register1 Register number (0 to 255).
<i>3rdByte:</i>	register2 Register number (0 to 255).
<i>Special Cases:</i>	<ul style="list-style-type: none"> • if <i>register2</i> is 32-bit and <i>register1</i> is 64-bit, only the lower 32-bits of <i>register1</i> are copied and the upper 32-bits of <i>register1</i> are set to zero • if <i>register2</i> is 64-bit and <i>register1</i> is 32-bit, only the lower 32-bits of <i>register2</i> are copied and the upper 32-bits of <i>register2</i> are set to zero

SWAPA Swap register A

<i>Syntax:</i>	SWAPA, register
<i>Description:</i>	<p>The values of <i>register</i> and register A are swapped.</p> <p>tmp = reg[<i>register</i>], reg[<i>register</i>] = reg[A], reg[A] = tmp</p>
<i>Opcode:</i>	13
<i>Byte 2:</i>	register Register number (0 to 255).
<i>Special Cases:</i>	<ul style="list-style-type: none"> • if reg[A] is 32-bit and <i>register</i> is 64-bit, only the lower 32-bits of <i>register</i> are copied and the upper 32-bits of <i>register</i> are set to zero • if <i>register</i> is 64-bit and reg[A] is 32-bit, only the lower 32-bits of reg[A] are copied and the upper 32-bits of reg[A] are set to zero

SYNC Synchronization

<i>Syntax:</i>	SYNC
<i>Description:</i>	A sync character (0x5C) is sent in reply. This instruction is typically used after a reset to verify communications.
<i>Opcode:</i>	F0
<i>Returns:</i>	5C

TABLE Table lookup

<i>Syntax:</i>	TABLE, tableSize, tableItem1...tableItemN
<i>Description:</i>	<p>This opcode is only valid within a user function stored in the uM-FPU64 Flash memory. The value of the item in the 32-bit table, indexed by register 0, is stored in register A. The first byte after the opcode specifies the size of the table, followed by groups of four bytes representing the 32-bit values for each item in the table. This instruction can be used to load either floating point values or long integer values. The long integer value in register 0 is used as an index into the table. The index number for the first table entry is zero.</p>

reg[A] = value from table indexed by reg[0]
 if reg[A] is 32-bit, reg[A] = value from table indexed by reg[0]
 if reg[A] is 64-bit, reg[A] = value from table indexed by lower 32-bits of reg[128]

Opcode: **85**

Byte 2: **tableSize**
 Number of items in table.

Bytes 3-n: **TableItem1...TableItemN**
 32-bit integer values or 32-bit floating point values

Special Cases:

- only valid inside user-defined functions stored in Flash memory.
- if reg[0 | 128] <= 0, then the result is item 0
- if reg[0 | 128] > maximum size of table, then the result is the last item in the table
- if reg[A] is 64-bit, the lower 32-bit are set to the value in the table and the upper 32-bits are zero

See Also: FTABLE, LTABLE, POLY

TAN Tangent

Syntax: **TAN**

Description: Calculates the tangent of the angle (in radians) in register A and stores the result in register A.

reg[A] = tan(reg[A])

Opcode: **49**

Special Cases:

- if reg[A] is NaN or an infinity, then the result is NaN
- if reg[A] is 0.0, then the result is 0.0
- if reg[A] is -0.0, then the result is -0.0

See Also: ACOS, ASIN, ATAN, ATAN2, COS, SIN, DEGREES, RADIANS

TICKLONG Load register 0 with millisecond ticks

Syntax: **TICKLONG**

Description: Load register 0 (32-bit) or register 128 (64-bit) with the ticks (in milliseconds).

if reg[A] is 32-bit, reg[0] = ticks, status = longStatus(reg[0])
 if reg[A] is 64-bit, reg[128] = ticks, status = longStatus(reg[128])

Opcode: **D9**

Special Cases:

- if reg[A] is 64-bit, then upper 32-bits are set to zero

See Also: TIMESET, TIMELONG, RTC, DELAY

TIMELONG Load register 0 with time value in seconds*Syntax:* **TIMELONG***Description:* Load register 0 (32-bit) or register 128 (64-bit) with the time (in seconds).

if reg[A] is 32-bit, reg[0] = time, status = longStatus(reg[0])

if reg[A] is 64-bit, reg[128] = time, status = longStatus(reg[128])

Opcode: **D8***Special Cases:* • if reg[A] is 64-bit, then upper 32-bits are set to zero*See Also:* **TIMESET, TICKLONG, RTC, DELAY**

TIMESET Set time value in seconds*Syntax:* **TIMESET***Description:* The time (in seconds) is set from the value in register 0 (32-bit) or register 128 (64-bit). The ticks (in milliseconds) is set to zero.

if reg[A] is 32-bit, time = reg[0], ticks = 0

if reg[A] is 64-bit, time = reg[128], ticks = 0

Opcode: **D7***Special Cases:* • if reg[A] is 64-bit, only the lower 32-bits are used
• if reg[0 | 128] is -1, the timer is turned off.*See Also:* **TIMELONG, TICKLONG, RTC, DELAY**

TRACEOFF Turn debug trace off*Syntax:* **TRACEOFF***Description:* Used with the built-in debugger. If the debugger is not enabled, this instruction is ignored. Debug tracing is turned off, and a {TOFF} message is sent to the serial output.*Opcode:* **F8**

TRACEON Turn debug trace on*Syntax:* **TRACEON***Description:* Used with the built-in debugger. If the debugger is not enabled, this instruction is ignored. Debug tracing is turned on, and a {TON, level, function, offset} message is sent to the serial output. The debug terminal will display a trace of all instructions executed until tracing is turned off.*Opcode:* **F9**

TRACEREG Display register value in debug trace

Syntax: **TRACEREG, register**

Description: Used with the built-in debugger. If the debugger is not enabled, this instruction is ignored. If the debugger is enabled, the value of *register* will be displayed on the debug terminal as follows:

32-bit register: {R1:3F800000}
 64-bit register: {R129:3FF0000000000000}

Opcode: **FB**

Byte 2: **register**
 Register number (0 to 255).

TRACESTR Display debug trace message

Syntax: **TRACESTR, string**

Description: Used with the built-in debugger. If the debugger is not enabled, this instruction is ignored. If the debugger is enabled, the *string* will be displayed on the debug terminal.

Opcode: **FA**

Bytes 2-n: **string**
 A zero-terminated string.

VERSION Copy the version string to the string buffer

Syntax: **VERSION**

Description: The uM-FPU64 version string is copied to the string buffer at the current selection point, and the version code is copied to register 0. The version code is represented as follows:

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	3				Major				Minor				Beta			
Bits 15:12	Chip Version (always set to 4)															
Bits 11:8	Major Version															
Bits 7:4	Minor Version															
Bits 3:0	Beta Version															

As an example,:

version string: uM-FPU64
 version code: 0x4100

Opcode: **F3**

WRIND Write data using indirect pointer (new in uM-FPU64)

Syntax: **WRIND, dataType, pointer, count, value1...valueN**

Description: Write *count* data values of the specified *dataType* to the *pointer* location. The pointer can be a register pointer or a memory pointer. If *dataType* is different then the data type of the *pointer* data conversion is automatically performed.

Opcode: 70

Byte 2: *dataType*

Bit	7	6	5	4	3	2	1	0
	-				Data Type			

Bits 3:0	Data Type	IDE Symbol	IDE Value	Description
	INT8	INT8	0x08	8-bit signed integer data
	UINT8	UINT8	0x09	8-bit unsigned integer data
	INT16	INT16	0x0A	16-bit signed integer data
	UINT16	UINT16	0x0B	16-bit unsigned integer data
	LONG32	LONG32	0x0C	32-bit long integer data
	FLOAT32	FLOAT32	0x0D	32-bit floating point data
	LONG64	LONG64	0x0E	64-bit long integer data
	FLOAT64	FLOAT64	0x0F	64-bit float point data

Byte 3: *pointer*

The register number of a register that contains a pointer (0 to 255).

Byte 4: *count*

An 8-bit value that specifies the number of data items to write to the pointer location (0 to 255).

Bytes 5-n: *value1...valueN*

Data values of the type specified by *dataType*.

Special Cases: • if *dataType* is 32-bit floating point, and PICMODE is enabled, the values are converted to IEEE-754 format before being stored

See Also: SETIND, ADDIND, RDIND, COPYIND, LOADIND, SAVEIND
FWRITE, FWRITE0, FWRITEA, FWRITEX, LWRITE, LWRITE0, LWRITEA,
LWRITEX, DWRITE

XSAVE Save register value to register X

Syntax: XSAVE, *register*

Description: Set register X to the value of *register*, and select the next register in sequence as register X.

$\text{reg}[X] = \text{reg}[\text{register}]$, status = longStatus(reg[X]), X = X + 1

Opcode: 0E

Byte 2: *register*

Register number (0 to 255).

Special Cases: • if *register* is 32-bit and reg[X] is 64-bit, the upper 32-bits of reg[X] are set to zero
• if *register* is 64-bit and reg[X] is 32-bit, only the lower 32-bits of *register* are copied

- if reg[X] is 32-bit, it will not increment past register 127
- if reg[X] is 64-bit, it will not increment past register 255

See Also: `LOAD, LOADA, LOADX, ALOADX, XSAVEA`

XSAVEA Save register A to register X

Syntax: **XSAVEA**

Description: Set register X to the value of register A, and select the next register in sequence as register X.

$\text{reg}[X] = \text{reg}[A]$, $\text{status} = \text{longStatus}(\text{reg}[X])$, $X = X + 1$

Opcode: **0F**

Special Cases:

- if reg[A] is 32-bit and reg[X] is 64-bit, the upper 32-bits of reg[X] are set to zero
- if reg[A] is 64-bit and reg[X] is 32-bit, only the lower 32-bits of reg[A] are copied
- if reg[X] is 32-bit, it will not increment past register 127
- if reg[X] is 64-bit, it will not increment past register 255

See Also: `LOAD, LOADA, LOADX, ALOADX, XSAVE`

Appendix A

uM-FPU64 Instruction Summary

Instruction	Opcode	Arguments	Returns	Description
NOP	00			No Operation
SELECTA	01	<i>register</i>		Select register A, $A = \text{register}$
SELECTX	02	<i>register</i>		Select register X, $X = \text{register}$
CLR	03	<i>register</i>		$\text{reg}[\text{register}] = 0$
CLRA	04			$\text{reg}[A] = 0$
CLRX	05			$\text{reg}[X] = 0, X = X + 1$
CLR0	06			$\text{reg}[0 \mid 128] = 0$
COPY	07	<i>register1</i> , <i>register2</i>		$\text{reg}[\text{register2}] = \text{reg}[\text{register1}]$
COPYA	08	<i>register</i>		$\text{reg}[\text{register}] = \text{reg}[A]$
COPYX	09	<i>register</i>		$\text{reg}[\text{register}] = \text{reg}[X], X = X + 1$
LOAD	0A	<i>register</i>		$\text{reg}[0 \mid 128] = \text{reg}[\text{register}]$
LOADA	0B			$\text{reg}[0 \mid 128] = \text{reg}[A]$
LOADX	0C			$\text{reg}[0 \mid 128] = \text{reg}[X], X = X + 1$
ALOADX	0D			$\text{reg}[A] = \text{reg}[X], X = X + 1$
XSAVE	0E	<i>register</i>		$\text{reg}[X] = \text{reg}[\text{register}], X = X + 1$
XSAVEA	0F			$\text{reg}[X] = \text{reg}[A], X = X + 1$
COPY0	10	<i>register</i>		$\text{reg}[\text{register}] = \text{reg}[0 \mid 128]$
LCOPYI	11	<i>signedByte</i> , <i>register</i>		$\text{reg}[\text{register}] = \text{long}(\text{signedByte})$
SWAP	12	<i>register1</i> , <i>register2</i>		Swap $\text{reg}[\text{register1}]$ and $\text{reg}[\text{register2}]$
SWAPA	13	<i>register</i>		Swap $\text{reg}[\text{register}]$ and $\text{reg}[A]$
LEFT	14			Left parenthesis
RIGHT	15			Right parenthesis
FWRITE	16	<i>register</i> , <i>float32Value</i>		Write 32-bit floating point to $\text{reg}[\text{register}]$
FWRITEA	17	<i>float32Value</i>		Write 32-bit floating point to $\text{reg}[A]$
FWRITEX	18	<i>float32Value</i>		Write 32-bit floating point to $\text{reg}[X]$
FWRITE0	19	<i>float32Value</i>		Write 32-bit floating point to $\text{reg}[0 \mid 128]$
FREAD	1A	<i>register</i>	<i>float32Value</i>	Read 32-bit floating point from $\text{reg}[\text{register}]$
FREADA	1B		<i>float32Value</i>	Read 32-bit floating point from $\text{reg}[A]$
FREADX	1C		<i>float32Value</i>	Read 32-bit floating point from $\text{reg}[X]$
FREAD0	1D		<i>float32Value</i>	Read 32-bit floating point from $\text{reg}[0 \mid 128]$
ATOF	1E	<i>string</i>		Convert ASCII to floating point
FTOA	1F	<i>format</i>		Convert floating point to ASCII
FSET	20	<i>register</i>		$\text{reg}[A] = \text{reg}[\text{register}]$
FADD	21	<i>register</i>		$\text{reg}[A] = \text{reg}[A] + \text{reg}[\text{register}]$
FSUB	22	<i>register</i>		$\text{reg}[A] = \text{reg}[A] - \text{reg}[\text{register}]$
FSUBR	23	<i>register</i>		$\text{reg}[A] = \text{reg}[\text{register}] - \text{reg}[A]$
FMUL	24	<i>register</i>		$\text{reg}[A] = \text{reg}[A] * \text{reg}[\text{register}]$
FDIV	25	<i>register</i>		$\text{reg}[A] = \text{reg}[A] / \text{reg}[\text{register}]$
FDIVR	26	<i>register</i>		$\text{reg}[A] = \text{reg}[\text{register}] / \text{reg}[A]$
FPOW	27	<i>register</i>		$\text{reg}[A] = \text{reg}[A] ** \text{reg}[\text{register}]$

FCMP	28	<i>register</i>		Compare reg[A] and reg[<i>register</i>], and set status
FSET0	29			$\text{reg}[A] = \text{reg}[0 \mid 128]$
FADD0	2A			$\text{reg}[A] = \text{reg}[A] + \text{reg}[0 \mid 128]$
FSUB0	2B			$\text{reg}[A] = \text{reg}[A] - \text{reg}[0 \mid 128]$
FSUBR0	2C			$\text{reg}[A] = \text{reg}[0] - \text{reg}[A]$
FMUL0	2D			$\text{reg}[A] = \text{reg}[A] * \text{reg}[0 \mid 128]$
FDIV0	2E			$\text{reg}[A] = \text{reg}[A] / \text{reg}[0 \mid 128]$
FDIVR0	2F			$\text{reg}[A] = \text{reg}[0 \mid 128] / \text{reg}[A]$
FPOW0	30			$\text{reg}[A] = \text{reg}[A] ** \text{reg}[0 \mid 128]$
FCMP0	31			Compare reg[A] and reg[0 128]
FSETI	32	<i>signedByte</i>		$\text{reg}[A] = \text{float}(\text{signedByte})$
FADDI	33	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] - \text{float}(\text{signedByte})$
FSUBI	34	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] - \text{float}(\text{signedByte})$
FSUBRI	35	<i>signedByte</i>		$\text{reg}[A] = \text{float}(\text{signedByte}) - \text{reg}[A]$
FMULI	36	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] * \text{float}(\text{signedByte})$
FDIVI	37	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] / \text{float}(\text{signedByte})$
FDIVRI	38	<i>signedByte</i>		$\text{reg}[A] = \text{float}(\text{signedByte}) / \text{reg}[A]$
FPOWI	39	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] ** \text{signedByte}$
FCMPI	3A	<i>signedByte</i>		Compare reg[A] and float(<i>signedByte</i>), and set floating point status
FSTATUS	3B	<i>register</i>		Set floating point status for <i>register</i>
FSTATUSA	3C			Set floating point status for reg[A]
FCMP2	3D	<i>register1, register2</i>		Compare reg[<i>register1</i>] and reg[<i>register2</i>], and set floating point status
FNEG	3E			$\text{reg}[A] = -\text{reg}[A]$
FABS	3F			$\text{reg}[A] = \text{reg}[A] $
FINV	40			$\text{reg}[A] = 1 / \text{reg}[A]$
SQRT	41			$\text{reg}[A] = \text{sqrt}(\text{reg}[A])$
ROOT	42	<i>register</i>		$\text{reg}[A] = \text{root}(\text{reg}[A], \text{reg}[\text{register}])$
LOG	43			$\text{reg}[A] = \log(\text{reg}[A])$
LOG10	44			$\text{reg}[A] = \log_{10}(\text{reg}[A])$
EXP	45			$\text{reg}[A] = \exp(\text{reg}[A])$
EXP10	46			$\text{reg}[A] = \exp_{10}(\text{reg}[A])$
SIN	47			$\text{reg}[A] = \sin(\text{reg}[A])$
COS	48			$\text{reg}[A] = \cos(\text{reg}[A])$
TAN	49			$\text{reg}[A] = \tan(\text{reg}[A])$
ASIN	4A			$\text{reg}[A] = \text{asin}(\text{reg}[A])$
ACOS	4B			$\text{reg}[A] = \text{acos}(\text{reg}[A])$
ATAN	4C			$\text{reg}[A] = \text{atan}(\text{reg}[A])$
ATAN2	4D	<i>register</i>		$\text{reg}[A] = \text{atan2}(\text{reg}[A], \text{reg}[\text{register}])$
DEGREES	4E			$\text{reg}[A] = \text{degrees}(\text{reg}[A])$
RADIANS	4F			$\text{reg}[A] = \text{radians}(\text{reg}[A])$
FMOD	50	<i>register</i>		$\text{reg}[A] = \text{reg}[A] \text{ MOD } \text{reg}[\text{register}]$
FLOOR	51			$\text{reg}[A] = \text{floor}(\text{reg}[A])$
CEIL	52			$\text{reg}[A] = \text{ceil}(\text{reg}[A])$
ROUND	53			$\text{reg}[A] = \text{round}(\text{reg}[A])$
FMIN	54	<i>register</i>		$\text{reg}[A] = \min(\text{reg}[A], \text{reg}[\text{register}])$
FMAX	55	<i>register</i>		$\text{reg}[A] = \max(\text{reg}[A], \text{reg}[\text{register}])$
FCNV	56	<i>conversion</i>		$\text{reg}[A] = \text{conversion}(\text{reg}[A])$

FMAC	57	<i>register1, register2</i>		$\text{reg}[A] = \text{reg}[A] + (\text{reg}[\text{register1}] * \text{reg}[\text{register2}])$
FMSC	58	<i>register1, register2</i>		$\text{reg}[A] = \text{reg}[A] - (\text{reg}[\text{register1}] * \text{reg}[\text{register2}])$
LOADBYTE	59	<i>signedByte</i>		$\text{reg}[0 \mid 128] = \text{float}(\text{signedByte})$
LOADUBYTE	5A	<i>unsignedByte</i>		$\text{reg}[0 \mid 128] = \text{float}(\text{unsignedByte})$
LOADWORD	5B	<i>signedWord</i>		$\text{reg}[0 \mid 128] = \text{float}(\text{signedWord})$
LOADUWORD	5C	<i>unsignedWord</i>		$\text{reg}[0 \mid 128] = \text{float}(\text{unsignedWord})$
LOADE	5D			$\text{reg}[0 \mid 128] = 2.7182818$
LOADPI	5E			$\text{reg}[0 \mid 128] = 3.1415927$
FCOPYI	5F	<i>signedByte, register</i>		$\text{reg}[\text{register}] = \text{float}(\text{signedByte})$
FLOAT	60			$\text{reg}[A] = \text{float}(\text{reg}[A])$
FIX	61			$\text{reg}[A] = \text{fix}(\text{reg}[A])$
FIXR	62			$\text{reg}[A] = \text{fix}(\text{round}(\text{reg}[A]))$
FRAC	63			$\text{reg}[A] = \text{fraction}(\text{reg}[A])$
FSPLIT	64			$\text{reg}[A] = \text{integer}(\text{reg}[A]),$ $\text{reg}[0 \mid 128] = \text{fraction}(\text{reg}[A])$
SELECTMA	65	<i>register, rows, columns</i>		Select matrix A, starting at <i>register</i> . size = <i>rows</i> x <i>columns</i>
SELECTMB	66	<i>register, rows, columns</i>		Select matrix B, starting at <i>register</i> . size = <i>rows</i> x <i>columns</i>
SELECTMC	67	<i>register, rows, columns</i>		Select matrix C, starting at <i>register</i> . size = <i>rows</i> x <i>columns</i>
LOADMA	68	<i>row, column</i>		$\text{reg}[0] = \text{Matrix A}[\text{row}, \text{column}]$
LOADMB	69	<i>row, column</i>		$\text{reg}[0] = \text{Matrix B}[\text{row}, \text{column}]$
LOADMC	6A	<i>row, column</i>		$\text{reg}[0] = \text{Matrix C}[\text{row}, \text{column}]$
SAVEMA	6B	<i>row, column</i>		$\text{Matrix A}[\text{row}, \text{column}] = \text{reg}[0]$
SAVEMB	6C	<i>row, column</i>		$\text{Matrix B}[\text{row}, \text{column}] = \text{reg}[0]$
SAVEMC	6D	<i>row, column</i>		$\text{Matrix C}[\text{row}, \text{column}] = \text{reg}[0]$
MOP	6E	<i>action</i>		Matrix/Vector operation
FFT	6F	<i>action</i>		Fast Fourier Transform
WRIND	70	<i>dataType, pointer, count, value1... valueN</i>		Write multiple data values to indirect pointer
RDIND	71	<i>dataType, pointer, count</i>	<i>value1...valueN</i>	Read multiple data values from indirect pointer
DWRITE	72	<i>register, value64</i>		Write 64-bit value
DREAD	73	<i>register</i>	<i>value64</i>	Read 64-bit value
LBIT	74	<i>action, register</i>		Bit Clear, Set, Toggle, Test
SETIND	77	<i>type, {register address}</i>		Set indirect pointer
ADDIND	78	<i>register, unsignedByte</i>		Add to indirect pointer
COPYIND	79	<i>register1, register2, register3</i>		Copy using indirect pointers
LOADIND	7A	<i>register</i>		Load $\text{reg}[0 \mid 128]$ using indirect pointer
SAVEIND	7B	<i>register</i>		Save $\text{reg}[A]$ using indirect pointer
INDA	7C	<i>register</i>		Select register A using $\text{reg}[\text{register}]$ value

INDX	7D	<i>register</i>		Select register X using reg[<i>register</i>] value
FCALL	7E	<i>function</i>		Call user-defined function in Flash
EVENT	7F	<i>action</i> {, <i>function</i> }		Background Events
RET	80			Return from user-defined function
BRA	81	<i>relativeOffset</i>		Unconditional branch
BRA, cc	82	<i>conditionCode</i> , <i>relativeOffset</i>		Conditional branch
JMP	83	<i>absoluteOffset</i>		Unconditional jump
JMP, cc	84	<i>conditionCode</i> , <i>absoluteOffset</i>		Conditional jump
TABLE	85	<i>tableSize</i> , <i>tableItem1...</i> <i>tableItemN</i>		Table lookup
FTABLE	86	<i>conditionCode</i> , <i>tableSize</i> , <i>tableItem1...</i> <i>tableItemN</i>		Floating point reverse table lookup
LTABLE	87	<i>conditionCode</i> , <i>tableSize</i> , <i>tableItem1...</i> <i>tableItemN</i>		Long integer reverse table lookup
POLY	88	<i>count</i> , <i>float32Value1...</i> <i>float32ValueN</i>		reg[A] = nth order polynomial
GOTO	89	<i>register</i>		Computed GOTO
RET, cc	8A	<i>conditionCode</i>		Conditional return from user-defined function
LWRITE	90	<i>register</i> , <i>int32Value</i>		Write 32-bit long integer to reg[<i>register</i>]
LWRITEA	91	<i>int32Value</i>		Write 32-bit long integer to reg[A]
LWRITEX	92	<i>int32Value</i>		Write 32-bit long integer to reg[X], X = X + 1
LWRITE0	93	<i>int32Value</i>		Write 32-bit long integer to reg[0 128]
LREAD	94	<i>register</i>	<i>int32Value</i>	Read 32-bit long integer from reg[<i>register</i>]
LREADA	95		<i>int32Value</i>	Read 32-bit long value from reg[A]
LREADX	96		<i>int32Value</i>	Read 32-bit long integer from reg[X], X = X + 1
LREAD0	97		<i>int32Value</i>	Read 32-bit long integer from reg[0 128]
LREADBYTE	98		<i>byteValue</i>	Read lower 8 bits of reg[A]
LREADWORD	99		<i>wordValue</i>	Read lower 16 bits reg[A]
ATOL	9A	<i>string</i>		Convert ASCII to long integer
LTOA	9B	<i>format</i>		Convert long integer to ASCII
LSET	9C	<i>register</i>		reg[A] = reg[<i>register</i>]
LADD	9D	<i>register</i>		reg[A] = reg[A] + reg[<i>register</i>]
LSUB	9E	<i>register</i>		reg[A] = reg[A] - reg[<i>register</i>]
LMUL	9F	<i>register</i>		reg[A] = reg[A] * reg[<i>register</i>]
LDIV	A0	<i>register</i>		reg[A] = reg[A] / reg[<i>register</i>] reg[0 128] = remainder
LCMP	A1	<i>register</i>		Signed compare reg[A] and reg[<i>register</i>], and set status

LUDIV	A2	<i>register</i>		$\text{reg}[A] = \text{reg}[A] / \text{reg}[\text{register}]$ $\text{reg}[0 \mid 128] = \text{remainder}$
LUCMP	A3	<i>register</i>		Unsigned compare $\text{reg}[A]$ and $\text{reg}[\text{register}]$, and set long integer status
LTST	A4	<i>register</i>		Test $\text{reg}[A]$ AND $\text{reg}[\text{register}]$, and set long integer status
LSET0	A5			$\text{reg}[A] = \text{reg}[0]$
LADD0	A6			$\text{reg}[A] = \text{reg}[A] + \text{reg}[0 \mid 128]$
LSUB0	A7			$\text{reg}[A] = \text{reg}[A] - \text{reg}[0 \mid 128]$
LMUL0	A8			$\text{reg}[A] = \text{reg}[A] * \text{reg}[0 \mid 128]$
LDIV0	A9			$\text{reg}[A] = \text{reg}[A] / \text{reg}[0 \mid 128]$ $\text{reg}[0] = \text{remainder}$
LCMP0	AA			Signed compare $\text{reg}[A]$ and $\text{reg}[0 \mid 128]$, and set long integer status
LUDIV0	AB			$\text{reg}[A] = \text{reg}[A] / \text{reg}[0 \mid 128]$ $\text{reg}[0] = \text{remainder}$
LUCMP0	AC			Unsigned compare $\text{reg}[A]$ and $\text{reg}[0 \mid 128]$, and set long integer status
LTST0	AD			Test $\text{reg}[A]$ AND $\text{reg}[0 \mid 128]$, and set long integer status
LSETI	AE	<i>signedByte</i>		$\text{reg}[A] = \text{long}(\text{signedByte})$
LADDI	AF	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] + \text{long}(\text{signedByte})$
LSUBI	B0	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] - \text{long}(\text{signedByte})$
LMULI	B1	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] * \text{long}(\text{signedByte})$
LDIVI	B2	<i>signedByte</i>		$\text{reg}[A] = \text{reg}[A] / \text{long}(\text{signedByte})$ $\text{reg}[0 \mid 128] = \text{remainder}$
LCMPI	B3	<i>signedByte</i>		Signed compare $\text{reg}[A] - \text{long}(\text{signedByte})$, and set long integer status
LUDIVI	B4	<i>unsignedByte</i>		$\text{reg}[A] = \text{reg}[A] / \text{long}(\text{unsignedByte})$ $\text{reg}[0 \mid 128] = \text{remainder}$
LUCMPI	B5	<i>unsignedByte</i>		Unsigned integer compare $\text{reg}[A]$ and $\text{long}(\text{unsignedByte})$, and set status
LTSTI	B6	<i>unsignedByte</i>		Test $\text{reg}[A]$ AND $\text{long}(\text{unsignedByte})$, and set long integer status
LSTATUS	B7	<i>register</i>		Set long integer status for $\text{reg}[\text{register}]$
LSTATUSA	B8			Set long integer status for $\text{reg}[A]$
LCMP2	B9	<i>register1, register2</i>		Signed integer compare $\text{reg}[\text{register1}]$, $\text{reg}[\text{register2}]$, and set status
LUCMP2	BA	<i>register1, register2</i>		Unsigned integer compare $\text{reg}[\text{register1}]$, $\text{reg}[\text{register2}]$, and set status
LNEG	BB			$\text{reg}[A] = -\text{reg}[A]$
LABS	BC			$\text{reg}[A] = \text{absolute value}(\text{reg}[A])$
LINC	BD	<i>register</i>		$\text{reg}[\text{register}] = \text{reg}[\text{register}] + 1$
LDEC	BE	<i>register</i>		$\text{reg}[\text{register}] = \text{reg}[\text{register}] - 1$
LNOT	BF			$\text{reg}[A] = \text{NOT } \text{reg}[A]$
LAND	C0	<i>register</i>		$\text{reg}[A] = \text{reg}[A] \text{ AND } \text{reg}[\text{register}]$
LOR	C1	<i>register</i>		$\text{reg}[A] = \text{reg}[A] \text{ OR } \text{reg}[\text{register}]$
LXOR	C2	<i>register</i>		$\text{reg}[A] = \text{reg}[A] \text{ XOR } \text{reg}[\text{register}]$
LSHIFT	C3	<i>register</i>		$\text{reg}[A] = \text{reg}[A] \text{ shift } \text{reg}[\text{register}]$
LMIN	C4	<i>register</i>		$\text{reg}[A] = \text{min}(\text{reg}[A], \text{reg}[\text{register}])$
LMAX	C5	<i>register</i>		$\text{reg}[A] = \text{max}(\text{reg}[A], \text{reg}[\text{register}])$

LONGBYTE	C6	<i>signedByte</i>		reg[0 128] = long(<i>signedByte</i>)
LONGUBYTE	C7	<i>unsignedByte</i>		reg[0 128] = long(<i>unsignedByte</i>)
LONGWORD	C8	<i>signedWord</i>		reg[0 128] = long(<i>signedWord</i>)
LONGUWORD	C9	<i>unsignedWord</i>		reg[0 128] = long(<i>unsignedWord</i>)
LSHIFTI	CA	<i>unsignedByte</i>		reg[A] = reg[A] shift <i>unsignedByte</i>
LANDI	CB	<i>unsignedByte</i>		reg[A] = reg[A] AND <i>unsignedByte</i>
LORI	CC	<i>unsignedByte</i>		reg[A] = reg[A] OR <i>unsignedByte</i>
SETSTATUS	CD	<i>status</i>		Set status byte
SEROUT	CE	<i>action</i> , { <i>baud</i> } / { <i>string</i> }		Serial output
SERIN	CF	<i>action</i>		Serial input
DIGIO	D0	<i>action</i> , { <i>mode</i> }		Digital I/O
ADCMODE	D1	<i>mode</i>		Set A/D trigger mode
ADCTRIG	D2			A/D manual trigger
ADCSCALE	D3	<i>channel</i>		ADCscale[ch] = reg[0]
ADCLONG	D4	<i>channel</i>		reg[0] = ADCvalue[<i>channel</i>]
ADCLOAD	D5	<i>channel</i>		reg[0] = float(ADCvalue[<i>channel</i>]) * ADCscale[<i>channel</i>]
ADCWAIT	D6			wait for next A/D sample
TIMESET	D7			time = reg[0]
TIMELONG	D8			reg[0] = time (long integer)
TICKLONG	D9			reg[0] = ticks (long integer)
DEVIO	DA	<i>device</i> , <i>action</i> {, ...}		Device I/O
DELAY	DB	<i>period</i>		Delay (in milliseconds)
RTC	DC	<i>action</i>		Real-time Clock
SETARGS	DD			Enable FCALL argument loading
EXTSET	E0			external input count = reg[0]
EXTLONG	E1			reg[0] = external input counter
EXTWAIT	E2			wait for next external input
STRSET	E3	<i>string</i>		Copy string to string buffer
STRSEL	E4	<i>start</i> , <i>length</i>		Set selection point
STRINS	E5	<i>string</i>		Insert string at selection point
STRCMP	E6	<i>string</i>		Compare string with string selection
STRFIND	E7	<i>string</i>		Find string
STRFCHR	E8	<i>string</i>		Set field separators
STRFIELD	E9	<i>field</i>		Find field
STRTOF	EA			Convert string selection to floating point
STRTOL	EB			Convert string selection to long integer
READSEL	EC		<i>string</i>	Read string selection
STRBYTE	ED			Insert byte at selection point
STRINC	EE			Increment string selection point
STRDEC	EF			Decrement string selection point
SYNC	F0		5C	Get synchronization byte
READSTATUS	F1		<i>status</i>	Read status byte
READSTR	F2		<i>string</i>	Read string from string buffer
VERSION	F3			Copy version string to string buffer
IEEEMODE	F4			Set IEEE mode (default)
PICMODE	F5			Set PIC mode
CHECKSUM	F6			Calculate checksum for uM-FPU code

BREAK	F7			Debug breakpoint
TRACEOFF	F8			Turn debug trace off
TRACEON	F9			Turn debug trace on
TRACESTR	FA	<i>string</i>		Send string to debug trace buffer
TRACEREG	FB	<i>register</i>		Send register value to trace buffer
READVAR	FC	<i>item</i>		Read internal register value
SETREAD	FD			Set read mode
RESET	FF			Reset (9 consecutive FF bytes cause a reset, otherwise it is a NOP)

Notes:

Opcode	Opcode value in hexadecimal
Arguments	Additional data required by instruction
Returns	Data returned by instruction
register	register number (0-255).
register1	register number (0-255).
register2	register number (0-255).
function	function number (0-63).
byteValue	8-bit integer value.
signedByte	8-bit signed integer value.
unsignedByte	8-bit unsigned integer value.
wordValue	16-bit integer value (MSB first).
signedWord	16-bit signed integer value.
unsignedWord	16-bit unsigned integer value.
int32Value	32-bit integer value (MSB first).
float32Value	32-bit floating point value (MSB first).
status	Status byte.
string	Zero-terminated string.
baud	Baud rate and debug mode.
conditionCode	Condition code.
absoluteOffset	User-defined function offset (absolute offset).
relativeOffset	User-defined function offset (-128 to +127 from current offset).
channel	A/D channel number.
count	Byte count.
tableSize	Number of table items
tableItem1...tableItemN	Table values.
start	String of string selection.
length	Length of string selection.
item	Internal value to read.
conversion	Selects the conversion to perform.