

Micromega Corporation


# Using uM-FPU V3.1 with the ARMmite and ARMexpress controllers

## Introduction

The uM-FPU V3.1 chip is a 32-bit floating point coprocessor that can be easily interfaced with the ARMmite and ARMexpress controllers to provide support for 32-bit IEEE 754 floating point operations and 32-bit long integer operations. The uM-FPU V3.1 chip supports both I<sup>2</sup>C and SPI connections.

This document describes how to use the uM-FPU V3.1 chip with the ARMmite/ARMexpress. For a full description of the uM-FPU V3.1 chip, please refer to the *uM-FPU V3.1 Datasheet* and *uM-FPU V3.1 Instruction Reference*. Application notes are also available on the Micromega website.

## uM-FPU V3.1 Pin Diagram and Pin Description

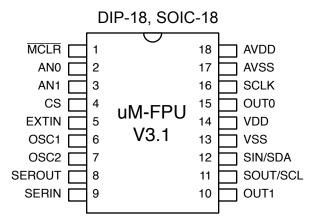

Pin	Name	Туре	Description
1	/MCLR	Input	Master Clear (Reset)
2	AN0	Input	Analog Input 0
3	AN1	Input	Analog Input 1
4	CS	Input	Chip Select, Interface Select
5	EXTIN	Input	External Input
6	OSC1	Input	Oscillator Crystal (optional)
7	OSC2	Output	Oscillator Crystal (optional)
8	SEROUT	Output	Serial Output, Debug Monitor - Tx
9	SERIN	Input	Serial Input, Debug Monitor - Rx
10	OUT1	Output	Digital Output 1
11	SOUT SCL	Output Input	SPI Output, Busy/Ready Status I <sup>2</sup> C Clock


12	SIN SDA	Input In/Out	SPI Input I <sup>2</sup> C Data
13	VSS	Power	Digital Ground
14	VDD	Power	Digital Supply Voltage
15	OUT0	Output	Digital Output 0
16	SCLK	Input	SPI Clock
17	AVSS	Power	Analog Ground
18	AVDD	Power	Analog Supply Voltage

## Connecting the ARMmite/ARMexpress using 2-wire SPI

Only two pins are required for interfacing to the ARMmite/ARMexpress to the uM-FPU V3.1 chip using a 2-wire SPI interface. The communication uses a bidirectional serial interface that requires a clock pin and a data pin. The default settings for these pins are shown below. (They can be changed to suit your application.)

CONST	FpuClk	= 15	'	pin 15
CONST	FpuOut	= 14	'	pin 14
CONST	FpuIn	= 14	'	pin 14
#define	FpuCS	-1	'	no chip select

## **ARMmite/ARMexpress Pins**

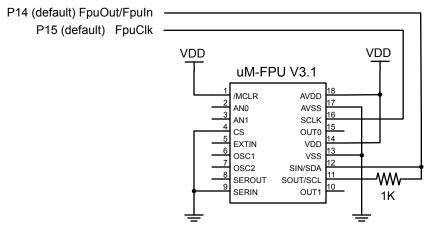


## Connecting the ARMmite/ARMexpress using 3-wire SPI

Three pins are required for interfacing to the ARMmite/ARMexpress to the uM-FPU V3.1 chip using a 3-wire SPI interface. The communication uses a clock pin, an input data pin, and an output data pin. The default settings for these pins are shown below. (They can be changed to suit your application.)

CONST	FpuClk	= 15	' pin 15
CONST	FpuOut	= 14	' pin 14
CONST	FpuIn	= 13	' pin 13
#define	FpuCS	-1	' no chip select

### **ARMmite/ARMexpress Pins**

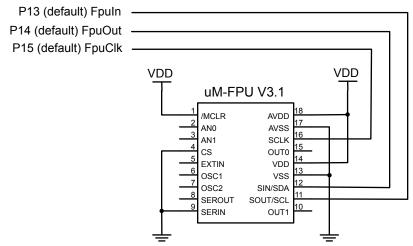


## Connecting the ARMmite/ARMexpress using an SPI Bus Interface

In order for the uM-FPU V3.1 chip to be used on an SPI bus with multiple devices, the CS pin must be enabled as a chip select. This is accomplished by programming mode parameter bits stored in Flash memory on the uM-FPU V3.1 chip. Bits 1:0 of mode parameter byte 0 must be set to 11 to select SPI bus mode. When this mode is set, the SPI interface is automatically selected at Reset, and the CS pin is enabled as a standard active low slave select. The SOUT pin is high impedance when the uM-FPU V3.1 chip is not selected. The connection diagram is shown below:

CONST	FpuClk	= 15	' pin 15
CONST	FpuOut	= 14	' pin 14
CONST	FpuIn	= 13	' pin 13
#define	FpuCS	= 12	' pin 12


#### **ARMmite/ARMexpress Pins**

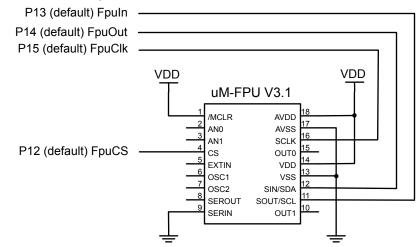

The clock signal is idle low and data is read on the rising edge of the clock (often referred to as SPI Mode 0).

## Connecting the ARMmite/ARMexpress using I<sup>2</sup>C

The uM-FPU V3.1 can also be connected using an I<sup>2</sup>C interface. The default slave ID for the uM-FPU chip is C8. The default setting for the I<sup>2</sup>C pins is shown below (they can be changed to suit your application):

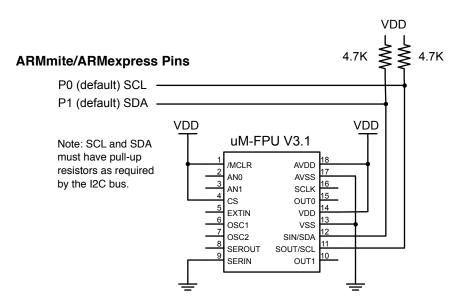

FpuPin Pin 0 (SDA is Pin 0, SCL is Pin 1)

## Brief Overview of the uM-FPU V3.1 Floating Point Coprocessor

For a full description of the uM-FPU V3.1 chip, please refer to the *uM-FPU V3.1 Datasheet*, *uM-FPU V3.1 Instruction Reference*. Application notes are also available on the Micromega website.

The uM-FPU V3.1 chip is a separate coprocessor with its own set of registers and instructions designed to provide microcontrollers with 32-bit floating point and long integer capabilities. The ARMmite/ARMexpress communicates with the FPU using an SPI or I<sup>2</sup>C interface. Instructions and data are sent to the FPU, and the FPU performs the calculations. The ARMmite/ARMexpress is free to do other tasks while the FPU performs calculations. Results can be read back to the ARMmite/ARMexpress or stored on the FPU for later use. The uM-FPU V3.1 chip has 128 registers, numbered 0 through 127, that can hold 32-bit floating point or long integer values. Register 0 is often used as a temporary register and is modified by some of the uM-FPU V3.1 instructions. Registers 1 through 127 are available for general use.

The SELECTA instruction is used to select any one of the 128 registers as register A. Register A can be regarded as an accumulator or working register. Arithmetic instructions use the value in register A as an operand and store the result of the operation in register A. If an instruction requires more than one operand, the additional operand is specified by the instruction. The following example selects register 2 as register A and adds register 5 to it:

SELECTA, 2	select register 2 as register A
FADD, 5	register[A] = register[A] + register[5]

## Sending Instructions to the uM-FPU

Appendix A contains a table that gives a summary of each uM-FPU V3.1 instruction, with enough information to follow the examples in this document. For a detailed description of each instruction, refer to the *uM-FPU V3.1 Instruction Reference*.

To send instructions to the FPU using PICBASIC PRO with an SPI interface, the SPIOUT command is used as follows:

```
SPIOUT FpuCS, FpuOut, FpuClk, [FADD, 5]
```

To send instructions to the FPU using PICNASIC PRO with an I<sup>2</sup>C interface, the I2COUT command is used as follows:

I2COUT FpuPin, FpuID, [0, FADD, 5] Note: the first byte of an I2COUT instruction must always be zero.

The instructions and data to send to the FPU are located inside the square brackets. The beginning of the command is always the same, and depends on whether you are using an SPI or  $I^2C$  interface. It tells the ARMmite/ ARMexpress how to communicate with the FPU. The SPIOUT command is used for the examples in this document, but the I2COUT command would be substituted if an  $I^2C$  interface is used.

All instructions have an opcode that tells the FPU which operation to perform, The following example calculates the square root of register A:

SPIOUT FpuCS, FpuOut, FpuClk, [SQRT]

Some instructions require additional operands or data and are specified by the bytes following the opcode. The following example adds register 5 to register A.

SPIOUT FpuCS, FpuOut, FpuClk, [FADD, 5]

Some instructions return data. This example reads the lower 8 bits of register A:

```
GOSUB Fpu_Wait
SPIOUT FpuCS, FpuOut, FpuClk, [LREADBYTE]
GOSUB Fpu_ReadDelay
SPIIN FpuCS, FpuIn, FpuClk, [dataByte]
```

The following example adds the value in register 5 to the value in register 2.

SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, 2, FADD, 5]

It's a good idea to use constant definitions to provide meaningful names for the registers. This makes your program easier to read and understand. The same example using constant definitions would be:

TotalCON 2' total amount (uM-FPU register)CountCON 5' current count (uM-FPU register)SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, Total, FADD, Count]

## **Tutorial Examples**

Now that we've introduced some of the basic concepts of sending instructions to the uM-FPU chip, let's go through a tutorial example to get a better understanding of how it all ties together. This example takes a temperature reading from a DS1620 digital thermometer and converts it to Celsius and Fahrenheit.

Most of the data read from devices connected to the ARMmite/ARMexpress will return some type of integer value. In this example, the interface routine for the DS1620 reads a 9-bit value and stores it in a variable on the ARMmite/ARMexpress called rawTemp. The value returned by the DS1620 is the temperature in units of 1/2 degrees Celsius. The following instructions load the rawTemp value to the FPU, convert it to floating point, then divide it by 2 to get degrees in Celsius.

```
      SPIOUT FpuCS, FpuOut, FpuClk,
[SELECTA, DegC, LOADWORD, rawTemp>>8, rawTemp, FSET0, FDIVI, 2]

      Description:

      SELECTA, DegC
      select DegC as register A

      LOADWORD, rawTemp>>8, rawTemp
      load rawTemp to register 0 and convert to floating point

      FSET0
      DegC = register[0] (i.e. the floating point value of rawTemp)

      FDIVI, 2
      divide by the floating point value 2.0
```

To get the degrees in Fahrenheit we use the formula F = C \* 1.8 + 32. Since 1.8 is a constant value, it would normally be loaded once in the initialization section of the program and used later in the main program. The value 1.8 can be loaded using the ATOF (ASCII to float) instruction as follows:

```
      SHIFTOUT FpuOut, FpuClk, MSBFIRST, [SELECTA, F1_8, ATOF, "1.8", 0, FSET0]

      Description:

      SELECTA, F1.8

      ATOF, "1.8", 0

      Ioad the string 1.8 (note: the string must be zero terminated), convert the string to floating point, and store in register 0

      FSET0
      F1_8 = register[0] (i.e. 1.8)
```

We calculate the degrees in Fahrenheit (F = C \* 1.8 + 32) as follows:

SPIOUT FpuCS, FpuOut, FpuClk,	
[SELECTA, DegF, FSET, DegC, FMUL, I	F1_8, FADDI, 32]
Description:	
SELECTA, DegF	select DegF as register A
FSET, DegC	DegF = DegC
FMUL, F1_8	DegF = DegF * 1.8
FADDI, 32	DegF = DegF + 32.0

Note: this tutorial example is intended to show how to perform a familiar calculation, but the FCNV instruction could be used to perform unit conversions in one step. See the *uM-FPU V3.1 Instruction Reference* for a full list of conversions.

There are support routines provided for printing floating point and long integer numbers. Print\_Float prints an unformatted floating point value and displays up to eight digits of precision. Print\_FloatFormat prints a formatted floating point number. We'll use Print\_FloatFormat to display the results. The format variable is used to select the desired format, with the tens digit specifying the total number of characters to display, and the ones digit specifying the number of digits after the decimal point. The DS1620 has a maximum temperature of 125°

Celsius and one decimal point of precision, so we'll use a format of 51. Before calling the print routine the uM-FPU register is selected and the format variable is set. The following example prints the temperature in degrees Celsius and Fahrenheit.

```
SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegC]
format = 51
GOSUB Print_FloatFormat
SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegF]
format = 51
GOSUB Print_FloatFormat
```

Sample code for this tutorial and a wiring diagram for the DS1620 are shown at the end of this document. The file *demo1.bas* is also included with the support software. There is a second file called *demo2.bas* that extends this demo to include minimum and maximum temperature calculations. If you have a DS1620 you can wire up the circuit and try out the demos.

## uM-FPU V3.1 Support Software

Support routines and opcode definitions for uM-FPU V3.1 are contained in include files. To add FPU support to an ARMmite/ARMexpress program, one of the following include files is specified at the start of the program.

```
For an SPI interface, use the following:
#include FPUspi.bas
```

```
For an I<sup>2</sup>C interface, use the following:
#include FPUi2c.bas
```

The include files contain pin definitions for the uM-FPU V3.1 interface, and all of the support routines described below. They also include the file *FPUdefs.bas* which contains symbol definitions for all uM-FPU V3.1 opcodes. A program template file (called *template.bas*) is provided for both SPI and I<sup>2</sup>C. There are also various sample programs provided.

## Fpu\_Reset

To ensure that the ARMmite/ARMexpress and the FPU are synchronized, a reset call must be done at the start of every program. The Fpu\_Reset routine resets the FPU, confirms communications, and returns the sync character (\$5C) in the status variable if the reset is successful. A sample reset call is included in the *template.bas* files.

## Fpu\_Wait

The FPU must have completed all instructions in the instruction buffer, and be ready to return data, before sending an instruction to read data from the FPU. The Fpu\_Wait routine checks the ready status of the FPU and waits until it is ready. The print routines check the ready status, so calling Fpu\_Wait before calling a print routine isn't required, but if your program reads directly from the FPU using the SPIIN or I2CIN commands, a call to Fpu Wait must be made prior to sending the read instruction. An example of reading a byte value is as follows:

```
GOSUB Fpu_wait
SPIOUT FpuCS, FpuOut, FpuClk, [LREADBYTE]
GOSUB Fpu_ReadDelay
SPIIN FpuCS, FpuIn, FpuClk, [dataByte]
```

Description:

- wait for the FPU to be ready
- send the LREADBYTE instruction
- read a byte value and store it in the variable dataByte

The uM-FPU V3.1 chip has a 256 byte instruction buffer. In most cases, data will be read back before 256 bytes have been sent to the FPU. If a long calculation is done that requires more than 256 bytes to be sent to the FPU, an Fpu Wait call should be made at least every 256 bytes to ensure that the instruction buffer doesn't overflow.

## Fpu\_ReadStatus

The current status byte is read from the FPU and returned in the status variable.

## Fpu\_ReadDelay

After a read instruction is sent, and before the first data is read, a setup delay is required to ensure that the FPU is ready to send data. The Fpu\_ReadDelay routine provides the required read setup delay. The delay is only required before the first byte read after a read instruction.

## Fpu\_ReadString

A zero-terminated string is read from the FPU and stored in the string variable str\$.

### Fpu\_WriteFloat

The 32-bit floating point value in the tmp variable is written to the register specified by the reg variable.

value in reg	FPU register
0 to 127	0 to 127
-1	register A
-2	register X

### Fpu\_WriteLong

The 32-bit integer value in the tmp variable is written to the register specified by the reg variable.

value in reg	FPU register
0 to 127	0 to 127
-1	register A
-2	register X

## Fpu\_ReadFloat

The 32-bit floating point value in the register specified by the reg variable is returned in the tmp variable.

value in <b>reg</b>	FPU register
0 to 127	0 to 127
-1	register A
-2	register X

## Fpu\_ReadLong

The 32-bit floating point value in the register specified by the reg variable is returned in the tmp variable.

value in <b>reg</b>	FPU register
0 to 127	0 to 127
-1	register A
-2	register X

## Fpu\_Fcall

The user defined function specified by the value in the tmp variable is called.

## **Print\_Version**

The FPU version string is displayed on the PC screen using the PRINT command.

## Print\_Float

The value in register A is displayed on the PC screen as a floating point value using the PRINT command. Up to eight significant digits will be displayed if required. Very large or very small numbers are displayed in exponential notation. The length of the displayed value is variable and can be from 3 to 12 characters in length. The special cases of NaN (Not a Number), +Infinity, -Infinity, and -0.0 are handled. Examples of the display format are as follows:

1.0	NaN	0.0
1.5e20	Infinity	-0.0
3.1415927	-Infinity	1.0
-52.333334	-3.5e-5	0.01

### Print\_FloatFormat

The value in register A is displayed on the PC screen as a formatted floating point value using the PRINT command. The format variable is used to specify the desired format. The tens digit specifies the total number of characters to

display and the ones digit specifies the number of digits after the decimal point. If the value is too large for the format specified, then asterisks will be displayed. If the number of digits after the decimal points is zero, no decimal point will be displayed. Examples of the display format are as follows:

Value in A register	format	Display format
123.567	61 (6.1)	123.6
123.567	62 (6.2)	123.57
123.567	42 (4.2)	* • * *
0.9999	20 (2.0)	1
0.9999	31 (3.1)	1.0

## Print\_Long

The value in register A is displayed on the PC screen as a signed long integer using the **PRINT** command. The displayed value can range from 1 to 11 characters in length. Examples of the display format are as follows:

1 500000 -3598390

## Print\_LongFormat

The value in register A is displayed on the PC screen as a formatted long integer using the PRINT command. The format variable is used to specify the desired format. A value between 0 and 15 specifies the width of the display field for a signed long integer. The number is displayed right justified. If 100 is added to the format value the value is displayed as an unsigned long integer. If the value is larger than the specified width, asterisks will be displayed. If the width is specified as zero, the length will be variable. Examples of the display format are as follows:

Value in register A	forma	at	Display format
-1	10	(signed 10)	-1
-1	110	(unsigned 10)	4294967295
-1	4	(signed 4)	-1
-1	104	(unsigned 4)	* * * *
0	4	(signed 4)	0
0	0	(unformatted)	0
1000	6	(signed 6)	1000

## Print\_FpuString

The contents of the FPU string buffer are displayed on the PC screen using the PRINT command.

## Loading Data Values to the FPU

Most of the data read from devices connected to the ARMmite/ARMexpress will return some type of integer value. There are several ways to load integer values to the FPU and convert them to 32-bit floating point or long integer values.

### 8-bit Integer to Floating Point

The FSETI, FADDI, FSUBI, FSUBRI, FMULI, FDIVI, FDIVRI, FPOWI, and FCMPI instructions read the byte following the opcode as an 8-bit signed integer, convert the value to floating point, and then perform the operation. It's a convenient way to work with constants or data values that are signed 8-bit values. The following example stores the lower 8 bits of variable dataByte to the Result register on the FPU.

SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, Result, FSETI, dataByte]

The LOADBYTE instruction reads the byte following the opcode as an 8-bit signed integer, converts the value to floating point, and stores the result in register 0.

The LOADUBYTE instruction reads the byte following the opcode as an 8-bit unsigned integer, converts the value to floating point, and stores the result in register 0.

### **16-bit Integer to Floating Point**

The LOADWORD instruction reads the two bytes following the opcode as a 16-bit signed integer (MSB first), converts the value to floating point, and stores the result in register 0. The following example adds the lower 16 bits of variable dataWord to the Result register on the FPU.

SPIOUT FpuCS, FpuOut, FpuClk,
[SELECTA, Result, LOADWORD, dataWord>>8, dataWord, FADD0]

The LOADUWORD instruction reads the two bytes following the opcode as a 16-bit unsigned integer (MSB first), converts the value to floating point, and stores the result in register 0.

### 32-bit Integer to Floating Point

The Fpu\_WriteLong routine is used to write a 32-bit integer value to the FPU, then the FLOAT instruction is used to convert the value to floating point. The following example sets register 10 to 500000.0.

reg = 10
tmp = 500000
gosub Fpu\_WriteLong
SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, 10, FLOAT]

### 32-bit Floating Point to Floating point

The Fpu\_WriteFloat routine is used to write a 32-bit floating point value to the FPU. This is one of the more efficient ways to load floating point constants, but requires knowledge of the internal representation for floating point numbers (see Appendix B). The uM-FPU V3 IDE can be used to easily generate the 32-bit values. This example sets Angle = 20.0 (the floating point representation for 20.0 is \$41A00000).

```
reg = Angle
tmp = $41A00000
gosub Fpu_WriteFloat
```

## **ASCII string to Floating Point**

The ATOF instruction is used to convert zero-terminated strings to floating point values. The instruction reads the bytes following the opcode (until a zero terminator is read), converts the string to floating point, and stores the result

in register 0. The following example sets the register Angle to 1.5885.

SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, Angle, ATOF, "1.5885",0, FSET0]

#### 8-bit Integer to Long Integer

The LSETI, LADDI, LSUBI, LMULI, LDIVI, LCMPI, LUDIVI, LUCMPI, and LTSTI instructions read the byte following the opcode as an 8-bit signed integer, convert the value to long integer, and then perform the operation. It's a convenient way to work with constants or data values that are signed 8-bit values. The following example adds the lower 8 bits of variable dataByte to the Total register on the FPU.

SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, Total, LADDI, dataByte]

The LONGBYTE instruction reads the byte following the opcode as an 8-bit signed integer, converts the value to long integer, and stores the result in register 0.

The LONGUBYTE instruction reads the byte following the opcode as an 8-bit unsigned integer, converts the value to long integer, and stores the result in register 0.

#### 16-bit Integer to Long Integer

The LONGWORD instruction reads the two bytes following the opcode as a 16-bit signed integer (MSB first), converts the value to long integer, and stores the result in register 0. The following example adds the lower 16 bits of variable dataWord to the Total register on the FPU.

```
SPIOUT FpuCS, FpuOut, FpuClk,
[SELECTA, Total, LOADWORD, dataWord>>8, dataWord, LADD0]
```

The LONGUWORD instruction reads the two bytes following the opcode as a 16-bit unsigned integer (MSB first), converts the value to long integer, and stores the result in register 0.

#### 32-bit integer to Long Integer

The Fpu\_WriteLong routine is used to write a 32-bit integer value to the FPU. The following example sets register 10 to 500000.

reg = 10
tmp = 500000
gosub Fpu\_WriteLong

#### ASCII string to Long Integer

The ATOL instruction is used to convert strings to long integer values. The instruction reads the bytes following the opcode (until a zero terminator is read), converts the string to long integer, and stores the result in register 0. The following example sets the register Total to 500000.

SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, Total, ATOL, "500000", 0, FSET0]

The fastest operations occur when the FPU registers are already loaded with values. In time critical portions of code floating point constants should be loaded beforehand to maximize the processing speed in the critical section. With 128 registers available on the FPU, it's often possible to pre-load all of the required constants. In non-critical sections of code, data and constants can be loaded as required.

## **Reading Data Values from the FPU**

The uM-FPU V3.1 chip has a 256 byte instruction buffer which allows data transmission to continue while previous instructions are being executed. Before reading data, you must check to ensure that the previous commands have completed, and the FPU is ready to send data. The Fpu\_Wait routine is used to wait until the FPU is ready, then a read command is sent, and the SPIIN or I2CIN command is used to read data. The Fpu\_ReadDelay routine must be called before the first byte is read after a read instruction.

## 8-bit Integer

The LREADBYTE instruction reads the lower 8 bits from register A. The following example stores the lower 8 bits of register A in variable dataByte.

```
GOSUB Fpu_wait
SPIOUT FpuCS, FpuOut, FpuClk, [LREADBYTE]
GOSUB Fpu_ReadDelay
SPIIN FpuCS, FpuIn, FpuClk, [dataByte]
```

### 16-bit Integer

The LREADWORD instruction reads the lower 16 bits from register A. The following example stores the lower 16 bits of register A in variable dataWord.

```
GOSUB Fpu_wait
SPIOUT FpuCS, FpuOut, FpuClk, LREADWORD]
GOSUB Fpu_ReadDelay
SPIIN FpuCS, FpuIn, FpuClk, [tmp1, tmp2]
dataWord = tmp1<<8 + tmp2</pre>
```

### 32-bit Integer

The Fpu\_ReadLong routine can be used to read 32-bit integer values from the FPU. The following example reads the 32-bit integer value from register A, and returns the value in the tmp variable.

```
GOSUB Fpu_wait
reg = -1
gosub Fpu_ReadLong
```

### Long Integer to ASCII string

The LTOA instruction can be used to convert long integer values to an ASCII string. The Print\_Long and Print\_LongFormat routines use this instruction to read the long integer value from register A and display it on the PC screen.

## **Floating Point**

The Fpu\_ReadFloat routine can be used to read 32-bit floating point values from the FPU. The following example reads the 32-bit floating point value from register A, and returns the value in the tmp variable.

```
GOSUB Fpu_wait
reg = -1
gosub Fpu_ReadFloat
```

## Floating Point to ASCII string

The FTOA instruction can be used to convert floating point values to an ASCII string. The Print\_Float and Print\_FloatFormat routines use this instruction to read the floating point value from register A and display it on the PC screen.

## **Comparing and Testing Floating Point Values**

Floating point values can be zero, positive, negative, infinite, or Not a Number (which occurs if an invalid operation is performed on a floating point value). The status byte is read using the Fpu\_ReadStatus routine. It waits for the FPU to be ready before sending the READSTATUS instruction and reading the status byte. The current status is returned in the status variable. Bit definitions are provided for the status bits in the status variable as follows:

STATUS_ZERO	Zero status bit (0-not zero, 1-zero)
STATUS_SIGN	Sign status bit (0-positive, 1-negative)
STATUS_NAN	Not a Number status bit (0-valid number, 1-NaN)
STATUS_INF	Infinity status bit (0-not infinite, 1-infinite)

The FSTATUS and FSTATUSA instructions are used to set the status byte to the floating point status of the selected register. The following example checks the floating point status of register A:

SPIOUT FpuCS, FpuOut, FpuClk, [FSTATUSA]
GOSUB Fpu\_ReadStatus
IF status & STATUS\_SIGN THEN PRINT "Result is negative"
IF status & STATUS ZERO THEN PRINT "Result is zero"

The FCMP, FCMP0, and FCMP1 instructions are used to compare two floating point values. The status bits are set for the result of register A minus the operand (the selected registers are not modified). For example, to compare register A to the value 10.0:

```
SPIOUT FpuCS, FpuOut, FpuClk, [FCMPI, 10]
GOSUB Fpu_ReadStatus
IF status & STATUS_ZERO THEN
PRINT "Value1 = Value2"
ELSEIF status & STATUS_SIGN THEN
PRINT "Value1 < Value2"
ELSE
PRINT "Value1 > Value2"
ENDIF
```

The FCMP2 instruction compares two floating point registers. The status bits are set for the result of the first register minus the second register (the selected registers are not modified). For example, to compare registers Value1 and Value2:

```
SPIOUT FpuCS, FpuOut, FpuClk, [FCMP2, Value1, Value2]
GOSUB Fpu_ReadStatus
```

## **Comparing and Testing Long Integer Values**

A long integer value can be zero, positive, or negative. The status byte is read using the Fpu\_Status routine. It waits for the FPU to be ready before sending the READSTATUS instruction and reading the status byte. The current status is returned in the status variable. Bit definitions are provided for the status bits in the status variable as follows:

STATUS_ZERO	Zero status bit (0-not zero, 1-zero)
STATUS_SIGN	Sign status bit (0-positive, 1-negative)

The LSTATUS and LSTATUSA instructions are used to set the status byte to the long integer status of the selected register. The following example checks the long integer status of register A:

SPIOUT FpuCS, FpuOut, FpuClk, [LSTATUSA]
GOSUB Fpu\_ReadStatus
IF (status\_Sign = 1) THEN PRINT "Result is negative"
IF (status\_Zero = 1) THEN PRINT "Result is zero"

The LCMP, LCMP0, and LCMPI instructions are used to do a signed comparison of two long integer values. The status bits are set for the result of register A minus the operand (the selected registers are not modified). For example, to compare register A to the value 10:

```
SPIOUT FpuCS, FpuOut, FpuClk, [LCMPI, 10]
GOSUB Fpu_ReadStatus
IF status & STATUS_ZERO THEN
PRINT "Value1 = Value2"
ELSEIF status & STATUS_SIGN THEN
PRINT "Value1 < Value2"
ELSE
PRINT "Value1 > Value2"
ENDIF
```

The LCMP2 instruction does a signed compare of two long integer registers. The status bits are set for the result of the first register minus the second register (the selected registers are not modified). For example, to compare registers Value1 and Value2:

```
SPIOUT FpuCS, FpuOut, FpuClk, LCMP2, Value1, Value2]
GOSUB Fpu ReadStatus
```

The LUCMP, LUCMP0, and LUCMP1 instructions are used to do an unsigned comparison of two long integer values. The status bits are set for the result of register A minus the operand (the selected registers are not modified).

The LUCMP2 instruction does an unsigned compare of two long integer registers. The status bits are set for the result of the first register minus the second register (the selected registers are not modified).

The LTST, LTST0 and LTSTI instructions are used to do a bit-wise compare of two long integer values. The status bits are set for the logical AND of register A and the operand (the selected registers are not modified).


## **Further Information**

The following documents are also available:

uM-FPU V3.1 Datasheet	provides hardware details and specifications
uM-FPU V3.1 Instruction Reference	provides detailed descriptions of each instruction
uM-FPU Application Notes	various application notes and examples

Check the Micromega website at www.micromegacorp.com for up-to-date information.

## **DS1620** Connections for Demo 1

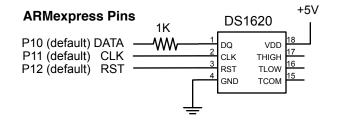

## Sample Code for Tutorial (demo1-spi.bas)

' This program demonstrates how to use the uM-FPU V3.1 floating point coprocessor ' connected to the ARMmite/ARMexpress over an 2-wire SPI interface. It takes ' temperature readings from a DS1620 digital thermometer, converts them to ' floating point and displays them in degrees Celsius and degrees Fahrenheit. '----- uM-FPU V3 definitions -----#include "FPUspi.bas" '----- DS1620 pin definitions ----const DS DATA = 10 ' DS1620 data const DS\_CLK = 11 ' DS1620 clock const DS\_RST ' DS1620 reset/enable = 12 '----- uM-FPU register definitions -----= 8 ' degrees Celsius const DegC = 9 ' degrees Fahrenheit const DegF = 10 ' constant 1.8 const F1\_8 \*\_\_\_\_\_\_ ----- main routine -----Main: print print "Demo 1" print "----" ' reset the uM-FPU V3 chip gosub Fpu\_Reset if status <> SYNC\_CHAR then ' check for synchronization print "uM-FPU not detected" end else gosub Print Version ' display the uM-FPU version number print endif ' initialize DS1620 gosub Init\_DS1620

' load floating point constant 1.8 SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, F1 8, ATOF, "1.8", 0, FSET0] '----- main loop -----do ' get temperature reading from DS1620 gosub Read DS1620 print "Raw Temp: \$"; HEX(rawTemp) ' send rawTemp to uM-FPU ' convert to floating point ' store in register ' divide by 2 to get degrees Celsius SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegC, LOADWORD, rawTemp>>8, rawTemp, FSET0, FDIVI, 2] ' degF = degC \* 1.8 + 32SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegF, FSET, DegC, FMUL, F1 8, FADDI, 32] print "Degrees C: "; ' display degrees Celsius SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegC] format = 51gosub Print FloatFormat print print "Degrees F: "; ' display degrees Fahrenheit SPIOUT FpuCS, FpuOut, FpuClk, [SELECTA, DegF] format = 51gosub Print FloatFormat print WAIT(2000) ' delay 2 seconds print loop '----- Init DS1620 -----Init DS1620: IO(DS RST) = 0' initialize pin states  $IO(DS_CLK) = 1$ WAIT(100) ' configure for CPU control OUT(DS RST) = 1SHIFTOUT DS DATA, DS CLK, 0, [\$0C, \$02] OUT(DS RST) = 0WAIT(100) OUT(DS RST) = 1' start temperature conversions SHIFTOUT DS DATA, DS CLK, 0, [\$EE] OUT(DS RST) = 0WAIT(1000) ' wait for first conversion return '----- Read DS1620 -----Read DS1620: OUT(DS RST) = 1' read temperature value

SHIFTOUT DS\_DATA, DS\_CLK, 0, [\$AA] SHIFTIN DS\_DATA, DS\_CLK, 1, [rawTemp\9] OUT(DS\_RST) = 0 ' extend the sign bit if (rawTemp AND 0x100) then rawTemp = rawTemp OR 0xFFFFFF00 return

# Appendix A uM-FPU V3.1 Instruction Summary

Instruction	Opcod	le Arguments	Returns	Description
NOP	00			No Operation
SELECTA	01	nn		Select register A
SELECTX	02	nn		Select register X
CLR	03	nn		reg[nn] = 0
CLRA	04			reg[A] = 0
CLRX	05			reg[X] = 0, X = X + 1
CLR0	06			reg[nn] = 0
СОРҮ	07	mm,nn		reg[nn] = reg[mm]
СОРҮА	08	nn		reg[nn] = reg[A]
СОРҮХ	09	nn		reg[nn] = reg[X], X = X + 1
LOAD	0A	nn		reg[0] = reg[nn]
LOADA	0B			reg[0] = reg[A]
LOADX	0C			reg[0] = reg[X], X = X + 1
ALOADX	0D			reg[A] = reg[X], X = X + 1
XSAVE	0E	nn		reg[X] = reg[nn], X = X + 1
XSAVEA	0F			reg[X] = reg[A], X = X + 1
COPY0	10	nn		reg[nn] = reg[0]
COPYI	11	bb,nn		reg[nn] = long(unsigned byte bb)
SWAP	12	nn,mm		Swap reg[nn] and reg[mm]
SWAPA	13	nn		Swap reg[A] and reg[nn]
LEFT	14			Left parenthesis
RIGHT	15			Right parenthesis
FWRITE	16	nn,b1,b2,b3,b4		Write 32-bit floating point to reg[nn]
FWRITEA		b1,b2,b3,b4		Write 32-bit floating point to reg[A]
FWRITEX		b1,b2,b3,b4		Write 32-bit floating point to reg[X]
FWRITE0	19	b1,b2,b3,b4		Write 32-bit floating point to reg[0]
FREAD	1A	nn	b1,b2,b3,b4	Read 32-bit floating point from reg[nn]
FREADA	1B		b1,b2,b3,b4	Read 32-bit floating point from reg[A]
FREADX	1C		b1,b2,b3,b4	Read 32-bit floating point from reg[X]
FREAD0	1C		b1,b2,b3,b4	Read 32-bit floating point from reg[0]
ATOF	1E	aa00		Convert ASCII to floating point
FTOA	1F	bb		Convert floating point to ASCII
FSET	20	nn		reg[A] = reg[nn]
FADD	21	nn		reg[A] = reg[A] + reg[nn]
FSUB	22	nn		reg[A] = reg[A] - reg[nn]
FSUBR	23	nn		reg[A] = reg[nn] - reg[A]
FMUL	24	nn		reg[A] = reg[A] * reg[nn]
FDIV	25	nn		reg[A] = reg[A] / reg[nn]
FDIVR	26	nn		reg[A] = reg[nn] / reg[A]
FPOW	27	nn		reg[A] = reg[A] ** reg[nn]
FCMP	28	nn		Compare reg[A], reg[nn],
				Set floating point status
FSET0	29			reg[A] = reg[0]
FADD0	2A			reg[A] = reg[A] + reg[0]

FSUB0	2B		reg[A] = reg[A] - reg[0]
FSUBR0	2C		reg[A] = reg[0] - reg[A]
FMUL0	2D		reg[A] = reg[A] * reg[0]
FDIV0	2E		reg[A] = reg[A] / reg[0]
FDIVR0	2 <u>F</u>		reg[A] = reg[0] / reg[A]
FPOW0	30		reg[A] = reg[A] ** reg[0]
FCMP0	31		Compare reg[A], reg[0],
r CHF 0	51		Set floating point status
FSETI	32	bb	reg[A] = float(bb)
FADDI	33	bb	reg[A] = reg[A] - float(bb)
FSUBI	34	bb	reg[A] = reg[A] - float(bb)
FSUBRI	35	bb	reg[A] = float(bb) - reg[A]
FMULI	36	bb	reg[A] = reg[A] * float(bb)
FDIVI	37	bb	reg[A] = reg[A] / float(bb)
FDIVRI	38	bb	reg[A] = float(bb) / reg[A]
FPOWI	39	bb	reg[A] = reg[A] ** bb
FCMPI	3A	bb	Compare reg[A], float(bb),
			Set floating point status
FSTATUS	3B	nn	Set floating point status for reg[nn]
FSTATUSA	3C		Set floating point status for reg[A]
FCMP2	3D	nn,mm	Compare reg[nn], reg[mm]
			Set floating point status
FNEG	3E		reg[A] = -reg[A]
FABS	3F		reg[A] = I reg[A] I
FINV	40		reg[A] = 1 / reg[A]
SQRT	41		reg[A] = sqrt(reg[A])
ROOT	42	nn	reg[A] = root(reg[A], reg[nn])
LOG	43		reg[A] = log(reg[A])
LOG10	44		reg[A] = log10(reg[A])
EXP	45		reg[A] = exp(reg[A])
EXP10	46		reg[A] = exp10(reg[A])
SIN	47		reg[A] = sin(reg[A])
COS	48		reg[A] = cos(reg[A])
TAN	49		reg[A] = tan(reg[A])
ASIN	4A		reg[A] = asin(reg[A])
ACOS	4B		reg[A] = acos(reg[A])
ATAN	4C		reg[A] = atan(reg[A])
ATAN2	4D	nn	reg[A] = atan2(reg[A], reg[nn])
DEGREES	4E		reg[A] = degrees(reg[A])
RADIANS	4F		reg[A] = radians(reg[A])
FMOD	50	nn	reg[A] = reg[A] MOD reg[nn]
FLOOR	51		reg[A] = floor(reg[A])
CEIL	52		reg[A] = ceil(reg[A])
ROUND	53		reg[A] = round(reg[A])
FMIN	54	nn	reg[A] = min(reg[A], reg[nn])
FMAX	55	nn	reg[A] = max(reg[A], reg[nn])
FCNV	56	bb	reg[A] = conversion(bb, reg[A])
FMAC	57	nn,mm	reg[A] = reg[A] + (reg[nn] * reg[mm])
FMSC	58	nn,mm	reg[A] = reg[A] - (reg[nn] * reg[mm])

LOADBYTE	59	bb		reg[0] = float(signed bb)
LOADUBYTE	5A	bb		reg[0] = float(unsigned byte)
LOADWORD	5B	b1,b2		reg[0] = float(signed b1*256 + b2)
LOADUWORD	5C	b1,b2		reg[0] = float(unsigned b1*256 + b2)
LOADE	5D			reg[0] = 2.7182818
LOADPI	5E			reg[0] = 3.1415927
LOADCON	5F	bb		reg[0] = float constant(bb)
FLOAT	60			reg[A] = float(reg[A])
FIX	61			reg[A] = fix(reg[A])
FIXR	62			reg[A] = fix(round(reg[A]))
FRAC	63			reg[A] = fraction(reg[A])
FSPLIT	64			reg[A] = integer(reg[A]),
				reg[0] = fraction(reg[A])
SELECTMA	65	nn,b1,b2		Select matrix A
SELECTMB	66	nn,b1,b2		Select matrix B
SELECTMC	67	nn,b1,b2		Select matrix C
LOADMA	68	b1,b2		reg[0] = Matrix A[bb, bb]
LOADMB	69	b1,b2		reg[0] = Matrix B[bb, bb]
LOADMC	6A	b1,b2		reg[0] = Matrix C[bb, bb]
SAVEMA	6B	b1,b2		Matrix A[bb, bb] = reg[A]
SAVEMB	6C	b1,b2		Matrix B[bb, bb] = reg[A]
SAVEMC	6D	b1,b2		Matrix C[bb, bb] = reg[A]
МОР	6E	bb		Matrix/Vector operation
FFT	6F	bb		Fast Fourier Transform
WRBLK	70	tc t1tn		Write multiple 32-bit values
RDBLK	71	tc	t1tn	Read multiple 32-bit values
LOADIND	7A	nn		reg[0] = reg[reg[nn]]
SAVEIND	7B	nn		reg[reg[nn]] = reg[A]
INDA	7C	nn		Select register A using value in reg[nn]
INDX	7D	nn		Select register X using value in reg[nn]
FCALL	7E	bb		Call user-defined function in Flash
EECALL	7F	bb		Call user-defined function in EEPROM
RET	80			Return from user-defined function
BRA	81	bb		Unconditional branch
BRA	82	cc, bb		Conditional branch
JMP	83	b1, b2		Unconditional jump
JMP	84	cc, b1, b2		Conditional jump
TABLE	85	tc,t0tn		Table lookup
FTABLE	86	cc,tc,t0tn		Floating point reverse table lookup
LTABLE	87	cc,tc,t0tn		Long integer reverse table lookup
POLY	88	tc,t0tn		reg[A] = nth order polynomial
GOTO	89	nn		Computed GOTO
LWRITE	90	nn,b1,b2,b3,b4		Write 32-bit long integer to reg[nn]
LWRITEA	91	b1,b2,b3,b4		Write 32-bit long integer to reg[A]
LWRITEX	92	b1,b2,b3,b4	1	Write 32-bit long integer to reg[X],
				X = X + 1
LWRITE0	93	b1,b2,b3,b4		Write 32-bit long integer to reg[0]
LREAD	94	nn	b1,b2,b3,b4	Read 32-bit long integer from reg[nn]
LREADA	95		b1,b2,b3,b4	Read 32-bit long value from reg[A]

LREADX	96		b1,b2,b3,b4	Read 32-bit long integer from reg[X], X = X + 1
LREAD0	97		b1,b2,b3,b4	Read 32-bit long integer from reg[0]
LREADBYTE	98		bb	Read lower 8 bits of reg[A]
LREADWORD	99		b1,b2	Read lower 16 bits reg[A]
ATOL	9A	aa00		Convert ASCII to long integer
LTOA	9B	bb		Convert long integer to ASCII
LSET	9C	nn		reg[A] = reg[nn]
LADD	9D	nn		reg[A] = reg[A] + reg[nn]
LSUB	9E	nn		reg[A] = reg[A] - reg[nn]
LMUL	9F	nn		reg[A] = reg[A] * reg[nn]
LDIV	A0	nn		reg[A] = reg[A] / reg[nn]
				reg[0] = remainder
LCMP	A1	nn		Signed compare reg[A] and reg[nn],
				Set long integer status
LUDIV	A2	nn		reg[A] = reg[A] / reg[nn]
				reg[0] = remainder
LUCMP	A3	nn		Unsigned compare reg[A] and reg[nn],
				Set long integer status
LTST	A4	nn		Test reg[A] AND reg[nn],
				Set long integer status
LSET0	A5			reg[A] = reg[0]
LADD0	A6			reg[A] = reg[A] + reg[0]
LSUB0	A7			reg[A] = reg[A] - reg[0]
LMULO	A8			reg[A] = reg[A] * reg[0]
LDIV0	A9			reg[A] = reg[A] / reg[0]
				reg[0] = remainder
LCMP0	AA			Signed compare reg[A] and reg[0],
				set long integer status
LUDIVO	AB			reg[A] = reg[A] / reg[0]
				reg[0] = remainder
LUCMP0	AC			Unsigned compare reg[A] and reg[0],
				Set long integer status
LTST0	AD			Test reg[A] AND reg[0],
				Set long integer status
LSETI	AE	bb		reg[A] = long(bb)
LADDI	AF	bb		reg[A] = reg[A] + long(bb)
LSUBI	в0	bb		reg[A] = reg[A] - long(bb)
LMULI	B1	bb		reg[A] = reg[A] * long(bb)
LDIVI	В2	bb		reg[A] = reg[A] / long(bb)
				reg[0] = remainder
LCMPI	В3	bb		Signed compare reg[A] - long(bb),
				Set long integer status
LUDIVI	В4	bb		reg[A] = reg[A] / unsigned long(bb)
				reg[0] = remainder
LUCMPI	В5	bb		Unsigned compare reg[A] and long(bb),
				Set long integer status
LTSTI	В6	bb		Test reg[A] AND long(bb),
				Set long integer status
LSTATUS	В7	nn		Set long integer status for reg[nn]

LSTATUSA	B8		Set long integer status for reg[A]
LCMP2	В9	nn,mm	Signed long compare reg[nn], reg[mm] Set long integer status
LUCMP2	BA	nn,mm	Unsigned long compare reg[nn], reg[mm] Set long integer status
LNEG	BB		reg[A] = -reg[A]
LABS	BC		reg[A] = I reg[A] I
LINC	BD	nn	reg[nn] = reg[nn] + 1, set status
LDEC	BE	nn	reg[nn] = reg[nn] - 1, set status
LNOT	BF		reg[A] = NOT reg[A]
LAND	C0	nn	reg[A] = reg[A] AND reg[nn]
LOR	C1	nn	reg[A] = reg[A] OR reg[nn]
LXOR	C2	nn	reg[A] = reg[A] XOR reg[nn]
LSHIFT	C3	nn	reg[A] = reg[A] shift reg[nn]
LMIN	C4	nn	reg[A] = min(reg[A], reg[nn])
LMAX	C5	nn	reg[A] = max(reg[A], reg[nn])
LONGBYTE	C6	bb	reg[0] = long(signed byte bb)
LONGUBYTE	C7	bb	reg[0] = long(unsigned byte bb)
LONGWORD	C8	b1,b2	reg[0] = long(signed b1*256 + b2)
LONGUWORD	C9	b1,b2	reg[0] = long(unsigned b1*256 + b2)
SETSTATUS	CD	SS	Set status byte
SEROUT	CE	bb	Serial output
		bb bd	
		bb aa…00	
SERIN	CF	bb	Serial input
SETOUT	D0	bb	Set OUT1 and OUT2 output pins
ADCMODE	D1	bb	Set A/D trigger mode
ADCTRIG	D2		A/D manual trigger
ADCSCALE	D3	ch	ADCscale[ch] = B
ADCLONG	D4	ch	reg[0] = ADCvalue[ch]
ADCLOAD	D5	ch	reg[0] = float(ADCvalue[ch]) * ADCscale[ch]
ADCWAIT	D6		wait for next A/D sample
TIMESET	D7		time = reg[0]
TIMELONG	D8		reg[0] = time (long integer)
TICKLONG	D9		reg[0] = ticks (long integer)
EESAVE	DA	mm,nn	EEPROM[nn] = reg[mm]
EESAVEA	DB	nn	EEPROM[nn] = reg[A]
EELOAD	DC	mm, nn	reg[mm] = EEPROM[nn]
EELOADA	DD	nn	reg[A] = EEPROM[nn]
EEWRITE	DE	nn,bc,b1bn	Store bytes in EEPROM
EXTSET	E0		external input count = reg[0]
EXTLONG	E1		reg[0] = external input counter
EXTWAIT	E2		wait for next external input
STRSET	E3	aa00	Copy string to string buffer
STRSEL	E4	bb, bb	Set selection point
STRINS	E5	aa00	Insert string at selection point
STRCMP	E6	aa00	Compare string with string buffer
STRFIND	E7	aa00	Find string and set selection point

STRFCHR	E8	aa00		Set field separators
STRFIELD	E9	bb		Find field and set selection point
STRTOF	EA			Convert selected string to floating point
STRTOL	EB			Convert selected string to long integer
READSEL	EC		aa00	Read selected string
STRBYTE	ED	bb		Insert byte at selection point
STRINC	EE			Increment string selection point
STRDEC	EF			Decrement string selection point
SYNC	FO		5C	Get synchronization byte
READSTATUS	F1		ss	Read status byte
READSTR	F2		aa00	Read string from string buffer
VERSION	F3			Copy version string to string buffer
IEEEMODE	F4			Set IEEE mode (default)
PICMODE	F5			Set PIC mode
CHECKSUM	F6			Calculate checksum for uM-FPU code
BREAK	F7			Debug breakpoint
TRACEOFF	F8			Turn debug trace off
TRACEON	F9			Turn debug trace on
TRACESTR	FA	aa00		Send string to debug trace buffer
TRACEREG	FB	nn		Send register value to trace buffer
READVAR	FC	nn		Read internal register value
RESET	FF			Reset (9 consecutive FF bytes cause a
				reset, otherwise it is a NOP)

Notes:	Opcode Arguments Returns nn mm fn bb b1,b2 b1,b2,b3,b4 b1bn ss bd cc ee ch bc tc	Instruction opcode in hexadecimal Additional data required by instruction Data returned by instruction register number (0-127) register number (0-127) function number (0-63) 8-bit value 16-bit value (b1 is MSB) 32-bit value (b1 is MSB) 32-bit value (b1 is MSB) string of 8-bit bytes Status byte baud rate and debug mode Condition code EEPROM address slot (0-255) A/D channel number Byte count 32-bit value count
	t1tn aa00	String of 32-bit values Zero terminated ASCII string
	aa	Zero terminateu ASON String

In the FPUdefs.bas file, LEFT, RIGHT, READ, SIN, COS, GOTO, SEROUT, SERIN have been renamed to include an F\_ prefix (e.g. F\_SIN, F\_COS, etc.) to avoid conflicts with reserved symbol names.

## Appendix B Floating Point Numbers

Floating point numbers can store both very large and very small values by "floating" the window of precision to fit the scale of the number. Fixed point numbers can't handle very large or very small numbers and are prone to loss of precision when numbers are divided. The representation of floating point numbers used by the uM-FPU V3.1 is defined by the 32-bit IEEE 754 standard. The number of significant digits for a 32-bit floating point number is slightly more than 7 digits, and the range of values that can be handled is approximately  $\pm 10^{38.53}$ .

#### 32-bit IEEE 754 Floating Point Representation

IEEE 754 floating point numbers have three components: a sign, exponent, the mantissa. The sign indicates whether the number is positive or negative. The exponent has an implied base of two and a bias value. The mantissa represents the fractional part of the number.

The 32-bit IEEE 754 representation is as follows:

Bit 31 30		30 23	22 0
	S	Exponent	Mantissa

#### Sign Bit (bit 31)

The sign bit is 0 for a positive number and 1 for a negative number.

#### Exponent (bits 30-23)

The exponent field is an 8-bit field that stores the value of the exponent with a bias of 127 that allows it to represent both positive and negative exponents. For example, if the exponent field is 128, it represents an exponent of one (128 - 127 = 1). An exponent field of all zeroes is used for denormalized numbers and an exponent field of all ones is used for the special numbers +infinity, -infinity and Not-a-Number (described below).

#### Mantissa (bits 30-23)

The mantissa is a 23-bit field that stores the precision bits of the number. For normalized numbers there is an implied leading bit equal to one.

#### **Special Values**

#### Zero

A zero value is represented by an exponent of zero and a mantissa of zero. Note that +0 and -0 are distinct values although they compare as equal.

### Denormalized

If an exponent is all zeros, but the mantissa is non-zero the value is a denormalized number. Denormalized numbers are used to represent very small numbers and provide for an extended range and a graceful transition towards zero on underflows. Note: The uM-FPU does not support operations using denormalized numbers.

### Infinity

The values +infinity and -infinity are denoted with an exponent of all ones and a fraction of all zeroes. The sign bit distinguishes between +infinity and -infinity. This allows operations to continue past an overflow. A nonzero number divided by zero will result in an infinity value.

### Not A Number (NaN)

The value NaN is used to represent a value that does not represent a real number. An operation such as zero divided by zero will result in a value of NaN. The NaN value will flow through any mathematical operation. Note: The uM-FPU initializes all of its registers to NaN at reset, therefore any operation that uses a register that has not been previously set with a value will produce a result of NaN.

Some examples of 32-bit IEEE 754 floating point values displayed as 32-bit hexadecimal constants are as follows:

\$00000000	'	0.0
\$3DCCCCCD	'	0.1
\$3F000000	'	0.5
\$3F400000	'	0.75
\$3F7FF972	'	0.9999
\$3F800000	'	1.0
\$4000000	'	2.0
\$402DF854	'	2.7182818 (e)
\$40490FDB	'	3.1415927 (pi)
\$41200000	'	10.0
\$42C80000	'	100.0
\$447A0000	'	1000.0
\$449A522B	'	1234.5678
\$49742400	'	100000.0
\$80000000	'	-0.0
\$BF800000	'	-1.0
\$C1200000	'	-10.0
\$C2C80000	'	-100.0
\$7FC00000	'	NaN (Not-a-Number)
\$7F800000	'	+inf
\$FF800000	'	-inf